

# EX-92xx-MTCP

## Digital I/O Series

### (Dual LAN Port)

Data Acquisition Modules  
User's Manual

Web site: [www.topsecc.com.tw](http://www.topsecc.com.tw)

Trademark:

The names used in this manual for identification only maybe registered trademarks of their respective companies

#### Table of Contents

|           |                        |   |
|-----------|------------------------|---|
| Chapter 1 | Product Overview ..... | 9 |
|-----------|------------------------|---|

|                  |  |           |
|------------------|--|-----------|
| <b>1.1</b>       | <b>Introduction</b> .....  | 9         |
| <b>1.2</b>       | <b>Daisy Chain connection with auto-bypass protection</b> .....                      | 9         |
| <b>1.3</b>       | <b>Mixed I/O in One Module to fit all applications</b> .....                         | 9         |
| <b>1.4</b>       | <b>Industrial standard Modbus/TCP protocol supported for open connectivity</b> ..... | 9         |
| <b>1.5</b>       | <b>Features</b> .....  | 10        |
| 1.5.1            | DIO Synchronization (Mirror DI to Local /Remote Device DO) .....                     | 10        |
| 1.5.2            | DO Auto-Off Time Mode .....  | 10        |
| 1.5.3            | High/Low delay output mode .....   | 11        |
| 1.5.4            | Power-on & Safe valu .....   | 11        |
| <b>1.6</b>       | <b>Common technical specification of EX-92xx-MTCP Series</b> .....                   | 12        |
| <b>1.7</b>       | <b>Software Support</b> .....  | 12        |
| <b>1.8</b>       | <b>Package Information</b> .....   | 12        |
| <b>1.9</b>       | <b>Product Warranty (1 years)</b> .....  | 12        |
| <b>1.10</b>      | <b>Dimensions</b> .....  | 13        |
| <b>1.11</b>      | <b>Summary of DIO modules</b> .....  | 14        |
| <b>Chapter 2</b> | <b>Block diagram of DIO modules</b> .....  | <b>15</b> |
| <b>2.1</b>       | <b>EX-9250-MTCP</b> .....  | 15        |
| 2.1.1            | Block diagram .....  | 15        |
| 2.1.2            | Wire connection .....  | 15        |
| <b>2.2</b>       | <b>EX-9251-MTCP</b> .....  | 16        |
| 2.2.1            | Block diagram .....  | 16        |
| 2.2.2            | Wire connection .....  | 16        |
| <b>2.3</b>       | <b>EX-9251A-MTCP</b> .....   | 17        |
| 2.3.1            | Block diagram .....  | 17        |
| 2.3.2            | Wire connection .....  | 17        |
| <b>2.4</b>       | <b>EX-9254-MTCP</b> .....  | 18        |
| 2.4.1            | Block diagram .....  | 18        |
| 2.4.2            | Wire connection .....  | 18        |
| <b>2.5</b>       | <b>EX-9255-MTCP</b> .....  | 19        |
| 2.5.1            | Block diagram .....  | 19        |
| 2.5.2            | Wire connection .....  | 19        |
| <b>2.6</b>       | <b>EX-9260-MTCP</b> .....  | 20        |
| 2.6.1            | Block diagram .....  | 20        |
| 2.6.2            | Wire connection .....  | 20        |
| <b>2.7</b>       | <b>EX-9264-MTCP</b> .....  | 21        |
| 2.7.1            | Block diagram .....  | 21        |
| 2.7.2            | Wire connection .....  | 21        |
| <b>Chapter 3</b> | <b>System Requirements</b> .....   | <b>22</b> |
| <b>3.1</b>       | <b>Wiring and Connections</b> .....  | 22        |
| <b>3.2</b>       | <b>Power supply wiring</b> .....   | 22        |

|                  |  |           |
|------------------|--|-----------|
| 3.3              | Status LED indicator for EX-92xx-MTCP Series I/O modules .....                           | 23        |
| 3.4              | Ethernet LED indicator of EX-92xx-MTCP Series .....                                      | 23        |
| 3.5              | I/O modules wiring .....   | 23        |
| 3.6              | Rear side installation.....  | 24        |
| 3.7              | Daisy Chain Limitations .....  | 24        |
| 3.8              | Initializing a Module .....  | 25        |
| 3.8.1            | <b>Factory default settings:</b> .....   | 25        |
| 3.8.2            | <b>INIT* State settings:</b> .....   | 25        |
| <b>Chapter 4</b> | <b>Specification and wiring.....</b>   | <b>26</b> |
| 4.1              | <b>EX-9250-MTCP</b> 10 DI and 6 DO channels Digital I/O Module .....                     | 26        |
| 4.1.1            | Specification.....   | 26        |
| 4.1.2            | Application Wiring .....   | 26        |
| 4.2              | <b>EX-9251-MTCP</b> 10 DI , 4 DO and 2 Counter channels DIO Module.....                  | 27        |
| 4.2.1            | Specification.....   | 27        |
| 4.2.2            | Application Wiring .....   | 27        |
| 4.3              | <b>EX-9251A-MTCP</b> 10 DI , 4 DO and 2 Counter channels DIO Module .....                | 28        |
| 4.3.1            | Specification.....   | 28        |
| 4.3.2            | Application Wiring .....   | 28        |
| 4.4              | <b>EX-9254-MTCP</b> 5 differential DI and 8 DO channels Digital I/O Module .....         | 29        |
| 4.4.1            | Specification.....   | 29        |
| 4.4.2            | Application Wiring .....   | 29        |
| 4.5              | <b>EX-9255-MTCP</b> 8 DI and 8 DO channels Digital I/O Module .....                      | 30        |
| 4.5.1            | Specification.....   | 30        |
| 4.5.2            | Application Wiring .....   | 30        |
| 4.6              | <b>EX-9260-MTCP</b> 7-channel Digital Input and 4 RELAY output Module .....              | 31        |
| 4.6.1            | Specification.....   | 31        |
| 4.6.2            | Application Wiring .....   | 31        |
| 4.7              | <b>EX-9264-MTCP</b> 4-channel differential Digital Input and 4 RELAY output Module ..... | 32        |
| 4.7.1            | Specification.....   | 32        |
| 4.7.2            | Application Wiring .....   | 32        |
| <b>Chapter 5</b> | <b>EX-92xx-MTCP Series Utility Guide .....</b>   | <b>33</b> |
| 5.1              | System Requirement .....   | 33        |
| 5.2              | Install Utility Software on Host PC .....  | 33        |
| 5.3              | EXPERTDAQ Ethernet I/O Utility Overview .....  | 34        |
| 5.4              | Main Menu .....  | 34        |
| 5.4.1            | Function Menu.....   | 34        |
| 5.4.2            | Tool Bar .....   | 35        |
| 5.4.3            | List Sort .....  | 35        |
| 5.5              | Network Setting.....   | 36        |
| 5.5.1            | Module IP.....   | 36        |

|   |   |           |
|---|---|-----------|
| 5.5.2   | <b>TCP/IP port:</b> .....   | 37        |
| 5.5.3   | Stream/Alarm(for DI latch Mode) IP .....                                  | 37        |
| 5.6   | Add Remote Stations .....   | 38        |
| 5.7   | Security Setting .....  | 38        |
| 5.8   | Terminal Emulations .....   | 39        |
| 5.9   | Data /Event Stream.....   | 40        |
| 5.10  | Digital I/O Module Settings .....   | 42        |
| 5.10.1  | Digital Test Tab .....  | 42        |
| 5.10.2  | Digital Input Settings Tab .....  | 43        |
| 5.10.3  | Digital Output Settings Tab .....   | 45        |
| <b>Chapter 6 What is TCPDAQ ActiveX Control ? .....</b> |   | <b>50</b> |
| 6.1   | Installing the TCPDAQ ActiveX Controls .....                              | 50        |
| 6.2   | Building TCPDAQ ActiveX Control with Various Tools .....                  | 50        |
| 6.3   | Building TCPDAQ Applications with Visual Basic.....                       | 51        |
| 6.4   | Building TCPDAQ Applications with Delphi .....                            | 53        |
| 6.5   | Building TCPDAQ Applications with Visual C++.....                         | 55        |
| 6.6   | Building TCPDAQ Applications with Borland C++ Builder .....               | 58        |
| 6.7   | Properties of TCPDAQ ActiveX Control.....                                 | 60        |
| 6.8   | Methods of TCPDAQ ActiveX Control .....                                   | 61        |
| 6.9   | Events of TCPDAQ ActiveX Control .....                                    | 61        |
| 6.10  | Building TCPDAQ ActiveX Applications with Various Development Tools ..... | 61        |
| <b>Chapter 7 TCPDAQ DLL API.....</b>                    |   | <b>62</b> |
| 7.1   | Common Functions.....   | 62        |
| 7.2   | Stream/Event Functions.....   | 62        |
| 7.3   | Digital I/O Functions.....  | 64        |
| 7.4   | MODBUS/TCP Functions .....  | 64        |
| 7.5   | Function Description .....  | 65        |
| 7.5.1   | <b>TCP_Open</b> .....   | 65        |
| 7.5.2   | <b>TCP_Close</b> .....  | 65        |
| 7.5.3   | <b>TCP_Connect</b> .....  | 65        |
| 7.5.4   | <b>TCP_Disconnect</b> .....   | 66        |
| 7.5.5   | <b>TCP_ModuleDisconnect</b> .....   | 66        |
| 7.5.6   | <b>TCP_SendData</b> .....   | 66        |
| 7.5.7   | <b>TCP_RecvData</b> .....   | 67        |
| 7.5.8   | <b>TCP_SendReceiveASCcmd</b> .....  | 67        |
| 7.5.9   | <b>UDP_Connect</b> .....  | 68        |
| 7.5.10  | <b>UDP_Disconnect</b> .....   | 68        |
| 7.5.11  | <b>UDP_ModuleDisconnect</b> .....   | 68        |
| 7.5.12  | <b>UDP_SendData</b> .....   | 69        |
| 7.5.13  | <b>UDP_RecvData</b> .....   | 69        |

|                  |  |           |
|------------------|--|-----------|
| 7.5.14           | UDP_SendReceiveASCcmd .....  | 69        |
| 7.5.15           | TCP_GetModulePinfo .....   | 70        |
| 7.5.16           | TCP_GetModuleID .....  | 70        |
| 7.5.17           | TCP_GetIPFromID .....  | 71        |
| 7.5.18           | TCP_ScanOnLineModules .....  | 71        |
| 7.5.19           | TCP_GetDLLVersion .....  | 71        |
| 7.5.20           | TCP_GetModuleNo .....  | 72        |
| 7.5.21           | TCP_GetLastError .....   | 72        |
| 7.5.22           | TCP_PingIP .....   | 72        |
| 7.5.23           | TCP_StartStream .....  | 73        |
| 7.5.24           | TCP_StopStream .....   | 73        |
| 7.5.25           | TCP_ReadStreamData .....   | 73        |
| 7.5.26           | TCP_StartEvent .....   | 74        |
| 7.5.27           | TCP_StopEvent .....  | 74        |
| 7.5.28           | TCP_ReadEventData .....  | 74        |
| 7.5.29           | TCP_ReadDIOMode .....  | 75        |
| 7.5.30           | TCP_ReadDIO .....  | 75        |
| 7.5.31           | TCP_ReadDISignalWidth .....  | 75        |
| 7.5.32           | TCP_WriteDISignalWidth .....   | 76        |
| 7.5.33           | TCP_ReadDICounter .....  | 76        |
| 7.5.34           | TCP_ClearDICounter .....   | 77        |
| 7.5.35           | TCP_StartDICounter .....   | 77        |
| 7.5.36           | TCP_StopDICounter .....  | 77        |
| 7.5.37           | TCP_ClearDILatch .....   | 78        |
| 7.5.38           | TCP_ReadDILatch .....  | 78        |
| 7.5.39           | TCP_WriteDO .....  | 78        |
| 7.5.40           | TCP_WriteDOPulseCount .....  | 79        |
| 7.5.41           | TCP_WriteDODelayWidth .....  | 79        |
| 7.5.42           | TCP_ReadDODelayWidth .....   | 80        |
| 7.5.43           | TCP_MODBUS_ReadCoil .....  | 80        |
| 7.5.44           | TCP_MODBUS_WriteCoil .....   | 81        |
| 7.5.45           | TCP_MODBUS_ReadReg .....   | 81        |
| 7.5.46           | TCP_MODBUS_WriteReg .....  | 81        |
| <b>Chapter 8</b> | <b>ASCII Commands for EX-92xx-MTCP Series Modules .....</b>                  | <b>83</b> |
| 8.1              | About ASCII Commands .....   | 83        |
| 8.2              | Syntax of ASCII .....  | 83        |
| 8.3              | ASCII Command Set .....  | 84        |
| 8.3.1            | General commands .....   | 84        |
| 8.3.2            | Digital I/O commands .....   | 84        |
| 8.3.3            | DIO Synchronization Mode(Mirror Local DI to Local /Remote DO) Commands ..... | 85        |

|        |  |     |
|--------|--|-----|
| 8.3.4  | DO Pulse Output mode & Digital output Auto-Off Time mode commands .....              | 85  |
| 8.3.5  | Digital Input Counter commands .....   | 86  |
| 8.3.6  | WatchDog commands .....  | 86  |
| 8.4    | <b>ASCII Command Description</b> .....   | 87  |
| 8.4.1  | <b>\$AAM</b> Read Module Name .....  | 87  |
| 8.4.2  | <b>\$AAF</b> Read Firmware Version .....   | 88  |
| 8.4.3  | <b>\$AAID</b> Read module ID number .....  | 89  |
| 8.4.4  | <b>\$AAIDFF</b> Set module ID number .....   | 90  |
| 8.4.5  | <b>\$AAMD(data)</b> Set module description .....                                     | 91  |
| 8.4.6  | <b>\$AAMD</b> Read module description .....  | 92  |
| 8.4.7  | <b>\$AAS1</b> Reloads the module factory default.....                                | 93  |
| 8.4.8  | <b>~AAI</b> Set the Soft INIT* .....   | 94  |
| 8.4.9  | <b>~AATNN</b> Sets the soft INIT* timeout value.....                                 | 95  |
| 8.4.10 | <b>\$AARS</b> Reboot the module to the power-on state.....                           | 96  |
| 8.4.11 | <b>\$AA5</b> Reads the Reset Status of a module .....                                | 97  |
| 8.4.12 | <b>~AADNNNNN</b> Set timeout to search DHCP .....                                    | 98  |
| 8.4.13 | <b>~AAD</b> Read timeout to search DHCP .....  | 99  |
| 8.4.14 | <b>^AAMAC</b> Read MAC address .....   | 100 |
| 8.4.15 | <b>\$AACONNDD</b> Set a single DO channel mode .....                                 | 101 |
| 8.4.16 | <b>\$AACONN</b> Read a single DO channel mode .....                                  | 102 |
| 8.4.17 | <b>\$AACINDD</b> Set a single DI channel mode.....                                   | 103 |
| 8.4.18 | <b>\$AACINN</b> Read a single DI channel mode.....                                   | 104 |
| 8.4.19 | <b>~AADSMN</b> Set DI/O active state .....   | 105 |
| 8.4.20 | <b>~AADS</b> Read DI/O active state .....  | 106 |
| 8.4.21 | <b>\$AA6</b> Read DI /DO Channel Status .....  | 107 |
| 8.4.22 | <b>@AA</b> Read DIO status .....   | 108 |
| 8.4.23 | <b>#AA0DD</b> Write DO channels .....  | 109 |
| 8.4.24 | <b>#AA1NDD</b> Set a single Digital Output Channel.....                              | 110 |
| 8.4.25 | <b>@AA6DDDD</b> Write DO channels (0~15) .....                                       | 111 |
| 8.4.26 | <b>@AA6ONSS</b> Set a single digital output channel .....                            | 112 |
| 8.4.27 | <b>@AA6ON</b> Read a single digital output channel .....                             | 113 |
| 8.4.28 | <b>@AA6</b> Read the status of all DIO channels.....                                 | 114 |
| 8.4.29 | <b>@AA6IN</b> Read a single digital input channel .....                              | 115 |
| 8.4.30 | <b>\$AA7</b> Read DI latch status.....   | 116 |
| 8.4.31 | <b>\$AACLSNN</b> Clear DI latch status for channel N.....                            | 117 |
| 8.4.32 | <b>\$AAYM5CRPSTTTT (data)</b> Set <i>DI match DO latch Mode</i> of DIO Sync.....     | 118 |
| 8.4.33 | <b>\$AAYM6CRPSTTTT (data)</b> Set <i>DI mismatch DO latch Mode</i> of DIO Sync. .... | 119 |
| 8.4.34 | <b>\$AAYMNDDDDDDD</b> Set DIO Sync. remote device IP for DO channel N .....          | 120 |
| 8.4.35 | <b>\$AAYM4C</b> Read DIO Synchronization Mode parameters .....                       | 121 |
| 8.4.36 | <b>\$AAYMRCS</b> Start(Run)/Stop <i>DIO Synchronization</i> operation .....          | 122 |

|  |  |   |            |
|--|--|---|------------|
| 8.4.37   | <b>\$AAAYMC</b>                                    | Read DIO Synchronization Mode parameters .....                    | 123        |
| 8.4.38   | <b>\$AAAYMS</b>                                    | Read current DO activated status during DIO Sync. operation ..... | 124        |
| 8.4.39   | <b>\$AAAYMPN</b>                                   | Read remote device IP for DO channel N(for DIO sync. mode) .....  | 125        |
| 8.4.40   | <b>#AA2NPPPPPPP</b>                                | Write DO pulse counts.....  | 126        |
| 8.4.41   | <b>\$AA9PNLLLLHHH</b>                              | Set DO pluse Low/High width of channel N .....                    | 127        |
| 8.4.42   | <b>\$AA9NN</b>                                     | Read DO pulse and DO High/Low delay width for channel N .....     | 128        |
| 8.4.43   | <b>\$AA9DNNHHHLLLL</b>                             | Set DO low/high delay time.....                                   | 129        |
| 8.4.44   | <b>\$AA0MCC</b>                                    | Read DI counter filter (debounce time).....                       | 131        |
| 8.4.45   | <b>\$AA0MCC(data1)(data2)</b>                      | Set DI counter debounce time.....                                 | 132        |
| 8.4.46   | <b>\$AAECN</b>                                     | Start/Stop single DI counter .....                                | 133        |
| 8.4.47   | <b>\$AACN</b>                                      | Clear single DI counter value and overflow flag.....              | 134        |
| 8.4.48   | <b>#AAN</b>  | Read single DI counter value .....                                | 135        |
| 8.4.49   | <b>#AARN</b>                                       | Read single DI counter value and overflow flag.....               | 136        |
| 8.4.50   | <b>~**</b>   | Send "Host OK" to all modules via broadcast .....                 | 137        |
| 8.4.51   | <b>~AA**</b>                                       | Send Host OK to the specific module .....                         | 138        |
| 8.4.52   | <b>~AA0</b>  | Read watchdog timeout status .....                                | 139        |
| 8.4.53   | <b>~AA1</b>  | Reset host watchdog timeout status .....                          | 140        |
| 8.4.54   | <b>~AA2</b>  | Read host communication Timeout value .....                       | 141        |
| 8.4.55   | <b>~AA3EVVV</b>                                    | Set Host watchdog timeout interval .....                          | 142        |
| 8.4.56   | <b>~AA4V</b>                                       | Read Power-on or Safe DO value of module .....                    | 144        |
| 8.4.57   | <b>~AA5V</b>                                       | Sets the current DO value as power-on or safe value .....         | 145        |
| 8.4.58   | <b>~AA3PPP</b>                                     | Set module Power-on delay time .....                              | 146        |
| 8.4.59   | <b>~AA3P</b>                                       | Read module Power-on delay time.....                              | 147        |
| <b>Chapter 9 MODBUS/TCP Command structure .....</b>    |  |   | <b>148</b> |
| 9.1  | Command Structure .....                            |   | 148        |
| 9.3  | All Digital Input/Output Modules.....              |   | 149        |
| 9.4  | MODBUS/TCP address Mapping & Function Number ..... |   | 149        |
| 9.5  | Table of command sets.....                         |   | 150        |
| 9.6  | Example of Modbus/TCP commands .....               |   | 153        |
| <b>Chapter 10 TCPDAQ Data Structure .....</b>          |  |   | <b>159</b> |
| 10.1   | Typedef struct _AlarmInfo.....                     |   | 159        |
| 10.2   | Typedef struct _StreamData .....                   |   | 159        |
| 10.3   | Typedef struct ModuleInfo .....                    |   | 159        |
| 10.4   | Typedef struct ModuleData.....                     |   | 159        |
| <b>Chapter 11 EX-92xx-MTCP Series Web Server .....</b> |  |   | <b>161</b> |
| 11.1   | What is TCPDAQ Web Server? .....                   |   | 161        |
| 11.2   | Home Page .....                                    |   | 161        |
| 11.3   | Module monitoring page .....                       |   | 162        |
| 11.3.1   | EX-9050A monitoring page .....                     |   | 162        |
| 11.3.2   | EX-9251-MTCP monitoring page.....                  |   | 163        |

|                   |   |            |
|-------------------|---|------------|
| 11.3.3            | EX-9252 monitoring page .....   | 164        |
| <b>Chapter 12</b> | <b>Appendix .....</b>   | <b>165</b> |
| 12.1              | <b>INIT* switch operation .....</b>                                   | <b>165</b> |
| 12.2              | <b>Module Status .....</b>  | <b>166</b> |
| 12.3              | <b>Dual Watchdog Operation .....</b>                                  | <b>166</b> |
| 12.4              | <b>Reset Status .....</b>   | <b>166</b> |
| <b>12.5</b>       | <b>Input counter and Input latch .....</b>                            | <b>166</b> |
| 12.6              | <b>Power-on &amp; Safe value .....</b>                                | <b>166</b> |
| <b>12.7</b>       | <b>DIO Synchronization (Mirror Local DI to Local/Remote DO) .....</b> | <b>167</b> |
| 12.7.1            | The <i>DIO Synchronization</i> is divided into two modes: .....       | 167        |
| 12.7.2            | DIO Synchronization –DI match DO latch mode .....                     | 167        |
| 12.7.3            | DIO Synchronization –DI mismatch DO latch mode .....                  | 169        |
| <b>12.8</b>       | <b>High/Low delay output mode .....</b>                               | <b>170</b> |
| 12.8.1            | Low to High Delay output .....  | 170        |
| 12.8.2            | High to Low Delay output .....  | 170        |
| <b>12.9</b>       | <b>DO Auto-Off Time Mode .....</b>                                    | <b>171</b> |


## Chapter 1 Product Overview

### 1.1 Introduction

EX-92xx-MTCP Series is based on the popular Ethernet networking standards used today in most business environments. Users can easily add EX-92xx-MTCP Series I/O modules to existing Ethernet networks or use EX-92xx-MTCP Series modules in new Ethernet-enabled Manufacturing networks. EX-92xx-MTCP Series module features a 10/100 Mbps Ethernet switching chip to allow **Daisy Chain** connections in an Ethernet network, making it easier to deploy, and supports industrial popular Modbus/TCP protocol over TCP/IP for data connection. EX-92xx-MTCP Series also supports UDP protocol over Ethernet networking. With UDP/IP, EX-92xx-MTCP Series I/O modules can actively send I/O data stream to 8 Ethernet nodes. Through Ethernet networking HMI/SCADA system and controller can access or gather real-time data from EX-92xx-MTCP Series Ethernet enabled DA&C modules. And, these real-time data can be integrated with business system to create valuable, competitive business information immediately.

### 1.2 Daisy Chain connection with auto-bypass protection

EX-92xx-MTCP Series module has built in two-port Ethernet switches to allow daisy chain connections in an Ethernet network, making it easier to deploy, and helping improve scalability. The two Ethernet ports are fully compliant with IEEE 802.3u 10/100Mbps through standard RJ-45 connectors. Although daisy chain topology brings attractive benefits for users, it still comes with the risk that once any device in the daisy-chain network suffers power outage, it will cause the disconnection of all devices downstream, to prevent this critical issue from happening, TOPSCCC especially refined the hardware design of EX-92xx-MTCP Series so that it (Auto-bypass protection) can rapidly recover the network connection in about 1 seconds, Therefore, the damage will be greatly minimized.

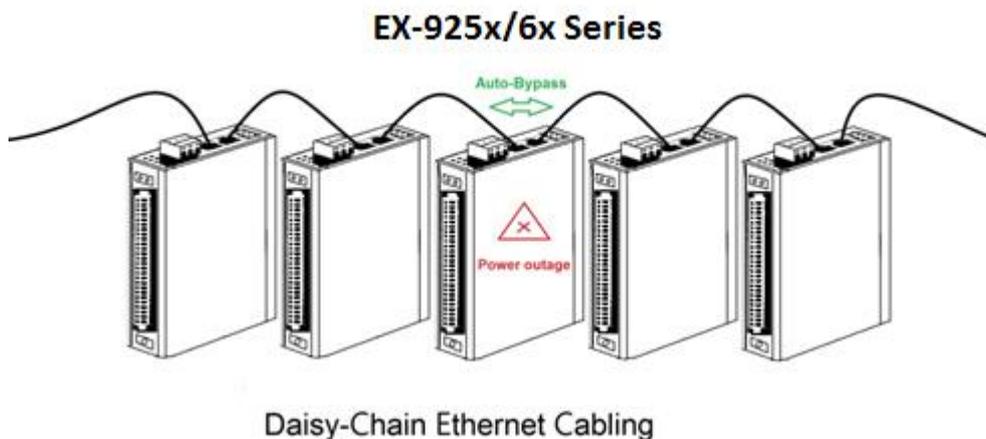

**Note:** Auto-Bypass Protection feature guarantees the Ethernet communication. It will automatically active to continue the network traffic when the EX-92xx-MTCP Series modules loses its power after 2 second.

### 1.3 Mixed I/O in One Module to fit all applications

EX-92xx-MTCP Series mixed I/O module design concept provides the most cost-effective I/O usage for application system. The most common used I/O type for single function unit are collected in ONE module. This design concept not only save I/O usage and spare modules cost but also speed up I/O relative operations. For small DA&C system or standalone control unit in a middle or large scale, EX-92xx-MTCP Series mixed I/O design can easily fit application needs by one or two modules only. With additional embedded control modules, EX-92xx-MTCP Series can easily create a localized, less complex, and more distributed I/O architecture.



### 1.4 Industrial standard Modbus/TCP protocol supported for open connectivity

EX-92xx-MTCP Series modules support the popular industrial standard, Modbus/TCP protocol, to connect with Ethernet Controller or HMI/SCADA software built with Modbus/TCP driver. TOPSCCC also provides OPC server for Modbus/TCP to integrate EX-92xx-MTCP Series I/O real-time data value with OPC client enabled software. Users don't need to take care of special driver's development.

1.5 Features

1.5.1 DIO Synchronization (Mirror DI to Local /Remote Device DO)


EX-92xx-MTCP Series Series modules also provide a *DIO Synchronization* function. A Local/Remote device single digital output channel can be activated (1 or 0) dependent on the digital input channels value. When the specific DI channels value changed from "match" to "mismatch" (or "mismatch" to "match")DI mask pattern, the Local/Remote device corresponding DO will be set to active state(1 or 0) dependent on the DO setting (For more detailed information refer to "Appendix").

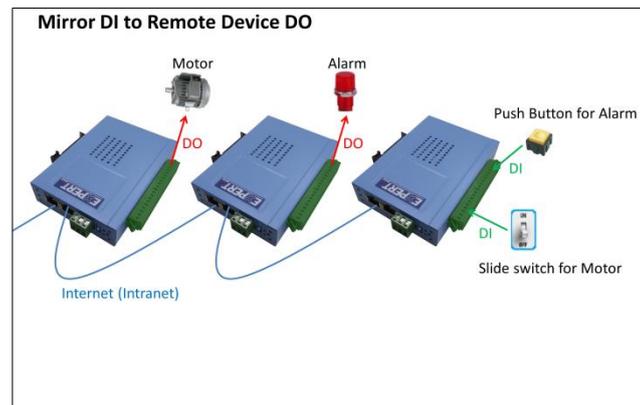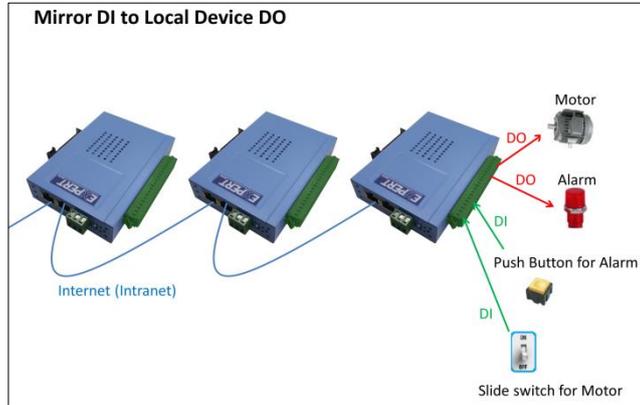


1.5.2 DO Auto-Off Time Mode

This function is used to force the specific DO channel to work as a monostable operation. After a certain period of time, the DO returns to the stable state until another triggering command is applied. (For more detailed information refer to "Appendix").

◆ Low to High DO(n) pulse output

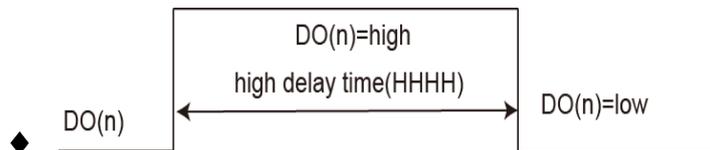


◆ High to Low DO(n) pulse output

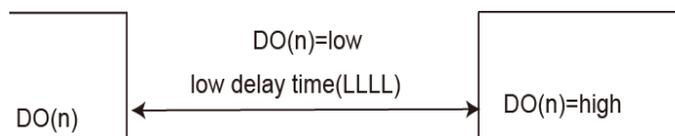


### 1.5.3 High/Low delay output mode

EX-92xx-MTCP Series Series modules supports high-to-low and low-to-high delay output function. (For more detailed information refer to “Appendix”).

- ◆ Low to High Delay output:

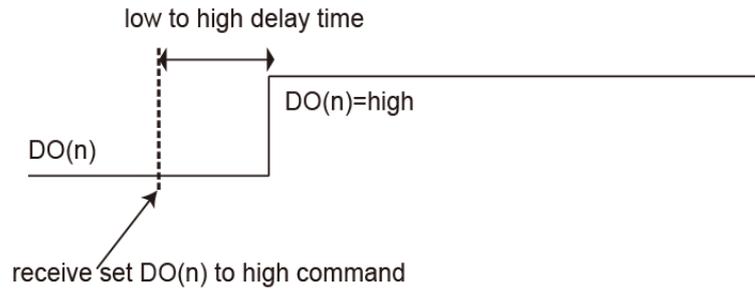

- ◆ High to Low Delay output:

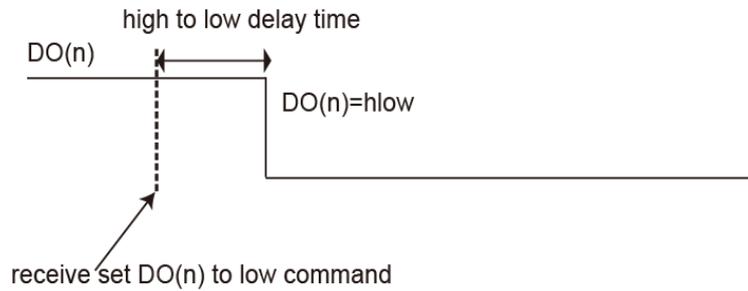

### 1.5.4 Power-on & Safe valu

- ◆ Power-on value:

Power-on value is used to set the module default output value when the module is turned-on or watch dog timeout reset. This function is especially importance in some application where the specific initial output states are required User can set power on value by sending Set power-on/safe value command

- ◆ Safe value:

Safe value are used to set the module outputs into the specific values when Host watchdog timeout If The host watchdog timer is enabled by sending Set host watchdog timeout value, the host should send Host OK command periodically within Timeout value to refresh the timer, otherwise the module will be forced to safety state.

## 1.6 Common technical specification of EX-92xx-MTCP Series

- ◆ Ethernet: 10 BASE-T IEEE 802.3 100 BASE-TX IEEE 802.3u
- ◆ Wiring: UTP, category 5 or greater
- ◆ Bus Connection: Two-port RJ45 modular jack(Auto-bypass protection)
- ◆ Comm. Protocol: Modbus/TCP on TCP/IP and UDP
- ◆ Data Transfer Rate: Up to 100 Mbps
- ◆ Unregulated 10 to 30VDC
- ◆ Protection: Over-voltage and power reversal
- ◆ Status Indicator: Power, CPU, Communication (Link, Collide, 10/100 Mbps, Tx, Rx)
- ◆ Mounting: DIN rail or wall
- ◆ Wiring: I/O cable 14 to #28 AWG wire for terminal block.
- ◆ Operating Temperature: - 10 to 70° C (14 to 158° F)
- ◆ Storage Temperature: - 25 to 85° C (-13 to 185° F)
- ◆ Humidity: 5 to 95%, non-condensing
- ◆ Atmosphere: No corrosive gases

### NOTE:

Equipment will operate below 30% humidity. However, static electricity problems occur much more frequently at lower humidity levels. Make sure you take adequate precautions when you touch the equipment. Consider using ground straps, anti-static floor coverings, etc. if you use the equipment in low humidity environments.

## 1.7 Software Support

Based on the Modbus/TCP standard, the EX-92xx-MTCP Series firmware is a built-in Modbus/TCP server. Therefore, TOPSCCC provides the necessary DLL drivers, and Windows Utility for users for client data for the EX-92xx-MTCP Series. Users can configure this DA&C system via Windows Utility; integrate with HMI software package via Modbus/TCP driver or Modbus/TCP OPC Server. Even more, you can use the DLL driver and ActiveX to develop your own applications.

## 1.8 Package Information

The package of EX-92xx-MTCP Series Series module will contain the following items. Please check and feel free to contact us if any part missing or damaged after purchasing EX-92xx-MTCP Series product.

- ◆ EX-92xx-MTCP Series module (assembled with DIN Rail)
- ◆ Product CD
- ◆ Panel mounting bracket
- ◆ Start-up manual

## 1.9 Product Warranty (1 years)




TOPSCCC warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for one year from the date of purchase. This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by TOPSCCC, or which have been subject to misuse, abuse, accident or improper installation. TOPSCCC assumes no liability under the terms of this warranty as a consequence of such events.

Because of TOPSCCC's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an TOPSCCC product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

## 1.10 Dimensions

The following diagrams show the dimensions of the EX-92xx-MTCP Series I/O module in millimeters.

### ◆ EX-92xx-MTCP Series

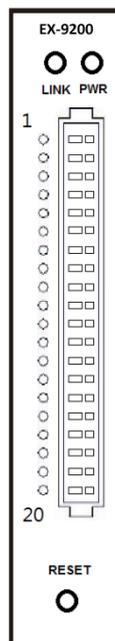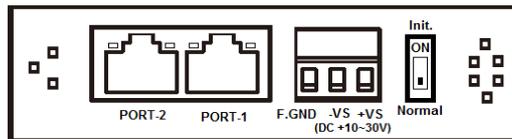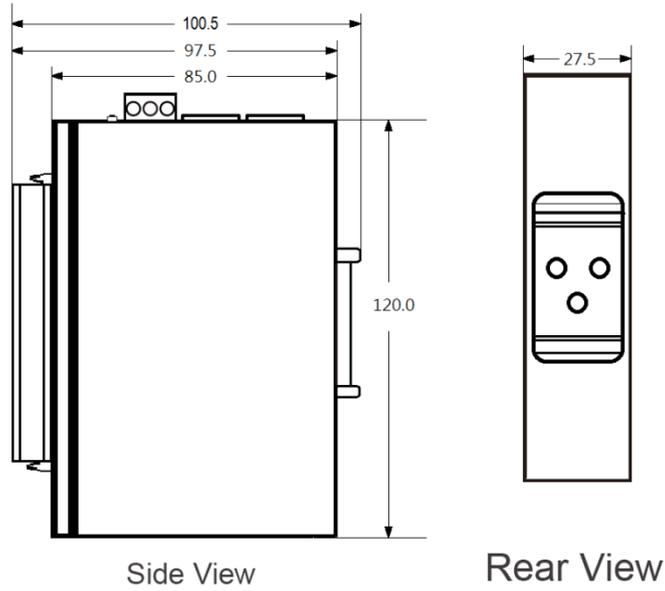

## 1.11 Summary of DIO modules


The EX-92xx-MTCP Series provides a Series of digital input or output modules to sense the digital signal or to control the remote devices.

| DC Input and DC Output modules |        |   |        |   |     |
|--------------------------------|--------|---|--------|---|-----|
| Module                         | DI ch. | Input type  | DO ch. | Output type   | Pg. |
| 9250-mtcp                      | 10     | Isolated single ended with Dry/Wet Contact(common source or ground) | 6      | Isolation with Open collector (NPN)   | 16  |
| 9251-mtcp                      | 10     | Isolated single ended with Dry Contact (common ground)              | 4      | Isolation with Open collector (NPN)   | 17  |
|                                | 2      | Iso. with differential counter input                                |        |   |     |
| 9251A-mtcp                     | 10     | Isolated single ended with Wet Contact(common source)               | 4      | Isolation with Open collector (NPN)   | 17  |
|                                | 2      | Iso. with differential counter input                                |        |   |     |
| 9254-mtcp                      | 5      | differential digital input, (common source or ground)               | 8      | Isolated with open drain (P-MOSFET), 750mA/channel.                                     | 19  |
| 9255-mtcp                      | 8      | Isolated single ended with Dry/Wet Contact(common source or ground) | 8      | Isolated with open drain (P-MOSFET), 750mA/channel.                                     | 20  |
| 9260-mtcp                      | 7      | Isolated single ended with Dry Contact (common source).             | 4      | Relay output, <a href="#">0.6A@125VAC/2A@30VDC</a> , RL0,RL1,RL2 Form C and RL3 Form A. | 21  |
| 9264-mtcp                      | 4      | differential digital input, (common source or ground)               | 4      | Relay output, <a href="#">0.6A@125VAC/2A@30VDC</a> , RL0,RL1,RL2 Form C and RL3 Form A. | 22  |


**Chapter 2 Block diagram of DIO modules**

**2.1 EX-9250-MTCP**

2.1.1 Block diagram

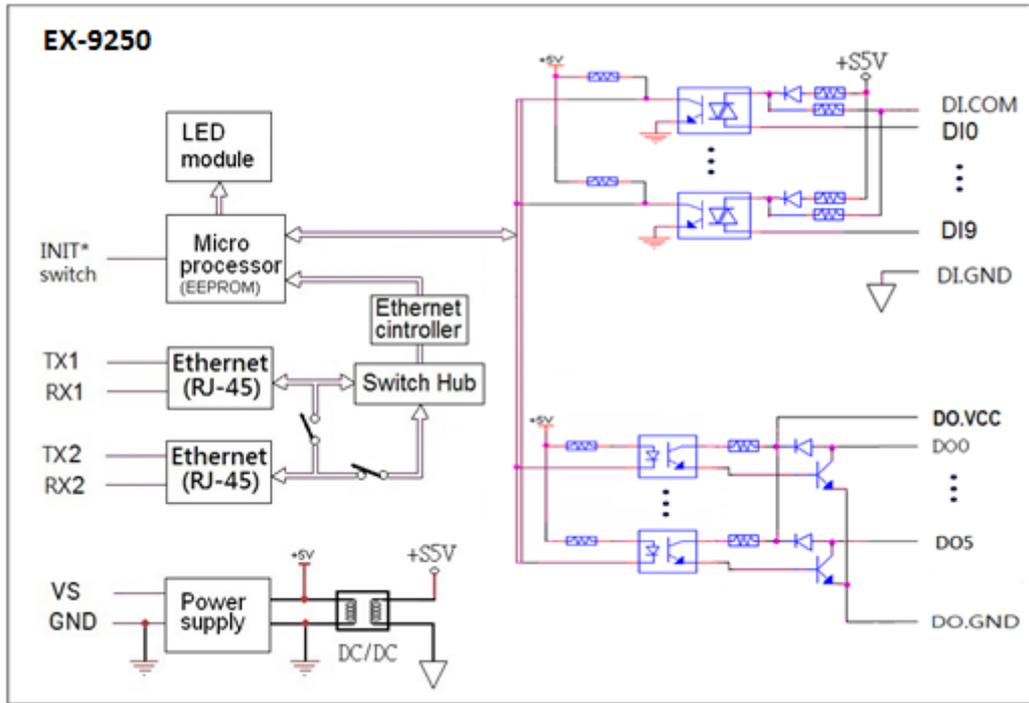


2.1.2 Wire connection

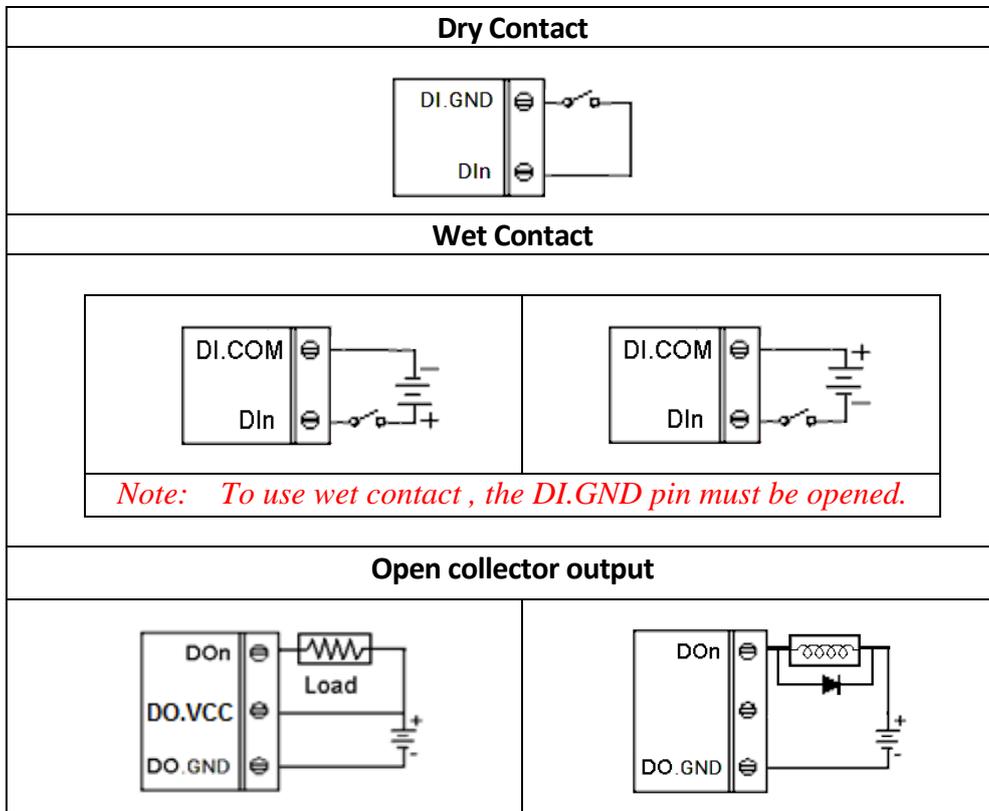


2.2 EX-9251-MTCP

2.2.1 Block diagram

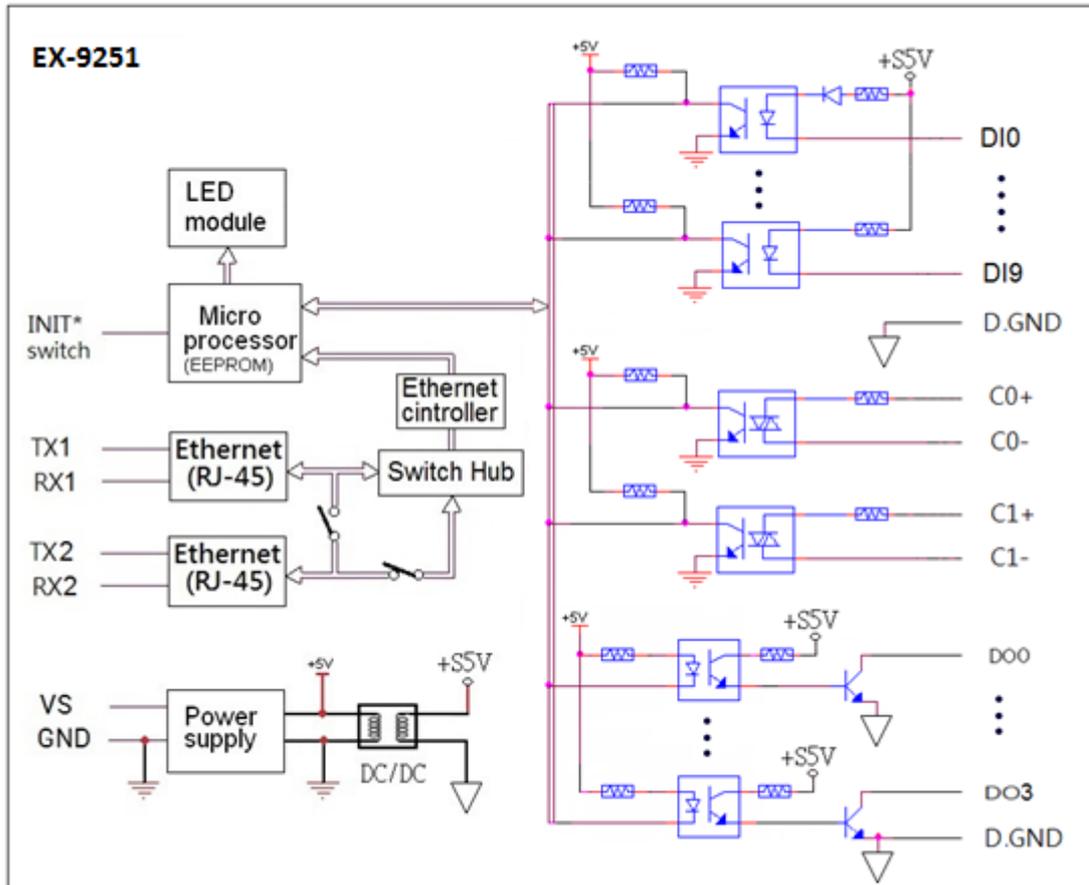


2.2.2 Wire connection

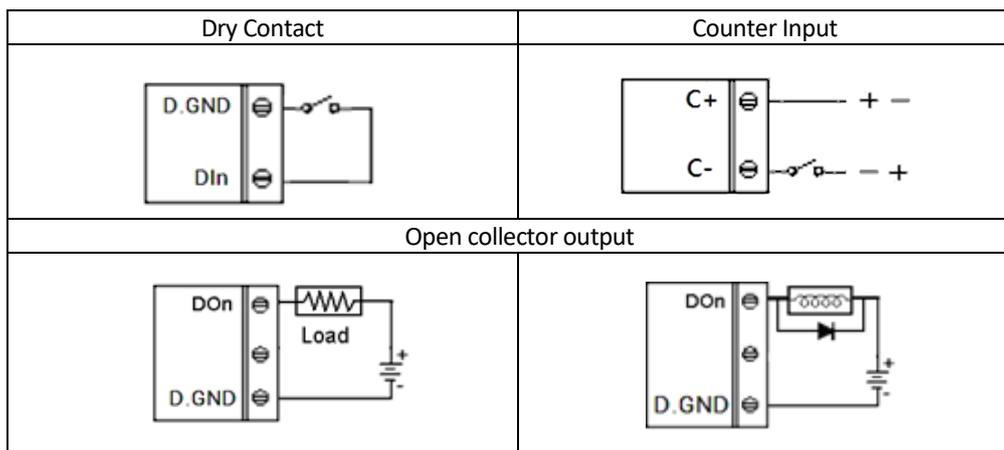


2.3 EX-9251A-MTCP

2.3.1 Block diagram

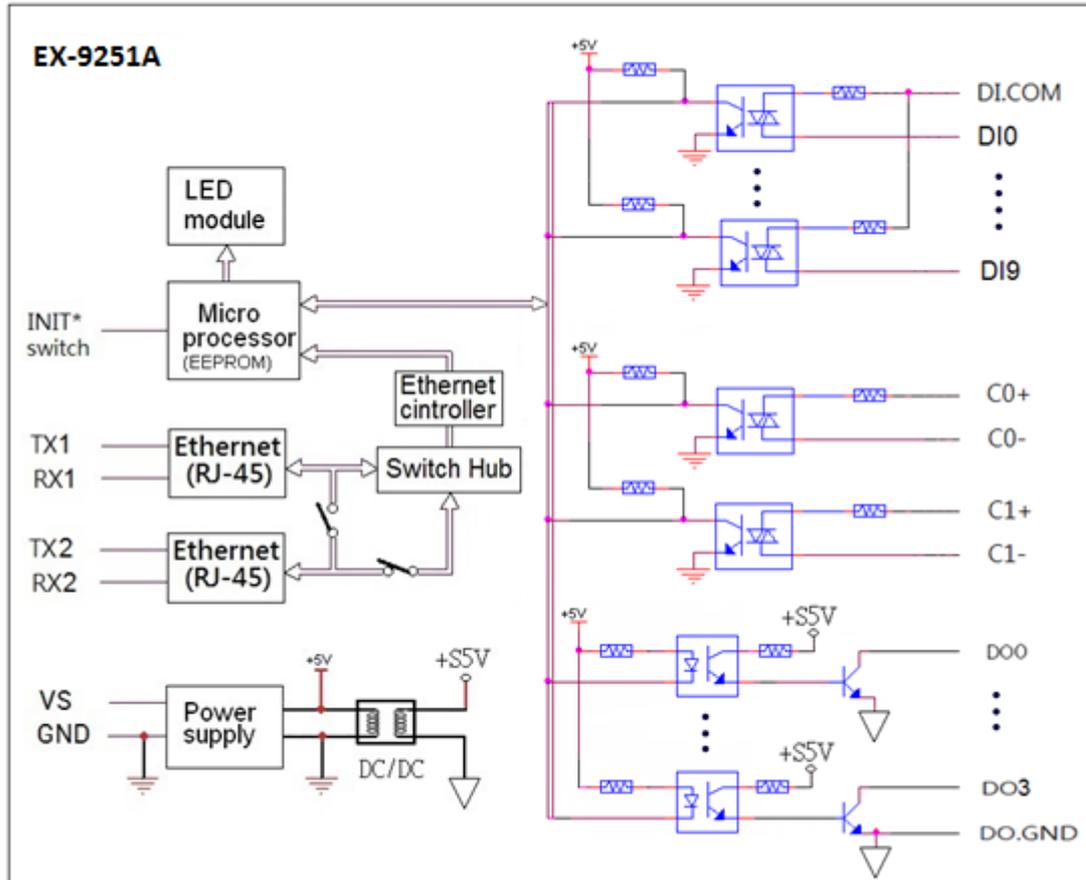


2.3.2 Wire connection

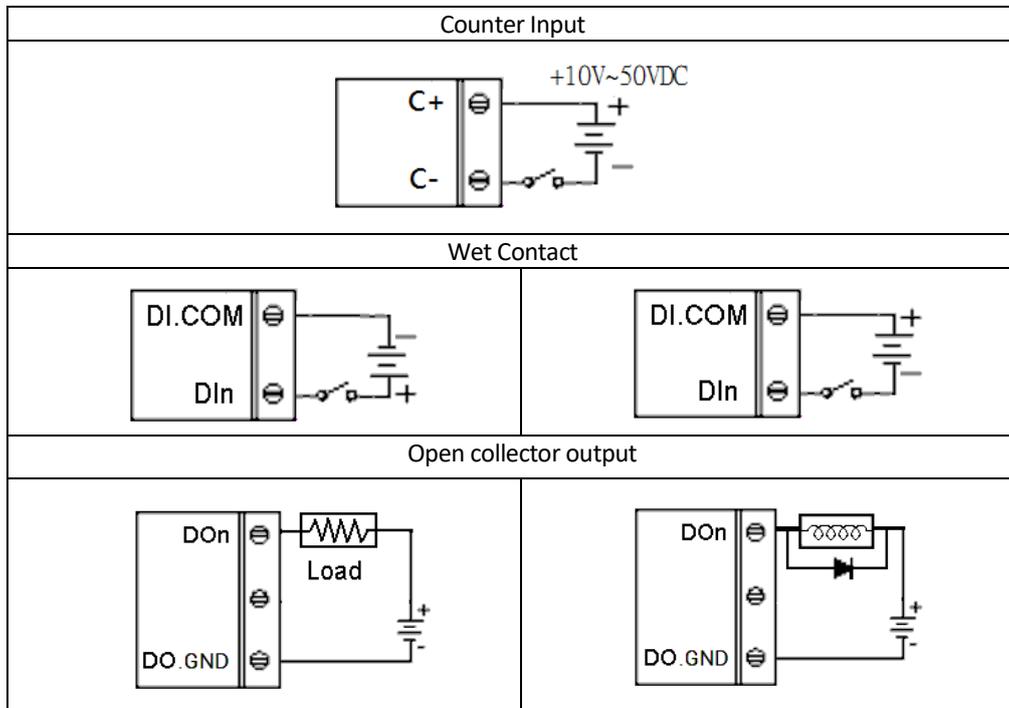


2.4 EX-9254-MTCP

2.4.1 Block diagram

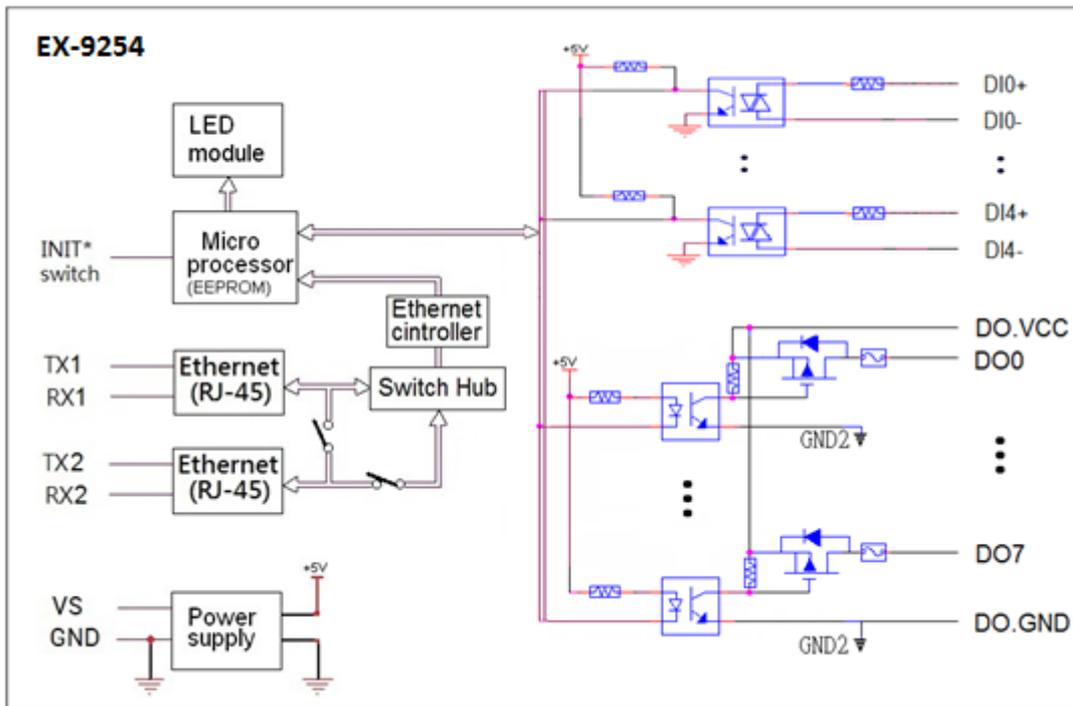


2.4.2 Wire connection

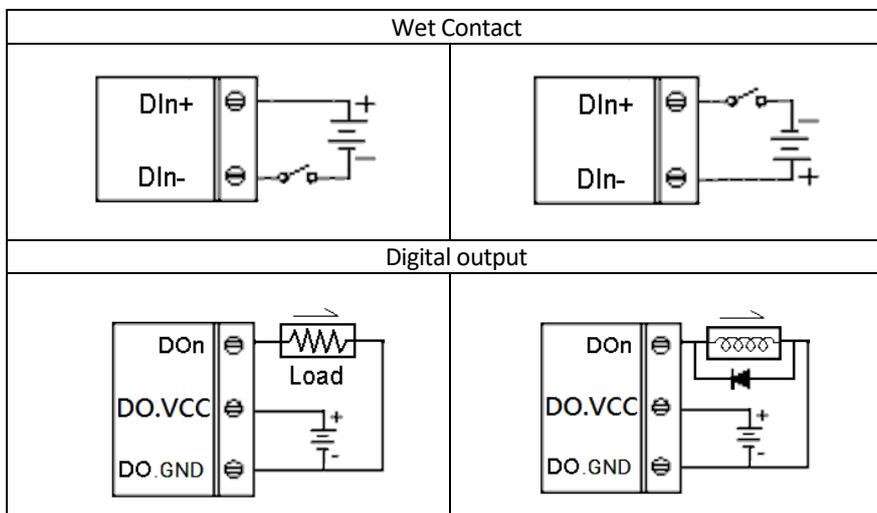


2.5 EX-9255-MTCP

2.5.1 Block diagram

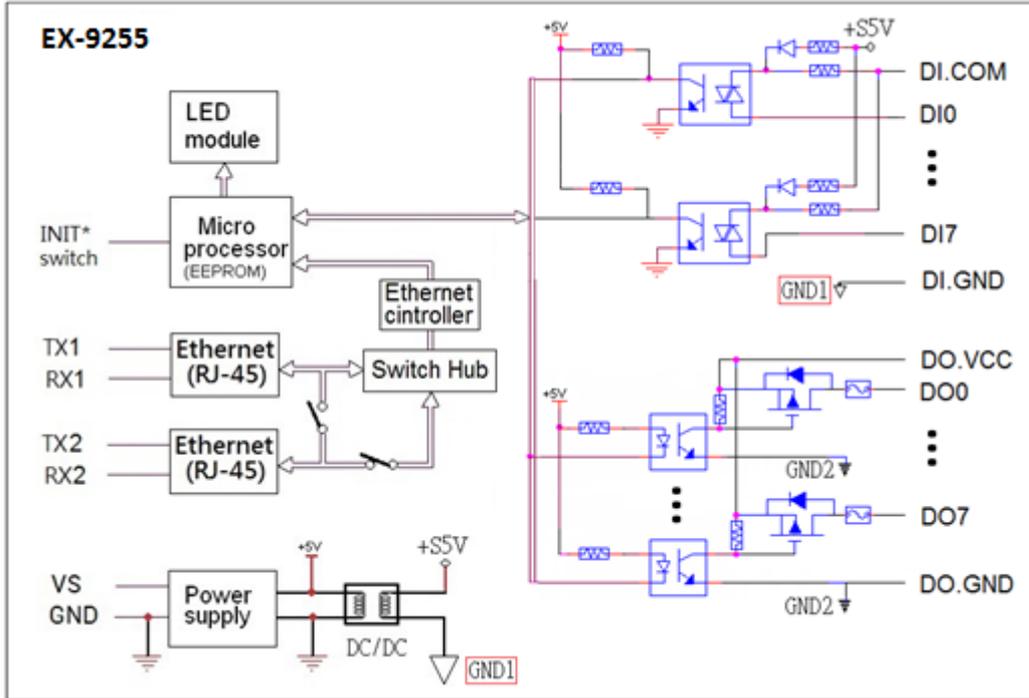


2.5.2 Wire connection

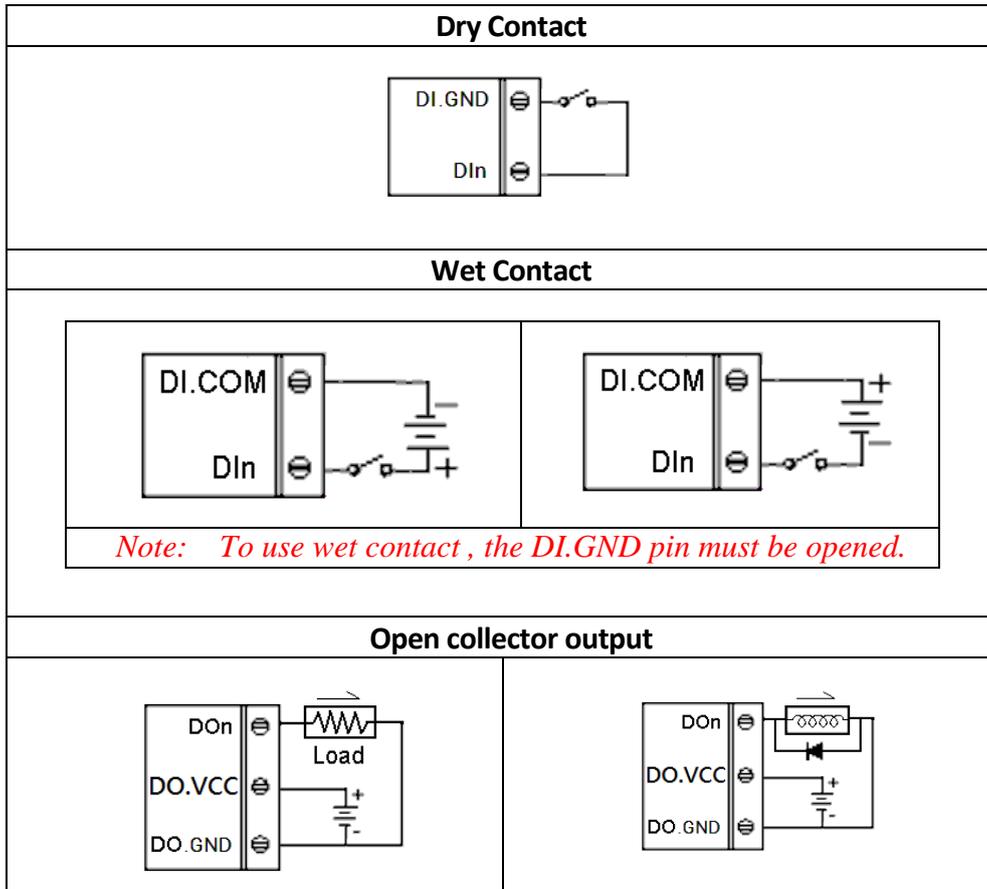


2.6 EX-9260-MTCP

2.6.1 Block diagram

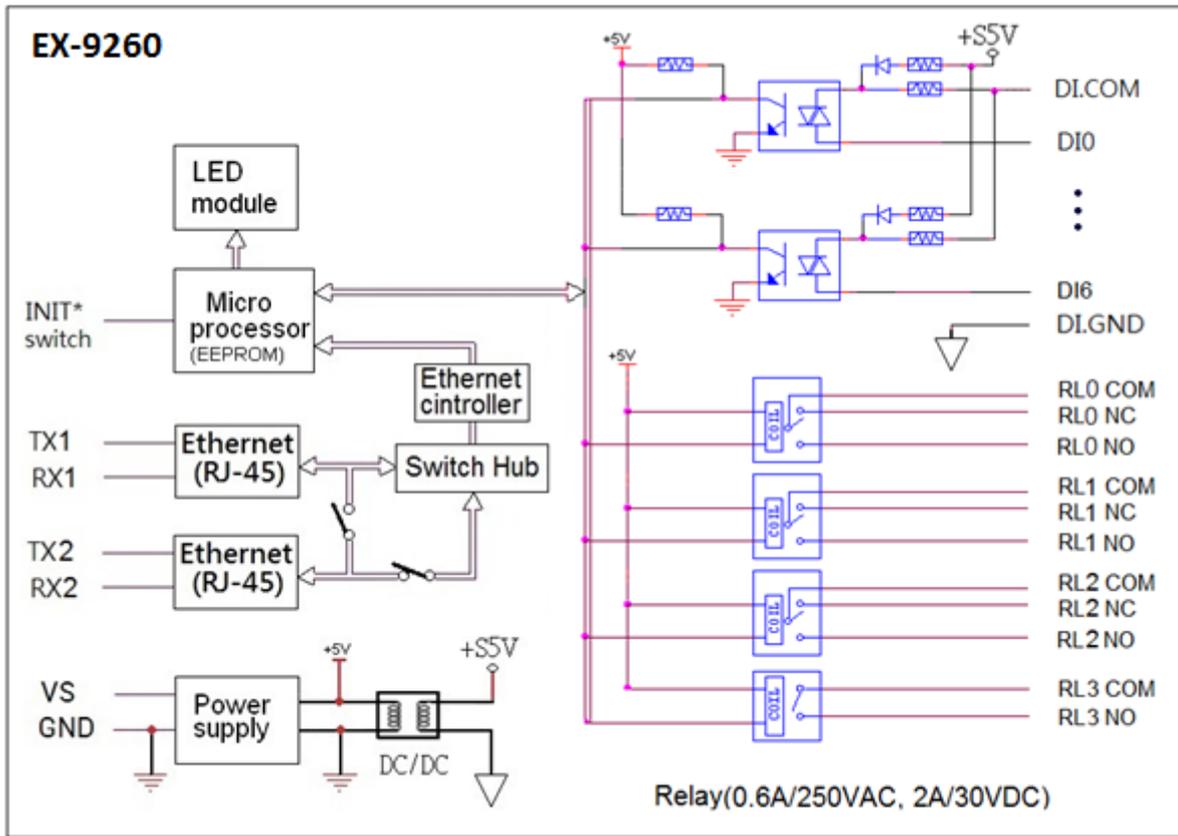


2.6.2 Wire connection

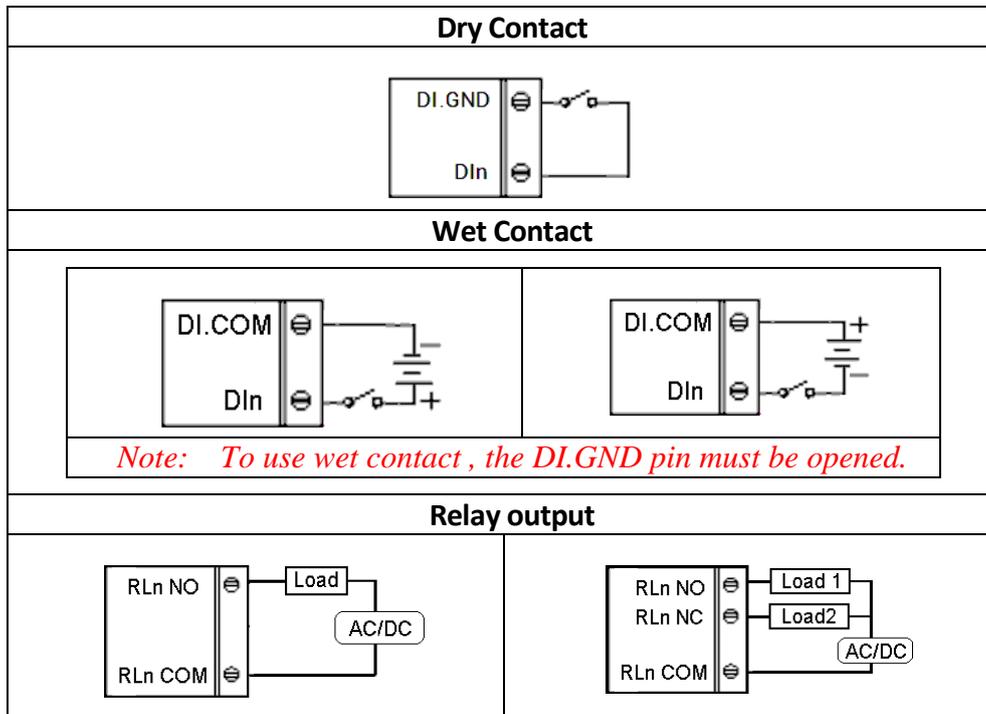


2.7 EX-9264-MTCP

2.7.1 Block diagram

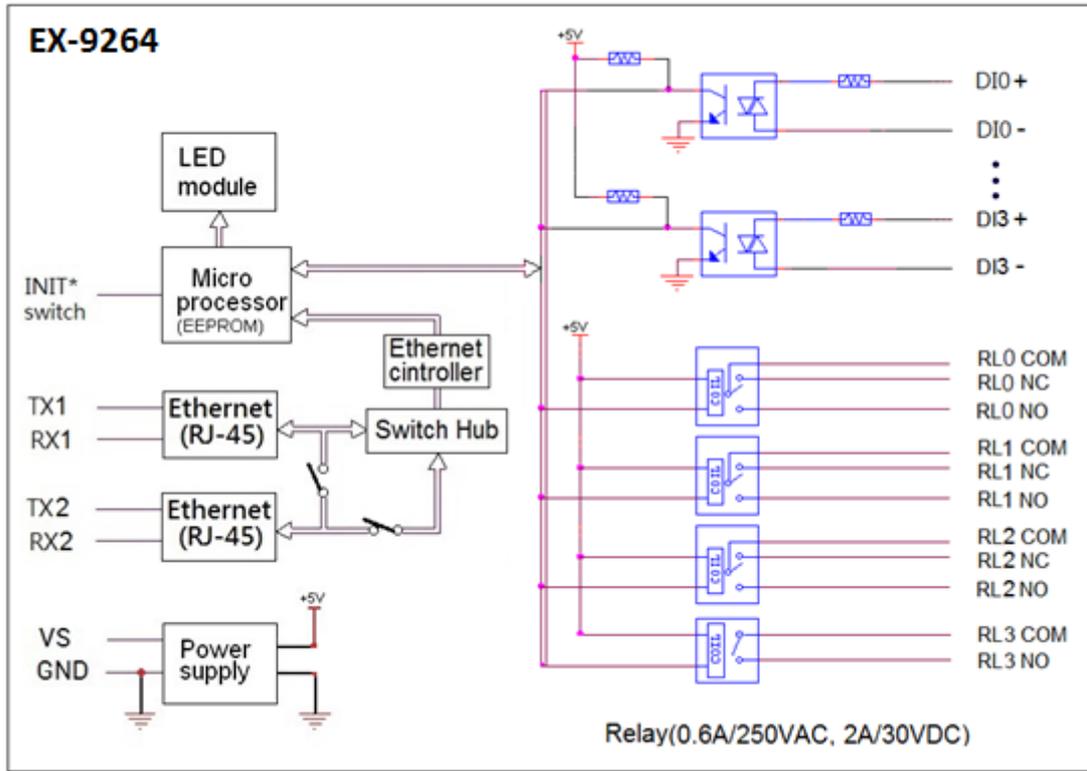

2.7.2 Wire connection

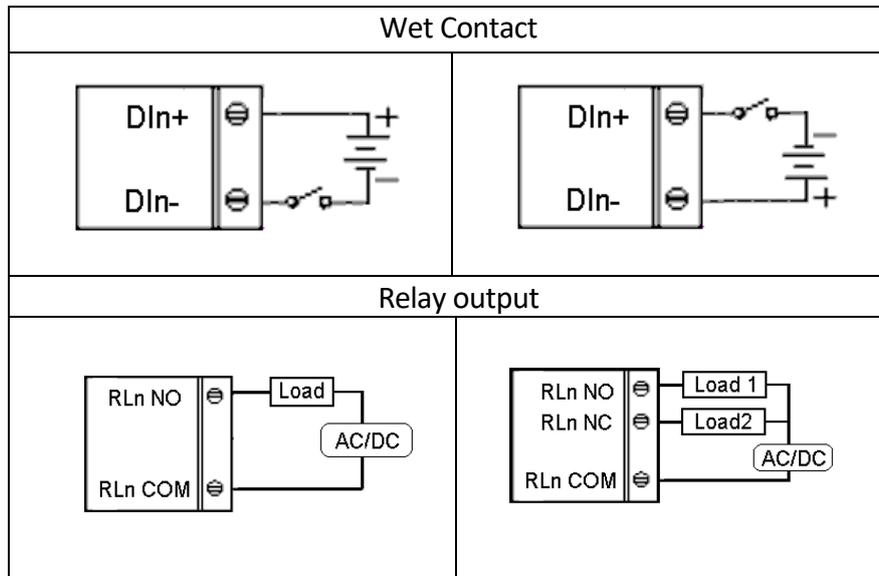

### Chapter 3 System Requirements


- ◆ IBM PC compatible computer with 486 CPU (Pentium is recommended)
- ◆ Microsoft 95/98/2000/NT 4.0 (SP3 or SP4)/XP/Win 7,8,10 or higher versions
- ◆ At least 32 MB RAM
- ◆ 20 MB of hard disk space available
- ◆ VGA color monitor
- ◆ 2x or higher speed CD-ROM
- ◆ Mouse or other pointing devices
- ◆ 10 or 100 Mbps Ethernet Card
- ◆ 10 or 100 Mbps Ethernet Hub (at least 2 ports)
- ◆ Two Ethernet Cable with RJ-45 connector
- ◆ Power supply for EX-92xx-MTCP Series (+10 to +30 V unregulated)

#### 3.1 Wiring and Connections

This section provides basic information on wiring the power supply, I/O units, and network connection.

#### 3.2 Power supply wiring


Although the EX-92xx-MTCP Series/TCP systems are designed for a standard industrial unregulated 24 V DC power supply, they accept any power unit that supplies within the range of +10 to +30 VDC. The power supply ripple must be limited to 200 mV peak-to-peak, and the immediate ripple voltage should be maintained between +10 and +30 VDC. Screw terminals +Vs and GND are for power supply wiring.

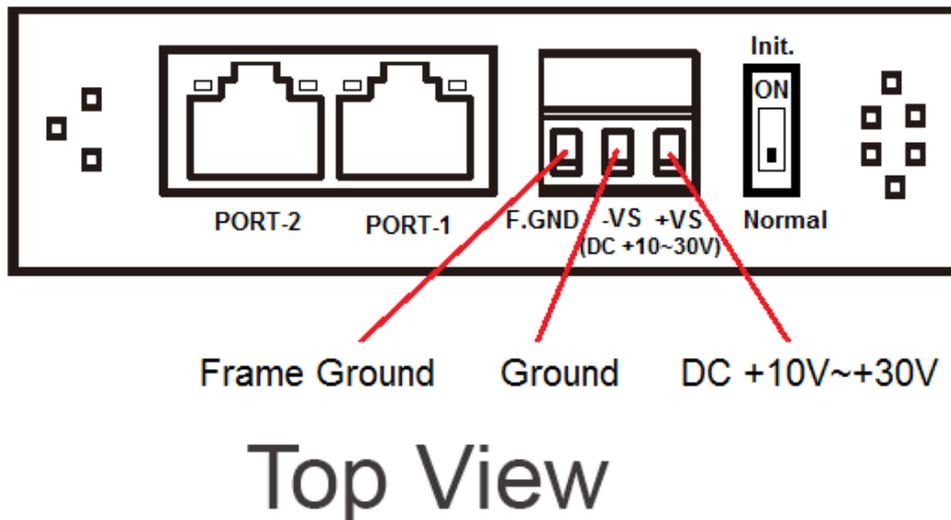

**Note:** The wires used should be sized at least 2 mm.

### 3.3 Status LED indicator for EX-92xx-MTCP Series I/O modules

There are two flash types of the Status LED indicator on the front panel of EX-92xx-MTCP Series Series.

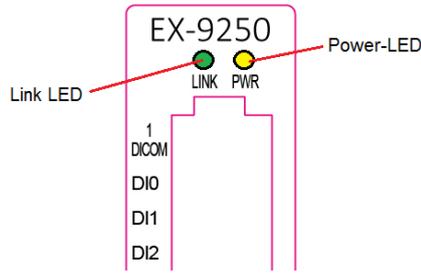

| No. | Color              | LED Status | Definition  |
|-----|--------------------|------------|---|
| 1   | Yellow (Power-LED) | On         | Power-LED, Always ON.   |
| 2   | Green (LINK-LED)   | On         | (LINK) This LED is normal on whenever the EX-92xx-MTCP Series module's Ethernet wiring is connected           |
| 3   | Green (LINK-LED)   | Blinking   | (COM) Blinks whenever EX-92xx-MTCP Series module is transmitting or receiving data(I/O command) via Ethernet. |

### 3.4 Ethernet LED indicator of EX-92xx-MTCP Series


There are two ports of RJ-45 ethernet connector. Each RJ-45 port LEDs built with two indicators to represent the EX-92xx-MTCP Series ethernet status as explained below:

- ◆ Yellow indicator (Speed): This LED is always ON.
- ◆ Green indicator(Link): This LED is normal on whenever the EX-92xx-MTCP Series module's Ethernet wiring is connected.


### 3.5 I/O modules wiring

The system uses a plug-in screw terminal block for the interface between I/O modules and field devices. The following information must be considered when connecting electrical devices to I/O modules. The terminal block accepts wires from # 14 AWG ~ 28 AWG. Always use a continuous length of wire. Do not combine wires to make them longer.

1. Insert the screw driver into the left hole of the terminal.
2. Insert the wiring into the left hole of the terminal.

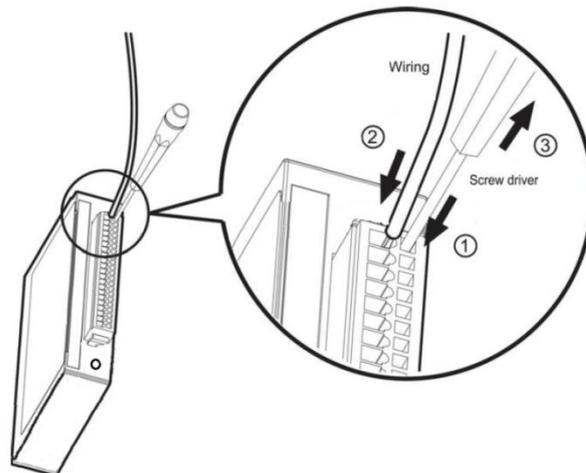


### 3.6 Rear side installation

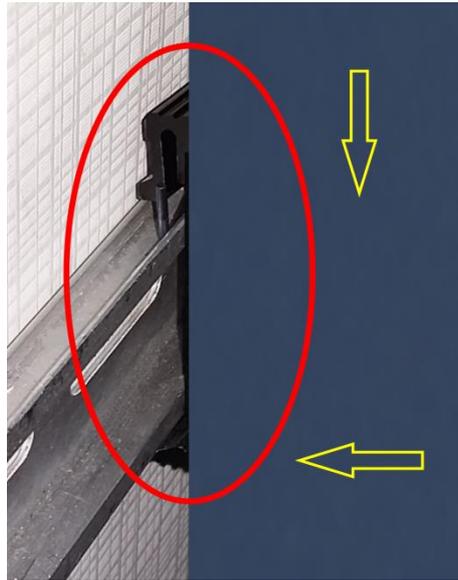

### 3.7 Daisy Chain Limitations

In general, an ethernet cable distance of each 100BASE-TX network segment is can be run 100 meters (about 328 feet). However, cables can pick up electrical noise on long runs. Based on this limitation, the maximum total connection length in daisy chain wiring should also be 100m as if auto-bypass protection active. For example, the distance from first to second module is 50m, so as second to third. When the power fails on second (middle) module, the auto-bypass will activate to bridge the network connection. The total distance from first to the 3rd will become 100m, that means the total network segment is close to limitation.

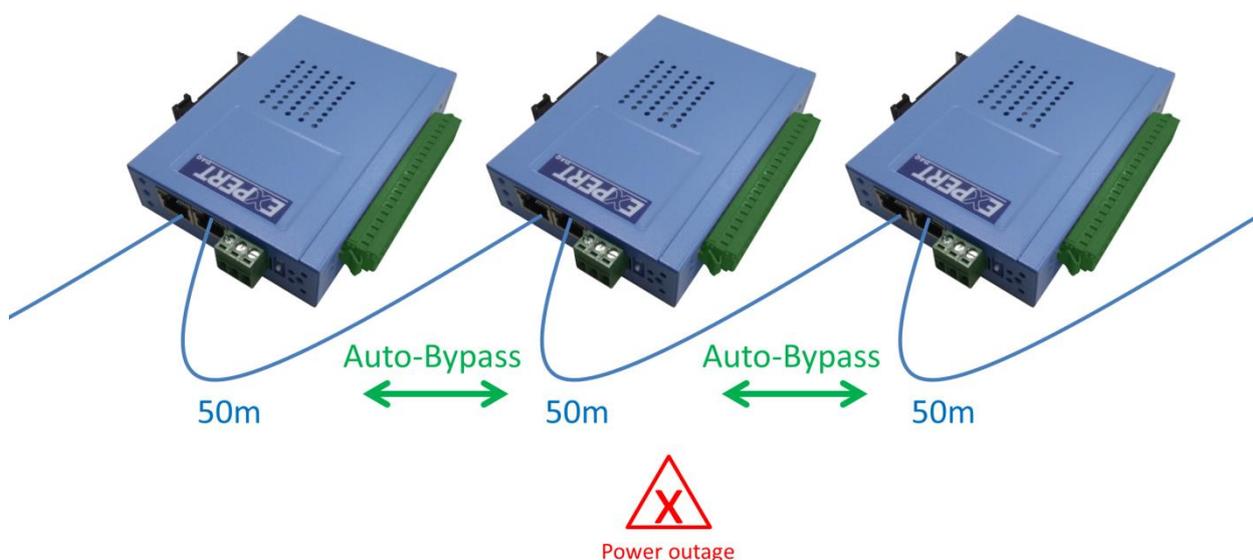

### 3.8 Initializing a Module

All EXPERTDAQ modules in an Ethernet network must have a *unique IP* address. Therefore, to configure the brand-new EXPERTDAQ before using is necessary.

#### 3.8.1 Factory default settings:

- ◆ IP Address : 10.0.0.1
- ◆ Subnet Mask: 255.255.255.0
- ◆ Gateway: 10.0.0.1
- ◆ DHCP: Disabled
- ◆ Web Server: Disabled
- ◆ Module ID: 01
- ◆ Password: 00000000

#### 3.8.2 INIT\* State settings:


All EX-92xx-MTCP Series I/O modules have a special slide-switch as INIT-SWITCH (Ref. Appendix). The I/O modules must be set at **“INIT” State** when you want to change the default settings, such as the *IP address*, Subnet Mask, Gateway, Password etc. If the “INIT” switch set to “INIT-ON” mode when power ON, Under this state the default configuration is set as following :

- ◆ IP Address : 10.0.0.1
- ◆ Subnet Mask: 255.255.255.0
- ◆ Gateway: 10.0.0.1
- ◆ Password: 00000000

Press the **“Default”** button on the EX-92xx-MTCP Series utility(Network), the module will be set to factory default state as following :

- ◆ IP Address : 10.0.0.1
- ◆ Subnet Mask: 255.255.255.0
- ◆ Gateway: 10.0.0.1
- ◆ DHCP: Disabled
- ◆ Web Server: Disabled
- ◆ Module ID: 01
- ◆ Password: 00000000
- ◆ I/O: factory default Mode

**Note:** Each module must has a unique ID number to be identified when the DHCP enabled, because you would not know the module IP address when DHCP enabled, but if with the different ID number. You can call provided function call( TCP\_GetIPFromID() in TCPDAQ.dll) to get correct IP address for each ID number

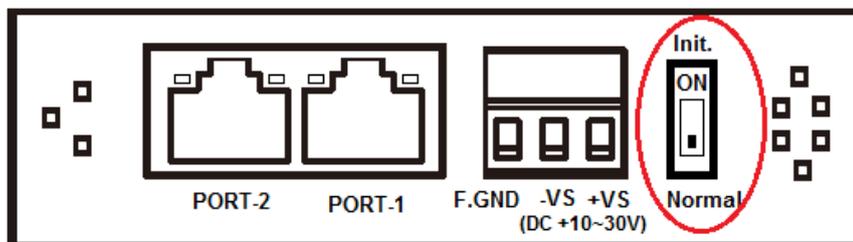

INIT. Switch

## Top View

## Chapter 4 Specification and wiring


### 4.1 EX-9250-MTCP 10 DI and 6 DO channels Digital I/O Module

The EX-9250-MTCP is a high-density I/O module built-in two port(RJ-45) 10/100 based-T interface for seamless Ethernet connectivity. It provides **10 digital input and 6 digital output channels** with 3750VRMS Isolating protection. All of the Digital Input channels support input latch function for important signal handling. Mean while, these DI channels allow to be used as 300Hz counter. Opposite to the intelligent DI functions, the EX-9250-MTCP Digital Output channels also support pulse output function, Auto-Off Time of digital output and DIO Synchronization function.

#### 4.1.1 Specification

- ◆ Digital input : Isolated single ended with common source/ground
  - ✓ Channel : 10 channels (DI0~DI9).
  - ✓ Input Level : Logic level status can be inversed via ASCII/Modbus command.
  - ✓ Dry Contact : Single ended with common source.
    - Logic level 0 (active): Close to GND.
    - Logic level 1 (inactive): Open.
  - ✓ Wet Contact : **To use Wet Contact , the DI.GND pin must be opened.**
    - Logic level 0 (active): +5V to +30VDC max.
    - Logic level 1 (inactive): +2VDC max.
  - ✓ Input Impedance : 2K ohm(Wet Contact)
  - ✓ Counter mode : Supports 300Hz counter(by software,32-bit + 1-bit overflow)
  - ✓ Optical Isolation Voltage : 3750Vrms
- ◆ Digital Output : Isolated Open collector (NPN) output channels.
  - ✓ Channel : 6 channels (DO0~DO5) .
  - ✓ Logical level : Logic level status can be inversed via ASCII/Modbus command.
  - ✓ Open Collector : +5V~30V/500 mA max. load
  - ✓ Pulse Output : Each channel supports 300Hz pulse output
  - ✓ Optical Isolation Voltage : 3750Vrms
- ◆ Display : 10 digital inputs & 6 digital output status LED
- ◆ Power requirements : Unregulated +10 ~ +30 VDC
- ◆ Power Consumption : 3.5 W (Typical)

#### 4.1.2 Application Wiring

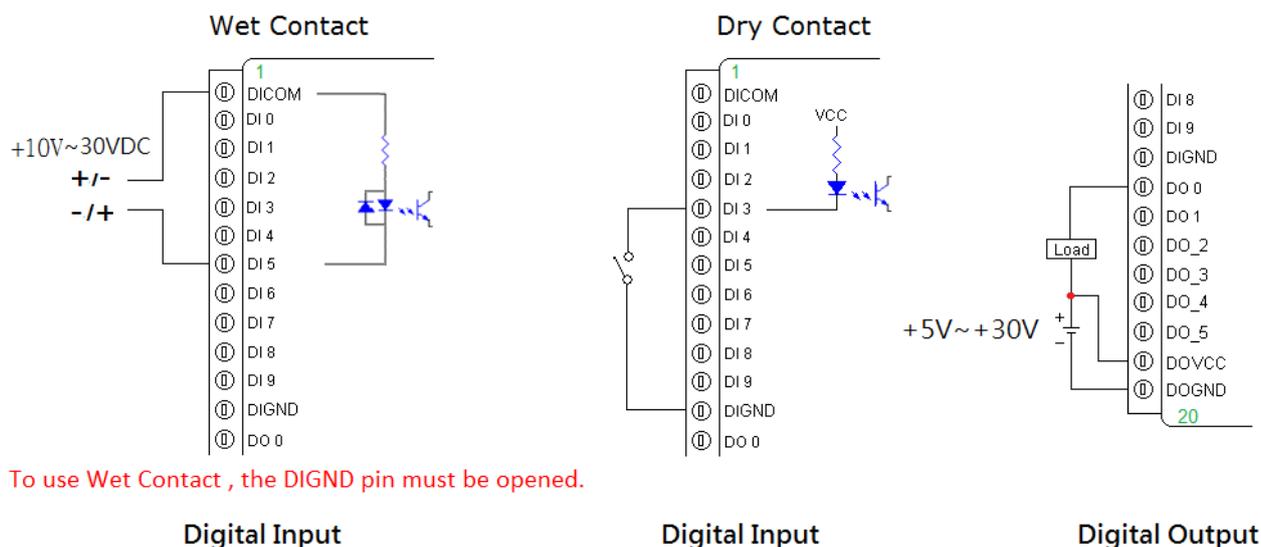


## 4.2 EX-9251-MTCP 10 DI , 4 DO and 2 Counter channels DIO Module

The EX-9251-MTCP is a high-density I/O module built-in two port(RJ-45) 10/100 based-T interface for seamless Ethernet connectivity. It provides **10 digital input(Dry contact)**, **4 digital output**, and **2 counter** channels with 3750VRMS Isolating protection. All of the Digital Input channels support input latch function for important signal handling. Mean while, these DI channels allow to be used as 300Hz(DI0~9)/4.5KHz(C0~C1) counter. Opposite to the intelligent DI functions, the EX-9251-MTCP Digital Output channels also support pulse output function, Auto-Off Time of digital output and DIO Synchronization function.

### 4.2.1 Specification

- ◆ Digital Input : Isolated single ended with common source (Dry Contact).
  - ✓ Channel : 10 channels (DI0~DI9)
  - ✓ Input level : Logic level status can be inverted via ASCII/Modbus command.
  - ✓ Dry contact : Single ended with common ground.
    - Logic level 0 (active) : Close to GND.
    - Logic level 1 (inactive): Open.
  - ✓ Counter : 300Hz software counter(32-bit + 1-bit overflow)
  - ✓ Optical Isolation Voltage : 3750Vrms
- ◆ Digital Output : Isolated Open collector (NPN) output channels.
  - ✓ Channel : 4 channels (DO0~DO3) .
  - ✓ Logical level : Logic level status can be inverted via ASCII/Modbus command.
  - ✓ Open Collector : +5V~30V / 500 mA max. load
  - ✓ Pulse Output : Each channel supports 300Hz pulse output
  - ✓ Optical Isolation Voltage: 3750Vrms
- ◆ Counter : 2 channels input hardware counter
  - ✓ Channel : 2 (C0=DI10, C1=DI11)
  - ✓ Input logic level : 30VDC max.
    - Logic level 1 (active): +5V to 30VDC max.
    - Logic level 0 (inactive): +2 Vac max.
  - ✓ Maximum Count : 4,294,967,285 (32-bit + 1-bit overflow)
  - ✓ Input Impedance : 2K ohm(Wet Contact)
  - ✓ Input frequency : 4500 Hz max.
  - ✓ Optical Isolation Voltage: 3750Vrms
- ◆ Display : 10 digital inputs, 2 Counter & 4 digital output status LED
- ◆ Power requirements : Unregulated +10 ~ +30 VDC
- ◆ Power Consumption : 3.5 W (Typical)

### 4.2.2 Application Wiring

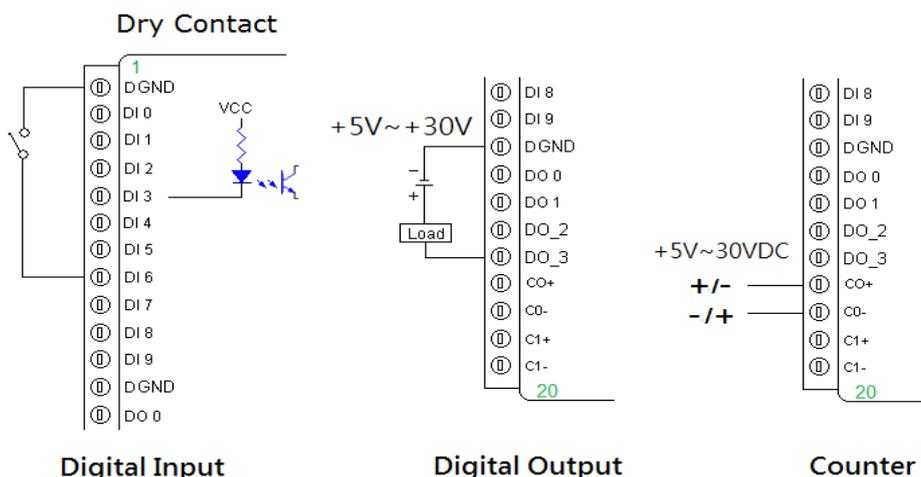


## 4.3 EX-9251A-MTCP 10 DI , 4 DO and 2 Counter channels DIO Module

The EX-9251A-MTCP is a high-density I/O module built-in two port(RJ-45) 10/100 based-T interface for seamless Ethernet connectivity. It provides **10 digital input(Wet contact)**, **4 digital output**, and **2 counter** channels with 3750VRMS Isolating protection. All of the Digital Input channels support input latch function for important signal handling. Mean while, these DI channels allow to be used as 300Hz(DI0~9)/4.5KHz(C0~C1) counter. Opposite to the intelligent DI functions, the EX-9251-MTCPA Digital Output channels also support pulse output function, Auto-Off Time of digital output and DIO Synchronization function.

### 4.3.1 Specification

- ◆ Digital Input : Isolated single ended with common source/ground (Wet Contact).
  - ✓ Channel : 10 channels (DI0~DI9)
  - ✓ Input level : Logic level status can be inverted via ASCII/Modbus command.
  - ✓ Wet Contact : Single ended digital input with common source/ground.
    - Logic level 0 (active) : +5V to +30VDC max.
    - Logic level 1 (inactive): +2 Vdc max.
  - ✓ Impedance : 2K ohm.
  - ✓ Counter : 300Hz software counter(32-bit + 1-bit overflow)
  - ✓ Optical Isolation Voltage : 3750Vrms
- ◆ Digital Output : Isolated Open collector (NPN) output channels.
  - ✓ Channel : 4 channels (DO0~DO3) .
  - ✓ Logical level : Logic level status can be inverted via ASCII/Modbus command.
  - ✓ Open Collector : +5V~30V / 500 mA max. load
  - ✓ Pulse Output : Each channel supports 300Hz pulse output
  - ✓ Optical Isolation Voltage: 3750Vrms
- ◆ Counter : 2 channels input *hardware* counter
  - ✓ Channel : 2 (C0=DI10, C1=DI11)
  - ✓ Input logic level : 30VDC max.
    - Logic level 1 (active),+5V to 30VDC max.
    - Logic level 0 (inactive) ,+2 Vac max.
  - ✓ Maximum Count : 4,294,967,285 (32-bit + 1-bit overflow)
  - ✓ Input Impedance : 2K ohm(Wet Contact)
  - ✓ Input frequency : 4500 Hz max.
  - ✓ Optical Isolation Voltage: 3750Vrms
- ◆ Display : 10 digital inputs, 2 Counter & 4 digital output status LED
- ◆ Power requirements : Unregulated +10 ~ +30 VDC
- ◆ Power Consumption : 3.5 W (Typical)

### 4.3.2 Application Wiring

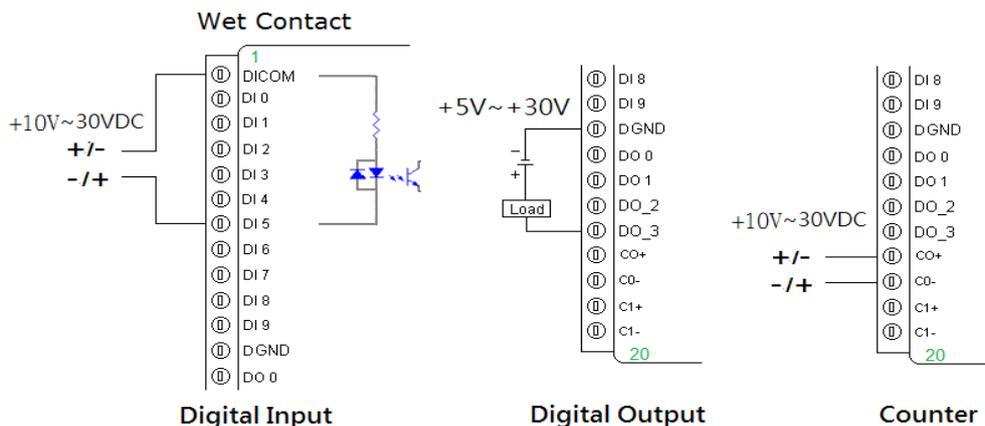


## 4.4 EX-9254-MTCP 5 differential DI and 8 DO channels Digital I/O Module

The EX-9260-MTCP is a high-density I/O module built-in two port(RJ-45) 10/100 based-T interface for seamless Ethernet connectivity. It is a high-density I/O module. It provides 5 differential digital input and 8 digital output channels with 3750VRMS Isolating protection. The EX-9254-MTCP Digital Input channels support 5 isolated differential digital input (sink/source) channels and All of the Digital Input channels support input latch function for important signal handling. Meanwhile, these DI channels allow to be used as 300Hz counter. Opposite to the intelligent DI functions, the EX-9254-MTCP Digital Output channels also support pulse output function, Auto-Off Time of digital output and DIO Synchronization function.

### 4.4.1 Specification

- ◆ **Digital input** : Isolated differential digital inputs.
  - ✓ Channel : 5 (DI0~DI4) isolated differential input channels (sink/source).
  - ✓ Input Level : Logic level status can be inversed via ASCII/Modbus command.
    - Logical level 1 (inactive): +0V ~ +1Vdc Max.
    - Logical level 0 (active): +5V ~ +30Vdc
  - ✓ Input Impedance : 2K ohm
  - ✓ Counter mode : Supports 300Hz counter(by software,32-bit + 1-bit overflow)
  - ✓ Optical Isolation Voltage : 3750Vrms
- ◆ **Digital Output** : Isolated open drain (P-MOSFET) output channels.
  - ✓ Channel : 8 channels (DO0~DO7) .
  - ✓ Logical level : Logic level status can be inversed via ASCII/Modbus command.
  - ✓ Load voltage : +10V ~ +30Vdc
  - ✓ Load current : 750mA/ channel Max. (with short-circuit protection)
  - ✓ Pulse Output : Each channel supports 300Hz pulse output
  - ✓ Optical Isolation Voltage: 3750Vrms
- ◆ **Display** : 5 digital inputs & 8 digital outputs status LED
- ◆ **Power requirements** : Unregulated +10 ~ +30 VDC
- ◆ **Power Consumption** : 3.6 W (Typical)

### 4.4.2 Application Wiring

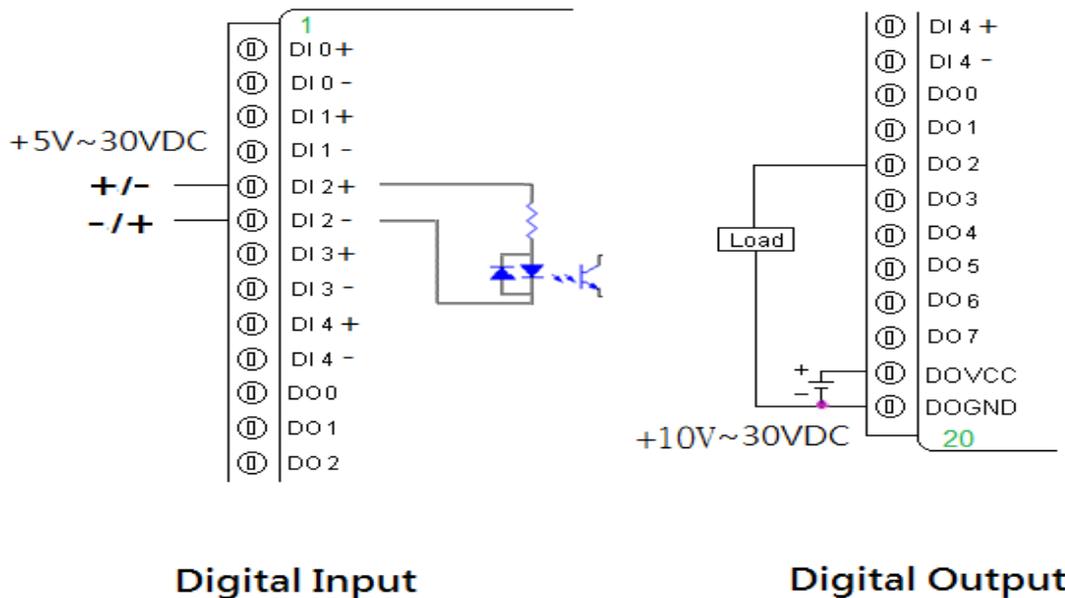


## 4.5 EX-9255-MTCP 8 DI and 8 DO channels Digital I/O Module

The EX-9255-MTCP is a high-density I/O module built-in two port(RJ-45) 10/100 based-T interface for seamless Ethernet connectivity. It provides *8 digital input channels, and 8 digital output channels*. All of the digital input channels support the input latch function for important signal handling. The digital output channels support source type output. Opposite to the intelligent DI functions, the EX-9255-MTCP Digital Output channels also support pulse output function, Auto-Off Time of digital output and DIO Synchronization function.

### 4.5.1 Specification

- ◆ **Digital input** : Isolated single ended with common source/ground.
  - ✓ Channel : 8 channels (DI0~DI7).
  - ✓ Input Level : Logic level status can be inverted via ASCII/Modbus command.
  - ✓ Dry Contact : Single ended with common Ground.
    - Logic level 0 (active) : Close to DI.GND
    - Logic level 1 (inactive): Open
  - ✓ Wet Contact : **To use Wet Contact , the DI.GND pin must be opened.**
    - Logic level 1 (active) : +5V to +30VDC max.
    - Logic level 0 (inactive) : +2VDC max.
  - ✓ Input Impedance : 2K ohm(Wet Contact)
  - ✓ Counter : 300Hz software counter(32-bit + 1-bit overflow)
  - ✓ Optical Isolation Voltage: 3750Vrms
- ◆ **Digital Output** : Isolated open drain (P-MOSFET) output channels.
  - ✓ Channel : 8 channels (DO0~DO7) .
  - ✓ Logical level : Logic level status can be inverted via ASCII/Modbus command.
  - ✓ Load voltage : +10V ~ +30Vdc
  - ✓ Load current : 750mA/ channel Max. (with short-circuit protection)
  - ✓ Pulse Output : Each channel supports 300Hz pulse output
  - ✓ Optical Isolation Voltage: 3750Vrms
- ◆ **Display** : 8 digital inputs & 8 digital outputs status LED
- ◆ **Power requirements** : Unregulated +10 ~ +30 VDC
- ◆ **Power Consumption** : 3.6 W (Typical)

### 4.5.2 Application Wiring

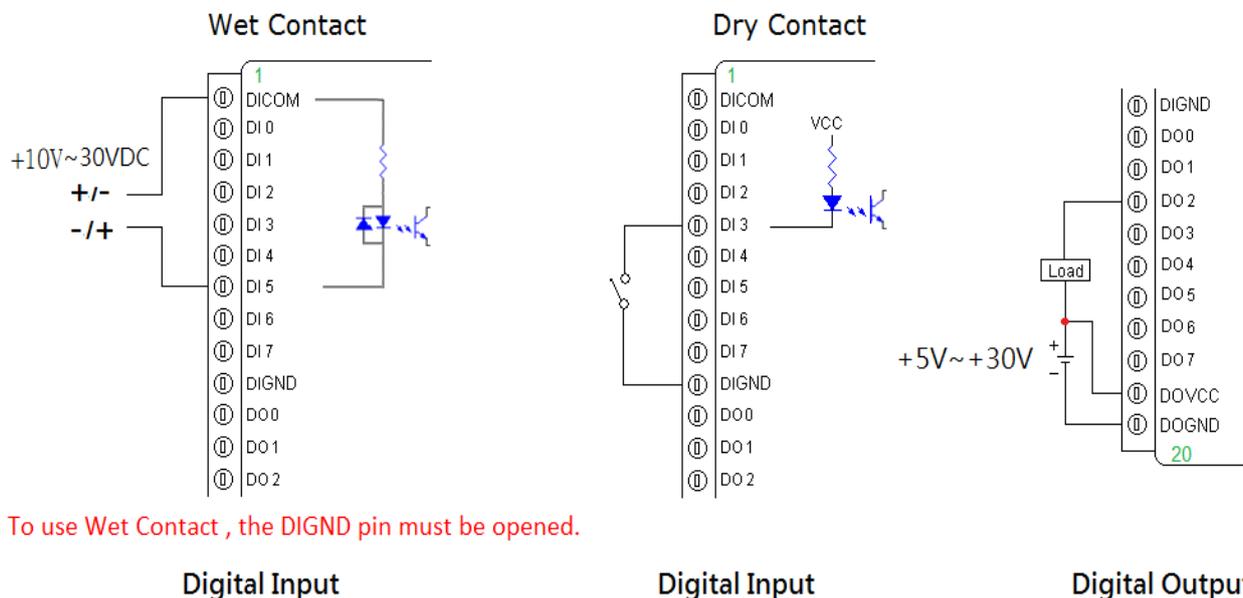

## 4.6 EX-9260-MTCP 7-channel Digital Input and 4 RELAY output Module


The EX-9260-MTCP is a high-density I/O module built-in two port(RJ-45) 10/100 based-T interface for seamless Ethernet connectivity. It provides 7 isolated digital input channels and 4 relay output channels(0.6A/125Vac, 2A/30Vdc). All of the Digital Input channels support input latch function for important signal handling. Mean while, these DI channels allow to be used as 300Hz counter. All relay output channels are differential with individually common . Opposite to the intelligent DI functions, the EX-9260-MTCP Digital Output channels also support Auto-Off Time of digital output and DIO Synchronization function.

### 4.6.1 Specification

- ◆ **Digital input** : Isolated single ended with common source.
  - ✓ Channel : 7 channels (DI0~DI6).
  - ✓ Input Level : Logic level status can be inversed via ASCII/Modbus command.
  - ✓ Dry Contact : Single ended with common Ground.
    - Logic level 0 (active) : Close to DI.GND
    - Logic level 1 (inactive): Open
  - ✓ Wet Contact : **To use Wet Contact , the DI.GND pin must be opened.**
    - Logic level 0 (active) : +5V to +30VDC max.
    - Logic level 1 (inactive) : +2VDC max.
  - ✓ Counter mode : Supports up to 300Hz counter(by software, 32-bit + 1-bit overflow)
  - ✓ Optical Isolation Voltage : 3750Vrms
- ◆ **Relay Output** :
  - ✓ Output channels : 4 relay output channels (RL0,RL1,RL2 Form C(SPDT) and RL3 Form A(SPST NO).
  - ✓ Surge strength : 500V
  - ✓ Relay contact rating : **0.6A/125Vac, 2A/30Vdc**
  - ✓ Operate Time : 3mS max.
  - ✓ Release Time : 2mS max.
  - ✓ Min Life : 5\*10<sup>5</sup> ops
  - ✓ Pulse Output : Each channel supports 300Hz pulse output
- ◆ **Display** : 7 digital input & 4 Relay output status LED
- ◆ **Power requirements** : Unregulated, +10V ~ +30 VDC
- ◆ **Power Consumption** : 2.5 W (Typical)

### 4.6.2 Application Wiring

#### ◆ Digital Input & Relay output:

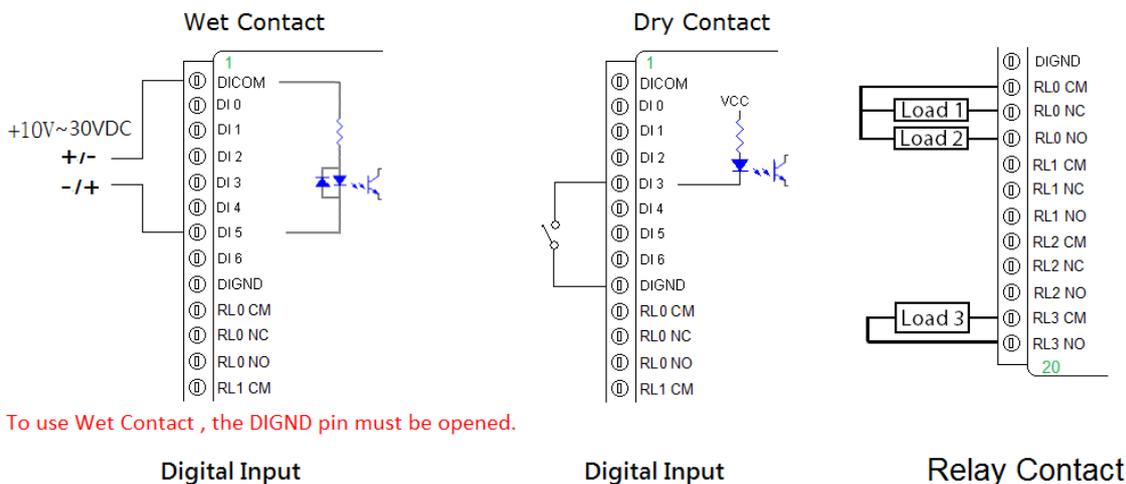

To use Wet Contact , the DIGND pin must be opened.

**Note:** Relay(x): RLx CM=Common, RLx NO=Normal open, RLx NC=Normal Close

## 4.7 EX-9264-MTCP 4-channel differential Digital Input and 4 RELAY output Module


The EX-9264-MTCP is a high-density I/O module built-in two port(RJ-45) 10/100 based-T interface for seamless Ethernet connectivity. It provides 4 isolated differential digital input channels and 4 relay output channels(0.6A/125Vac, 2A/30Vdc). All input channels are differential digital input (sink/source) and support input latch function for important signal handling. Mean while, these DI channels allow to be used as 300Hz counter. All relay output channels are differential with individually common . Opposite to the intelligent DI functions, the EX-9264-MTCP Relay Output channels also support Auto-Off Time of Relay output and DIO Synchronization function.

### 4.7.1 Specification

- ◆ **Digital input** : Isolated differential digital inputs (sink/source).
  - ✓ Channel : 4 (DI0~DI3) isolated differential input channels (sink/source).
  - ✓ Input Level : Logic level status can be inversed via ASCII/Modbus command.
    - Logical level 0: +0V ~ +1Vdc Max.
    - Logical level 1: +10V ~ +30Vdc
  - ✓ Input Impedance : 2K ohm
  - ✓ Counter mode : Supports 300Hz counter(by software,32-bit + 1-bit overflow)
  - ✓ Optical Isolation Voltage : 3750Vrms
- ◆ **Relay Output** :
  - ✓ Output channels : 4 relay output channels (RL0,RL1,RL2 Form C(SPDT) and RL3 Form A(SPST NO)).
  - ✓ Surge strength : 500V
  - ✓ Relay contact rating : 0.6A/125Vac, 2A/30Vdc
  - ✓ Operate Time : 3mS max.
  - ✓ Release Time : 2mS max.
  - ✓ Min Life : 5\*10<sup>5</sup> ops
  - ✓ Pulse Output : Each channel supports 300Hz pulse output
- ◆ Display : 4 digital input & 4 Relay output status LED
- ◆ Power requirements : Unregulated, +10V ~ +30 VDC
- ◆ Power Consumption : 2.5 W (Typical)

### 4.7.2 Application Wiring

#### ◆ Digital Input & Relay output:

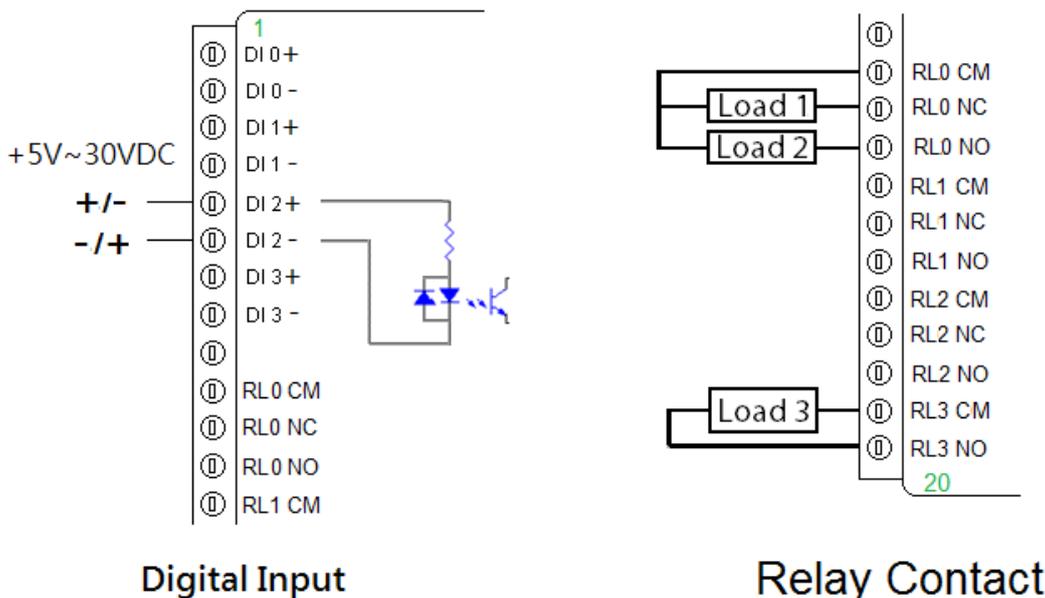

**Note:** Relay(x): RLx CM=Common, RLx NO=Normal Open, RLx NC=Normal Close

## Chapter 5 EX-92xx-MTCP Series Utility Guide

In order to properly configure EXPERTDAQ Series. You will need following items to complete your system hardware configuration.

### 5.1 System Requirement

#### Host computer

- ◆ IBM PC compatible computer with 486 CPU (Pentium is recommended)
- ◆ Microsoft 95/98/2000/NT 4.0 (SP3 or SP4)/Win 7,8,10 or higher versions
- ◆ At least 32 MB RAM
- ◆ 20 MB of hard disk space available
- ◆ VGA color monitor
- ◆ 2x or higher speed CD-ROM
- ◆ Mouse or other pointing devices
- ◆ 10 or 100 Mbps Ethernet Card
- ◆ 10 or 100 Mbps Ethernet Hub (at least 2 ports)
- ◆ Two Ethernet Cable with RJ-45 connector
- ◆ Power supply for EX-92xx-MTCP Series (+10V to +30 V unregulated), ( for 94xx: option).
- ◆ Make sure to prepare all of the items above, then connect the power and network wiring as Figure 5-1

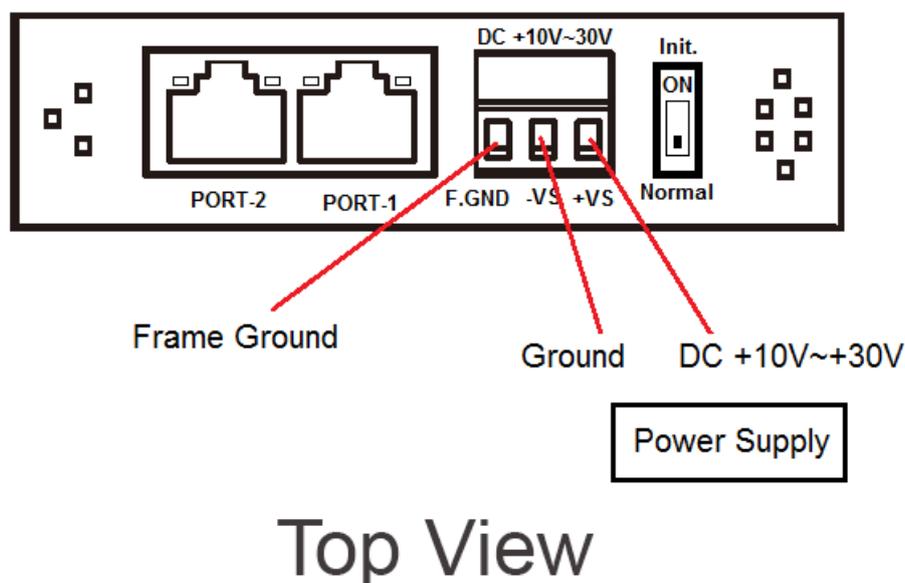


Figure 5-1 Power wiring

### 5.2 Install Utility Software on Host PC

**TOPSCCC** provide free download Manual and Utility software for EX-92xx-MTCP Series modules' operation and configuration. Link to the web site: [www.TOPSCCC.com.tw](http://www.TOPSCCC.com.tw) and click into the "Download Area" to get the latest version EX-92xx-MTCP Series manual and Ethernet I/O Utility. Once you download and setup the Utility software, there will be a shortcut of the Utility executive program on Windows' desktop after completing the installation.

## 5.3 EXPERTDAQ Ethernet I/O Utility Overview

The Utility software offers a graphical interface that helps you configure the EX-92xx-MTCP Series modules. It is also very convenient to test and monitor your remote DAQ system. The following guidelines will give you some brief instructions on how to use this Utility.

- ◆ Main Menu
- ◆ Network Setting
- ◆ Adding Remote Station
- ◆ Security setting
- ◆ I/O Module Configuration
- ◆ Alarm Setting
- ◆ I/O Module Calibration
- ◆ Security Setting
- ◆ Terminal emulation
- ◆ Data/Event Stream

## 5.4 Main Menu

Double Click the icon of EXPERTDAQ Ethernet I/O Utility shortcut, the Operation screen will pop up as Figure 5-2 main window.




Figure 5-2 main window

The top of the operation screen consists of a function menu and a tool bar for user's commonly operating functions.

### 5.4.1 Function Menu

- ◆ File : using to exit this Utility program.
- ◆ Tool : contents functions as below:
  - Search modules
  - Ping remote Ethernet device.
  - Monitor Stream/Event Data
  - Terminal

➤ Firmware update:

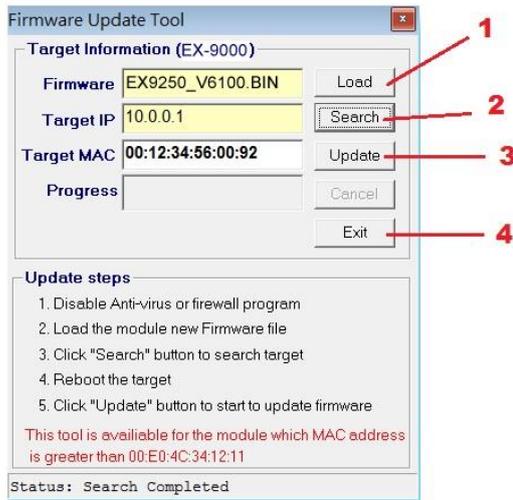

Press the "Search" button then power-on the module(or press reset button(EX-9250MTCP))

- ◆ Setup : Contents Timeout and Scan Rate setting functions. Please be aware of the time setting for other Ethernet domination usually longer than local network.
- ◆ Help : Contents on-line help function as user's operation guide; the item "About" contents information about software version, released date, and support modules.

### 5.4.2 Tool Bar


There are five push buttons in the tool bar.



- ◆ Exit : Exit utility program
- ◆ Terminal : Terminal Call up the operation screen of Terminal emulation to do the request / response command execution.
- ◆ Search : Search all the EXPERTDAQ modules you connected in local Ethernet
- ◆ Add : Add remote EXPERTDAQ I/O module
- ◆ Monitor : Monitor the Stream/Event Data

### 5.4.3 List Sort

The searched units will be listed in the tree-structure display area in order by "Sort" selection

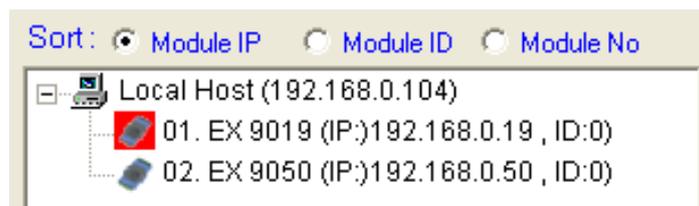

- ◆ Module IP : Sort by module IP
- ◆ Module ID : Sort by module ID
- ◆ Module No : Sort by module name

## 5.5 Network Setting

As the moment you start up this Windows Utility, it will search all EX-92xx-MTCP Series I/O modules on the host PC's domination Ethernet network automatically. Then the tree-structure display area will appeal with the searched units and the relative IP address. Since Utility software detects the EX-92xx-MTCP Series on the network, user can begin to setup each unit.

Choose any one I/O module listed on the tree-structure display area and entry the correct password. The module basic configuration table is listed as shown in for setting

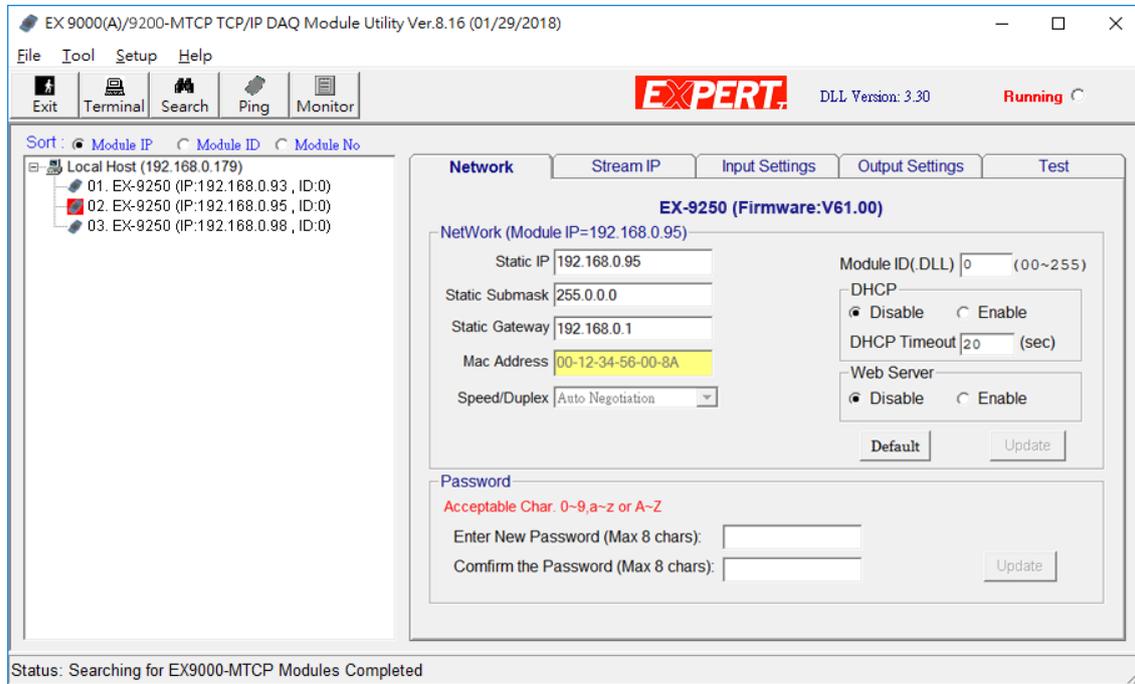


Figure 5-3

### 5.5.1 Module IP

**MAC Address** : This is also called Ethernet address and needs no further configuration.

**IP Address, Subnet Mask, and Default Gateway:** (default 10.0.0.1, 255.255.255.0 and 10.0.0.1)

The IP address identifies your EX-92xx-MTCP Series devices on the global network. Each EX-92xx-MTCP Series has same default IP address 10.0.0.1. Therefore, *please do not initial many EX-92xx-MTCP Series at the same time to avoid the Ethernet collision*. If you want to configure the EX-92xx-MTCP Series in the host PC's dominating network, only the IP address and Subnet Mask will need to set (The host PC and EXPERTDAQ Ethernet I/O must belong to same subnet Mask).

If you want to configure the EX-92xx-MTCP Series via Internet or other network domination, you have to ask your network administrator to obtain a specific IP and Gateway addresses, and then configure each EX-92xx-MTCP Series with the individual setting.

**DHCP** : (default Disabled)

Allow you to get IP address from the DHCP server without setting IP address by manual.

**DHCP timeout** : (default 20 sec)

Allow you to set timeout to search for the DHCP servo. If there is no DHCP servo exist, the module will reboot and use static IP address assigned by E9KUtility.exe

**Web Server** : (default Disabled)

Allow you monitor and control I/O status on EX-92xx-MTCP Series modules remotely through web browser.

**Module ID** : (default 00)

Each module must has a unique ID number to be identified when the DHCP enabled, because you would not know the module IP address when DHCP enabled, but if with the different ID number. You can call provided function call(TCP\_GetIPFromID()) in TCPDAQ.DLL to get correct IP address for each ID number

**Password** : (default 00000000)


Allow you to change the password of the module

### 5.5.2 TCP/IP port:

EX-92xx-MTCP Series use four ports to communication with Host as shown below table

| Protocol | Port (dec) | Description          |
|----------|------------|----------------------|
| TCP      | 502        | MODBUS/TCP           |
| UDP      | 1025       | ASCII Command        |
| UDP      | 5168       | Event/Stream trigger |
| TCP      | 80         | HTTP (web)           |

### 5.5.3 Stream/Alarm(for DI latch Mode) IP

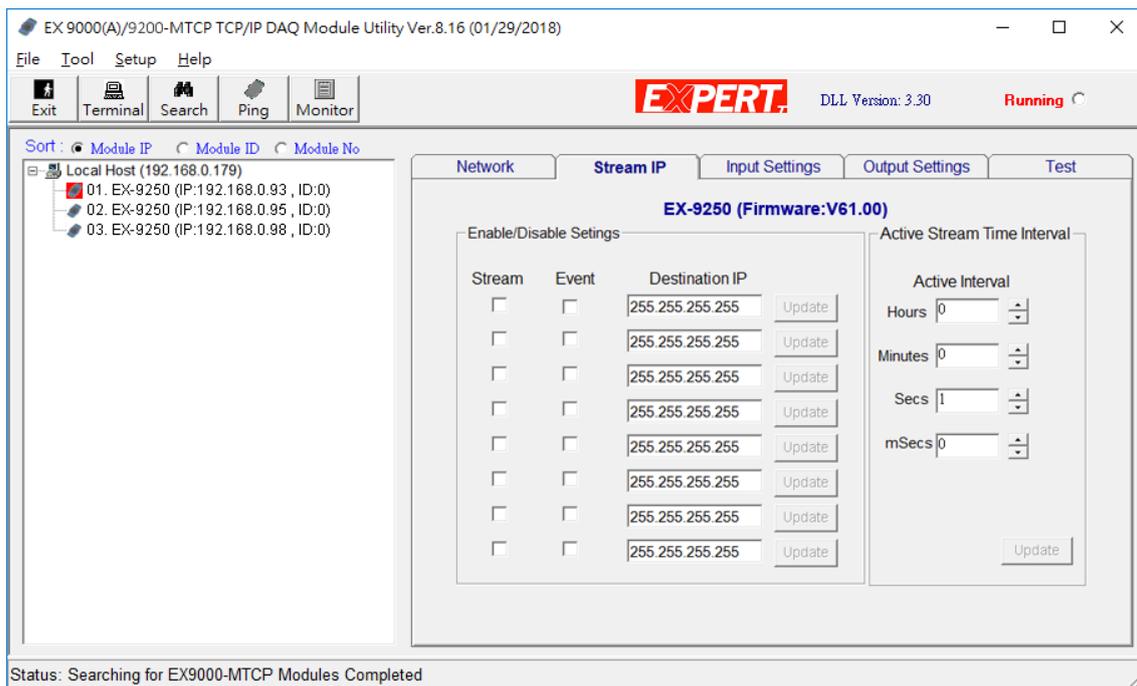

**Stream/Alarm event Enable Setting** : Set Stream /Event data Destination IP (default all disabled),

**Active Stream time period** : Set time interval for sending stream data (for DI latch Mode, default 1 sec)

## 5.6 Add Remote Stations

To meet the remote monitoring and maintenance requirements, The EX-92xx-MTCP Series system does not only available to operate in local LAN, but also allowed to access from Internet or Intranet. Thus users would able to configure an EX-92xx-MTCP Series easily no matter how far it is.

Select item **Tool**\Add Remote Ethernet I/O in function menu or click the button, the adding station screen will pop up as Figure1 6 Add remote module. Then key-in the specific IP address and click the **“Ping”** button. If the communication success, click **“Add”** to add EXPERTDAQ Ethernet I/O unit into the tree-structure display area.

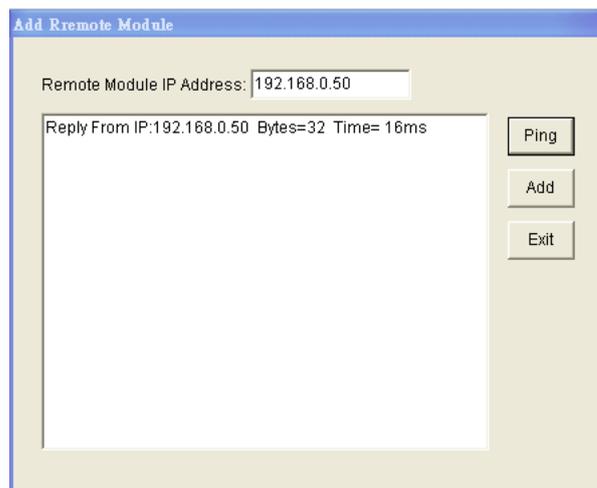



Figure5-4 Add remote module

Note:

- ◆ There is several conditions need to be sure before adding a remote EX-92xx-MTCP Series system in the Window Utility.
- ◆ Be sure the specific IP is existed and available.
- ◆ Be sure to complete the network linkage for both sides.
- ◆ Be sure to adjust the best timing of timeout setting.
- ◆ Even you are not sure whether the communication is workable or not, there is also a **“Ping”** function for testing the network connection.

## 5.7 Security Setting

Though the technology of Ethernet discovered with great benefits in speed and integration, there also exist risk about network invading form anywhere. For the reason, the security protection design has built-in EX-92xx-MTCP Series I/O modules. Once user setting the password into the EX-92xx-MTCP Series firmware, the important system configurations (Network, Firmware, Password) are only allowed to be changed by password verification.

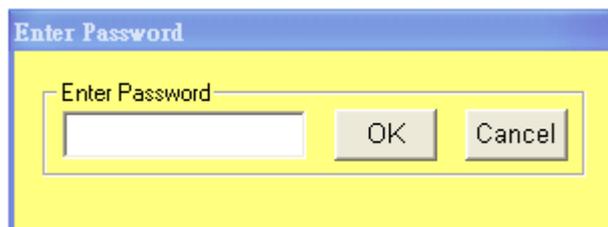

Note:

The default password of EX-92xx-MTCP Series is **“00000000”**. Please make sure to keep the correct password by yourself. If you lose it, please contact to TOPSCCC’s technical support center for help.

### 5.8 Terminal Emulations

You can issue commands and receive response by clicking the Terminal button on the tool bar. There are two kinds of command format supported by this emulating function. Users can choose ASCII or ModBus Hexadecimal mode as their communication base. If the ASCII mode has been selected, the Windows Utility will translate the request and response string in ASCII format.

**ASCII Command mode:** Shown as ASCII Command Terminal

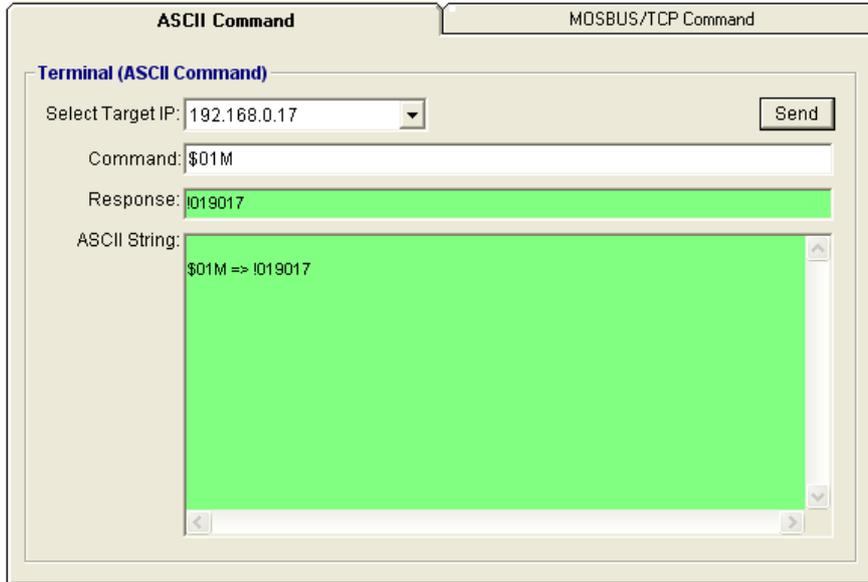


Figure 5-5 ASCII Command Terminal

**ModBus Hexadecimal mode:** shown as Chapter 9

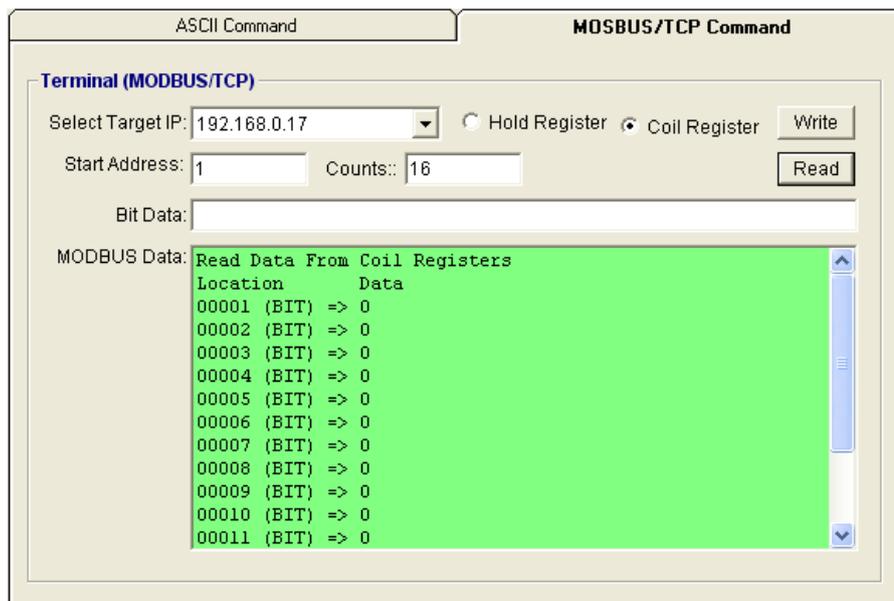


Figure 5-6 ModBus Terminal

## 5.9 Data /Event Stream

### Data Stream Configuration:

In addition to TCP/IP communication protocol, EX-92xx-MTCP Series supports UDP communication protocol to regularly broadcast data to specific host PCs. Click the tab of Data Stream, then configure the broadcasting interval and the specific IP addresses which need to receive data from the specific EX-92xx-MTCP Series I/O module. This UDP Data Stream function broadcasts up to 8 host PCs simultaneously, and the interval is user-defined from 50ms to 7 Days.

### Event Stream Configuration:

In addition to TCP/IP communication protocol, EX-92xx-MTCP Series supports UDP communication protocol to regularly broadcast data to specific host PCs. Click the tab of Data Stream, then configure the broadcasting interval and the specific IP addresses which need to receive data from the specific EX-92xx-MTCP Series I/O module. This UDP Data Stream function broadcasts up to 8 host PCs simultaneously, and the interval is user-defined from 50ms to 7 Days.

### Data Stream Monitoring:

After finishing the configuration of Data Stream, you can select the tab “Stream Monitor” in the function bar or click icon to call up operation display as Figure 1 7 Stream display.

Select the IP address of the EX-92xx-MTCP Series you want to read data, then click “Start” button. The Utility software will begin to receive the stream data on this operation display.

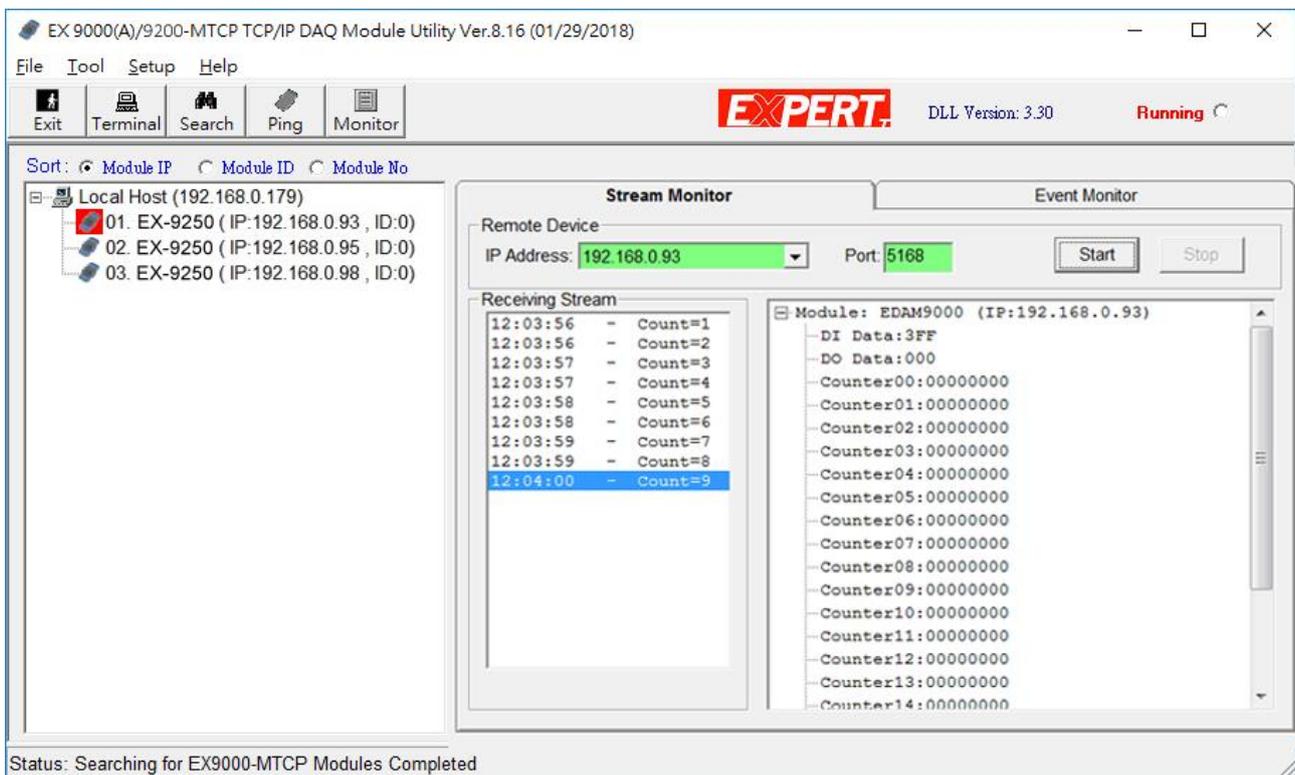


Figure 5-7 Stream display

### Data Event Monitoring:

After finishing the configuration of Data Event(for DI latch Mode), you can select the tab “Event Monitor” in the function bar or click icon to call up operation display as Figure Event display.

Select the IP address of the EX-92xx-MTCP Series you want to read DI data, then click “Start” button. The Utility software will begin to receive the stream DI data(DI changed) on this operation display.

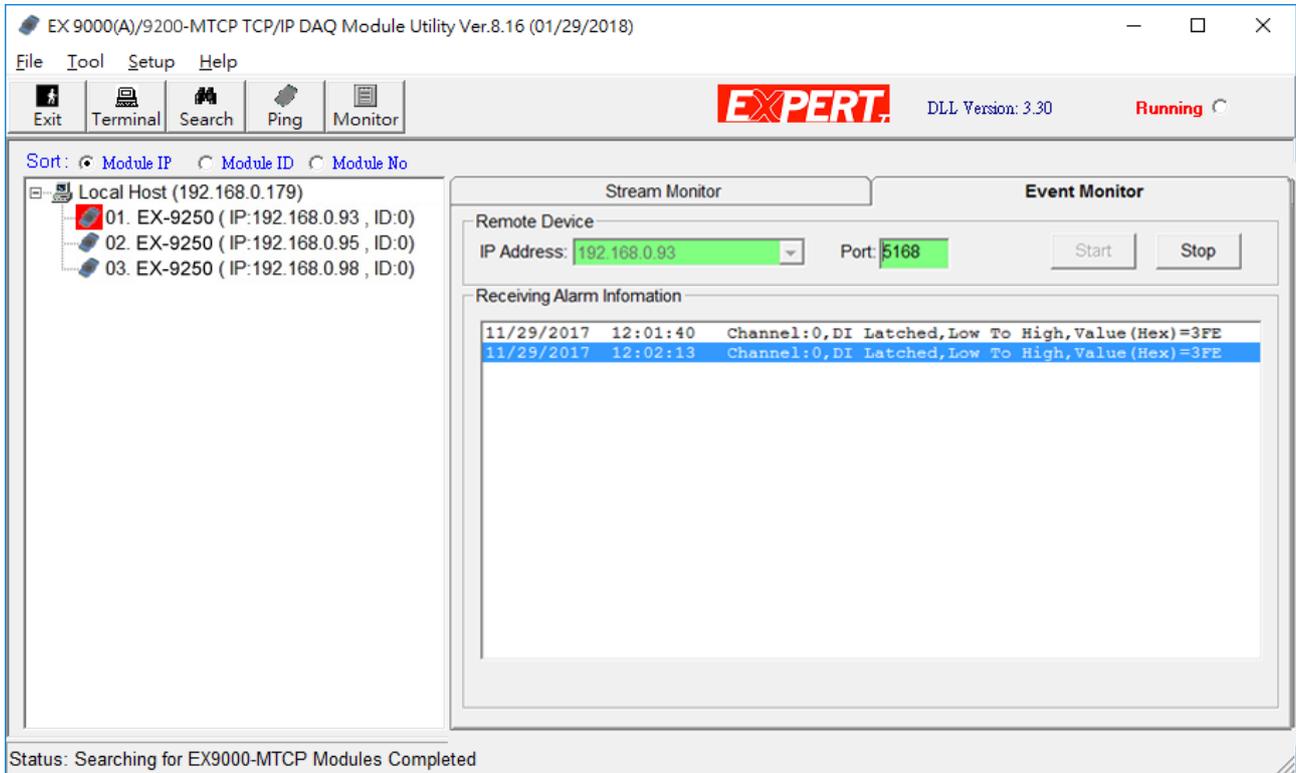


Figure 5-8 Event display

### 5.10 Digital I/O Module Settings

Selecting EX-92xx-MTCP Series Digital Modules and select “Test” tab, user can read following information from the Utility.

#### 5.10.1 Digital Test Tab

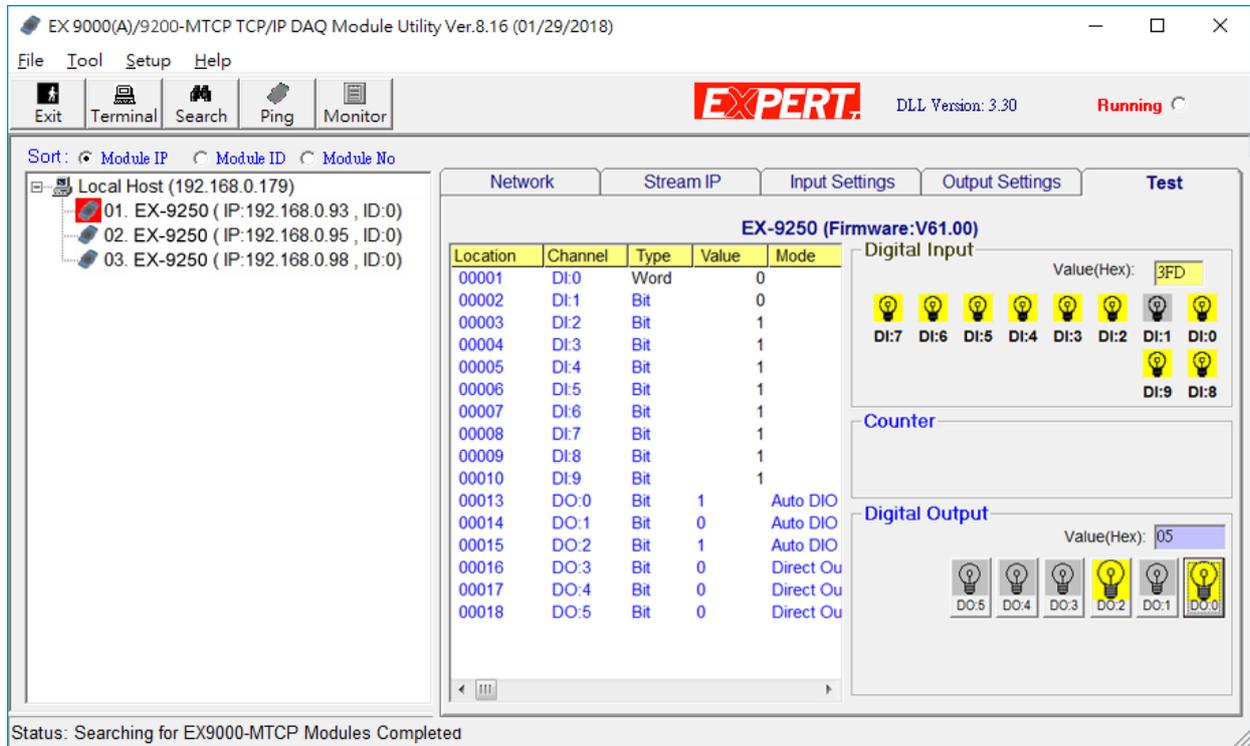


Figure 5-9 ModBus location and I/O status

#### Digital I/O Module Test tab”

- Location** : Standard Modbus address. EXPERTDAQ Ethernet I/O Utility shows the Modbus mapping address of each I/O channel. And the addresses will be the indexes for applying into the database of HMI or OPC Server.
- Channel** : Indicate the channel number of digital I/O module.
- Type** : Data Type of the I/O channel. The data type of Digital I/O modules is always “Bit”.
- Value** : The current status on each channel of I/O Module. The value of digital I/O modules could be “0” (OFF) or “1” (ON).
- Mode** : Describes the I/O types of the specific module. In addition to monitor the current DI/DO status, the Windows Utility offers a graphical operating interface as Figure1 12 DI/O status display. You can read the Digital input status through the change of the indicator icons. Oppositely, you can write the digital output status through clicking the indicator icons.

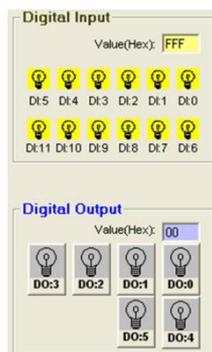


Figure 5-10 DI/O status display

### 5.10.2 Digital Input Settings Tab

The digital input channels support counter and signal latch functions. Click the specific channel, there will be five working modes for choosing.

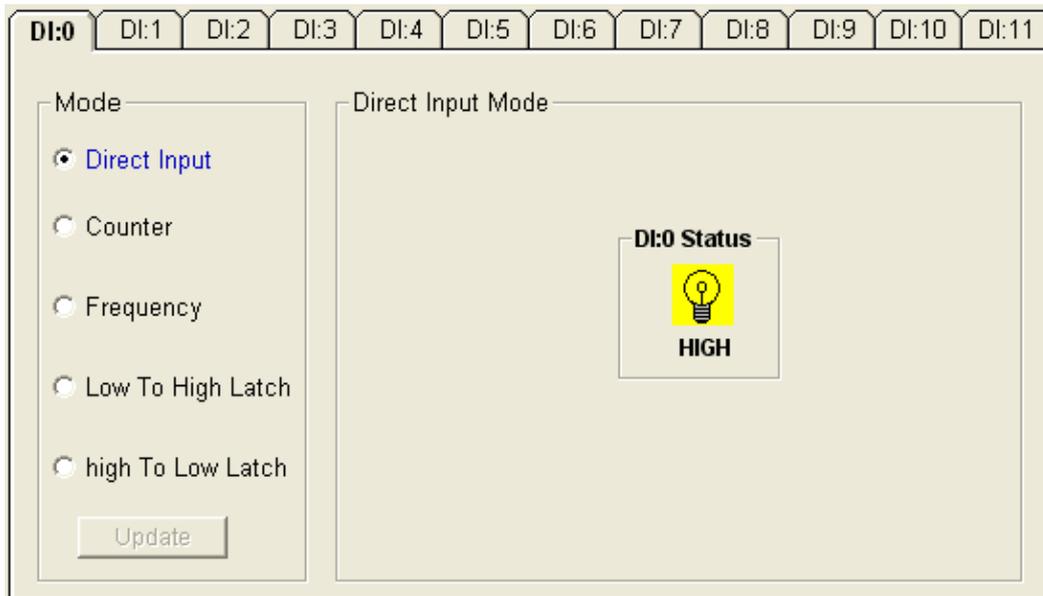


Figure 5-11 Direct input mode

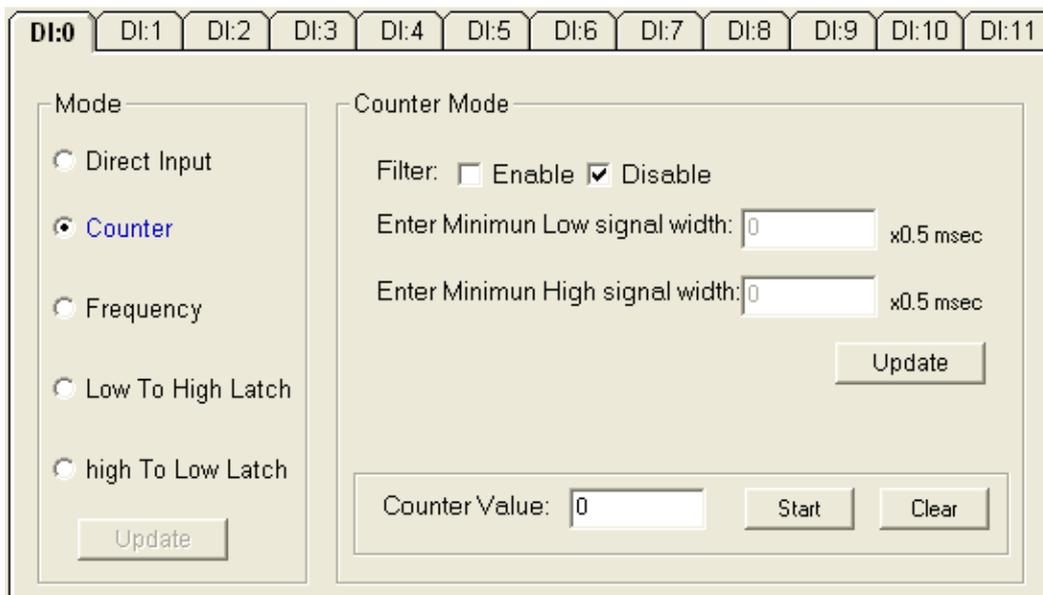


Figure 5-12 Counter mode

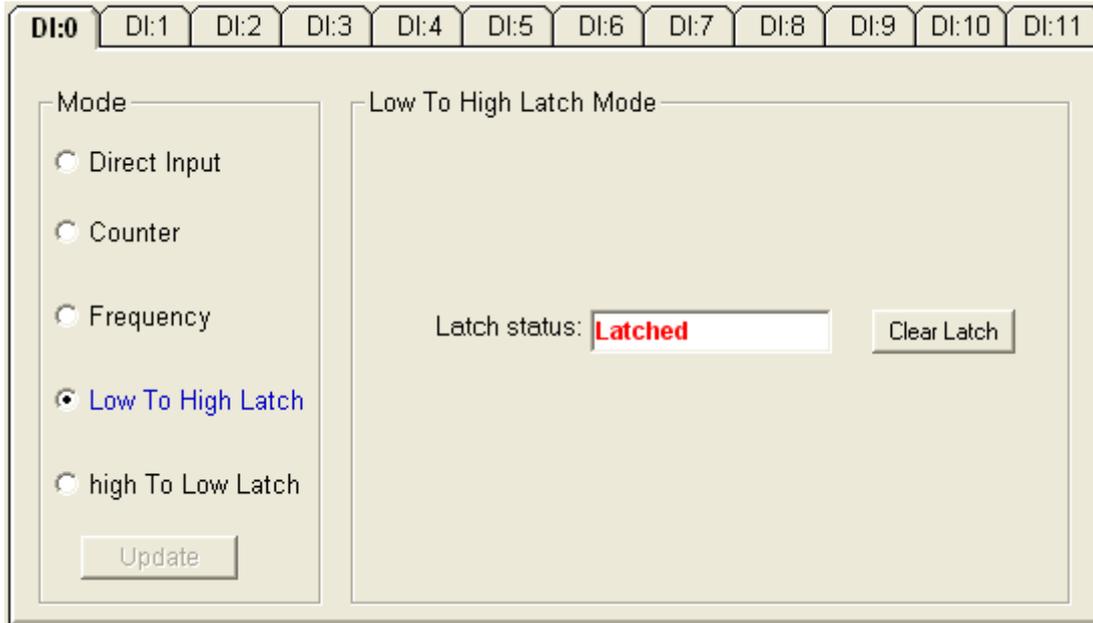


Figure 5-13 Input latch mode

**Note:**

1. The new working mode setting will take effective after click the "Update" button.
2. If necessary, users could invert the original single for flexible operation needs.
3. Supported Data Event Monitoring.

### 5.10.3 Digital Output Settings Tab

The digital output channels support pulse output and delay output functions. Click the specific channel, there will be four working modes for choosing.

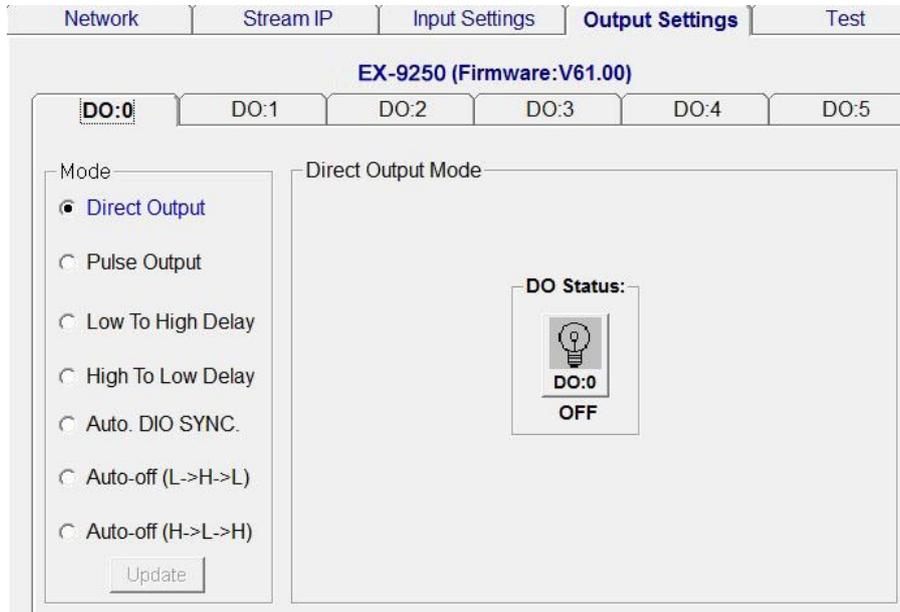


Figure 5-14 Direct output mode

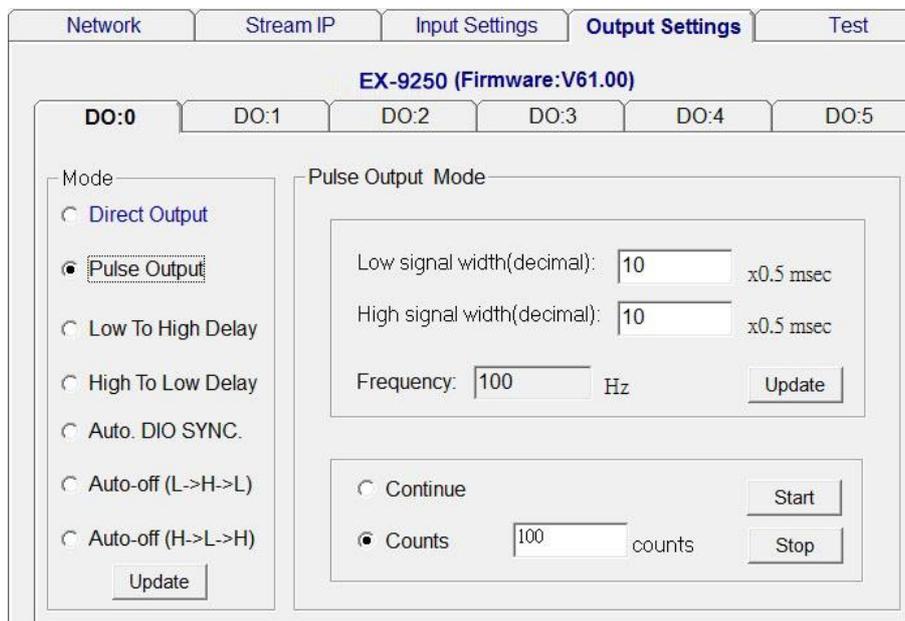


Figure 5-15 Pulse output mode

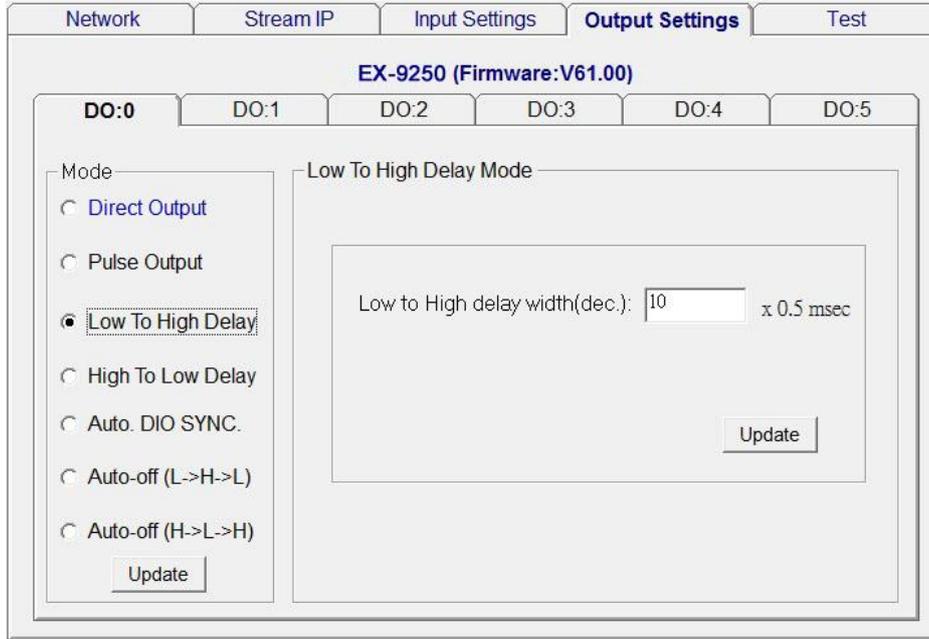


Figure 5-16 Low to High Delay mode

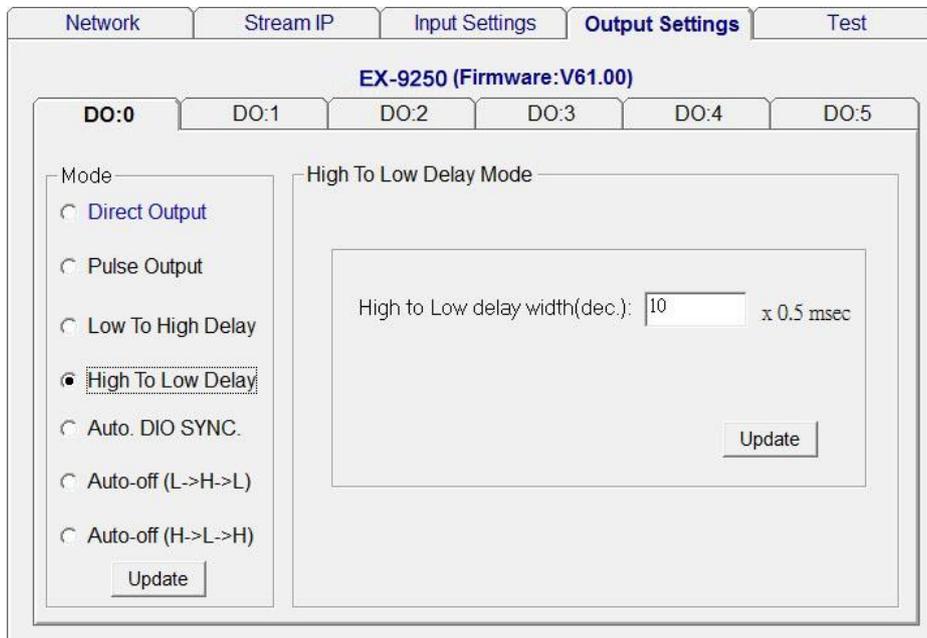


Figure 5-17 High to Low Delay mode

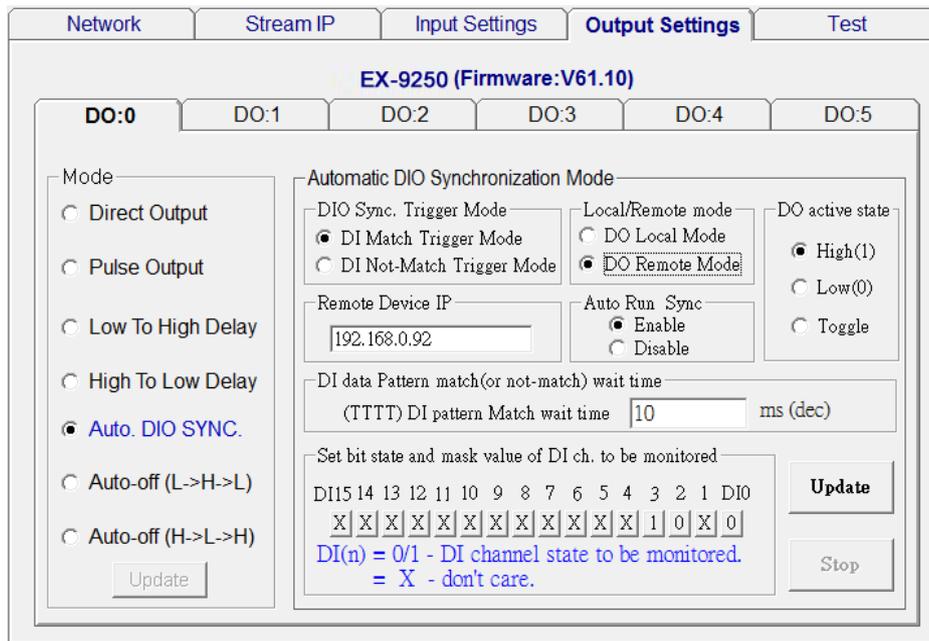


Figure 5-18 Auto DIO SYNC. mode

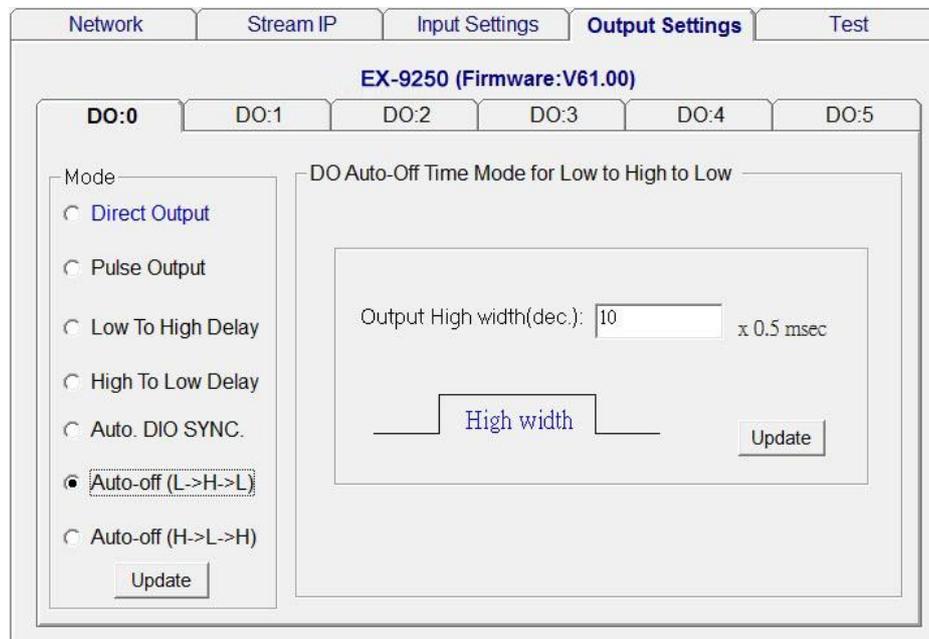


Figure 5-19 Auto-Off Time(L->H->L) Mode

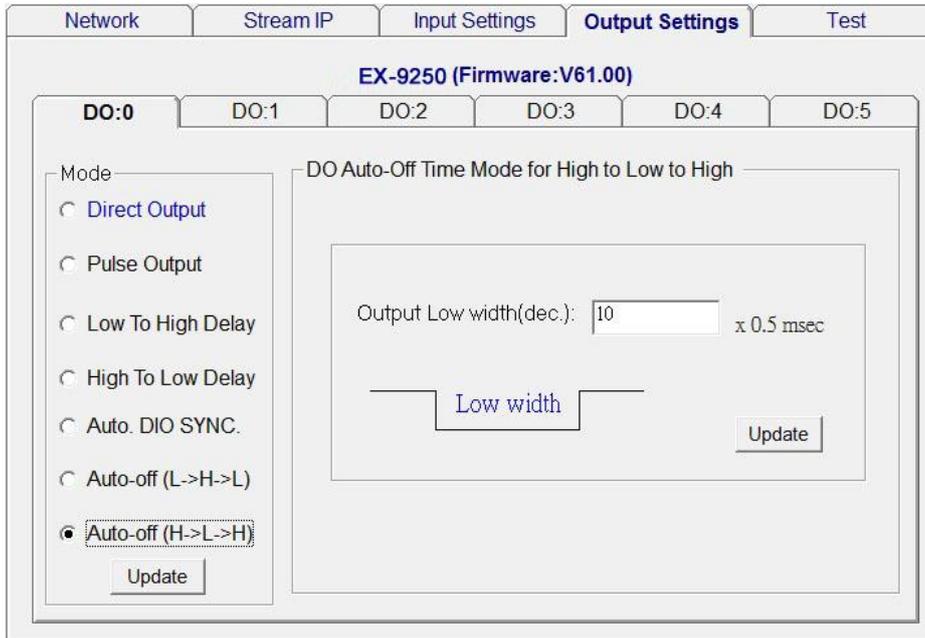


Figure 5-20 **Auto-Off Time(H->L->H) Mode**



## Chapter 6 What is TCPDAQ ActiveX Control ?

TCPDAQ.OCX is a collection of ActiveX controls for performing I/O operations within any compatible ActiveX control container, such as Visual Basic, Delphi, etc. You can easily perform the I/O operations through properties, events and methods. Specific information about the properties, methods, and events of the TCPDAQ ActiveX controls can be found later in this manual.

With TCPDAQ ActiveX Control, you can perform versatile I/O operations to control your TOPSCCC EX-92xx-MTCP Series module Series.

The TCPDAQ ActiveX Control setup program installs TCPDAQ.OCX through a process that may take several minutes. Installing the necessary software to use the TCPDAQ.OCX in your application involves two main steps: Installing the TCPDAQ ActiveX Control

Use the TOPSCCC EX-92xx-MTCP Series utility to configure the modules that is attached to your computer.

You can use these ActiveX controls in any development tool that supports them, including Microsoft Visual C++, Microsoft Visual Basic, Borland C++ Builder, Borland Delphi

### 6.1 Installing the TCPDAQ ActiveX Controls

Before using the TCPDAQ ActiveX Control, you must install the TCPDAQ.OCX first

- ◆ Insert the TCPDAQ installation CD-ROM disc into your computer.
- ◆ The installation program should start automatically. If autorun is not enabled on your computer, use your Windows Explorer or the Windows Run command to execute Setup.exe on the TCPDAQ installation CD-ROM disc (Assume "d" is the letter of your CD-ROM disc drive): **D: \Setup.exe**

### 6.2 Building TCPDAQ ActiveX Control with Various Tools

This chapter describes how you can use the TCPDAQ ActiveX Control with the following development tools:

- ◆ Microsoft Visual C++ version 6.0 (SP5)
- ◆ Microsoft Visual Basic version 6.0 (SP5)
- ◆ Borland Delphi version 4.0 (with the Delphi 6 Update Pack fixes for ActiveX installed)
- ◆ Borland C++ Builder version 5.0

This chapter assumes that you are familiar with the basic concepts of using Visual Basic, Delphi, Borland C++ Builder, and Visual C++, including selecting the type of application, designing the form, placing the control on the form, configuring the properties of the control, creating the code (event handler routines) for this control.


**Note:** For Borland Delphi 6, the Delphi 6 Update Pack fixes for ActiveX must be installed.

## 6.3 Building TCPDAQ Applications with Visual Basic


- ◆ Start Visual Basic.



- ◆ Select **Standard EXE** icon and press the **Open** button. A new project is created. Click on **Components...** from the **Project** menu. The Components dialog box is loaded as shown below:

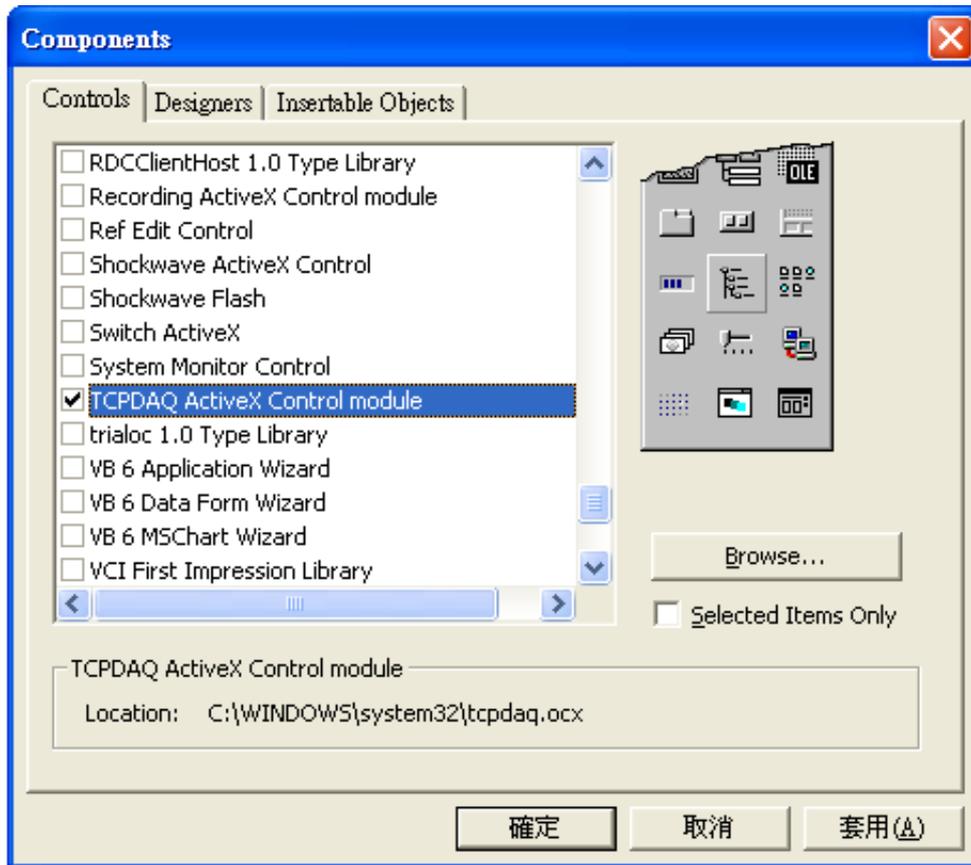


- ◆ Place a TCPDAQ control from the Toolbox on the form. Use the default name.
- ◆ Your form should look similar to the one shown below:

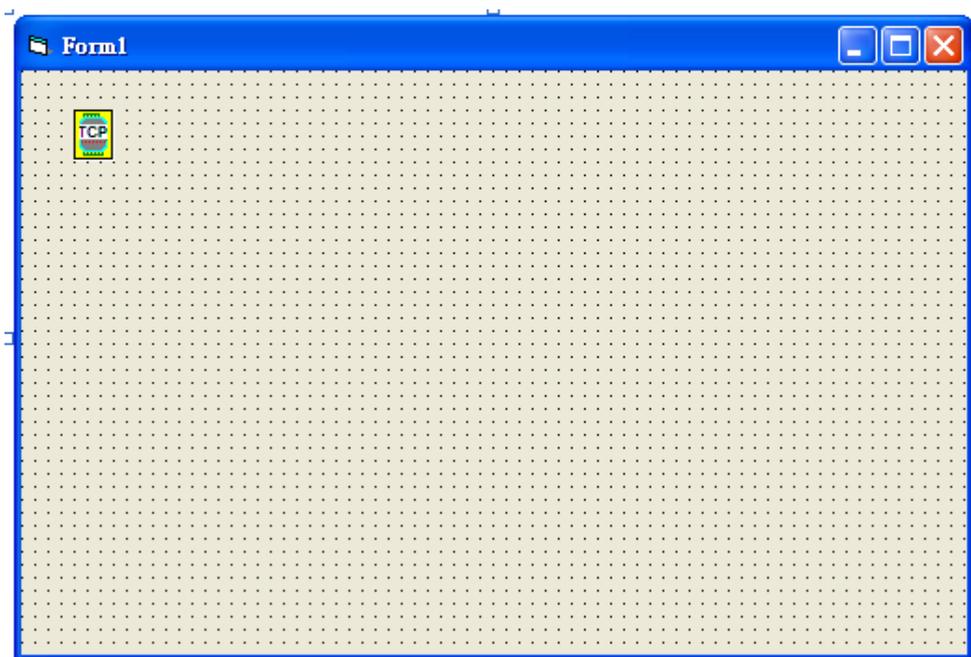


### 6.4 Building TCPDAQ Applications with Delphi


- ◆ Start Delphi, Delphi will launch as shown below:
- ◆ Select **Import ActiveX Control...** from the **Component** menu. The Import ActiveX dialog box loads:
- ◆ Select the [TCPDAQ ActiveX Control Module](#) and press the **Install...** button. A dialog box is displayed as follows:

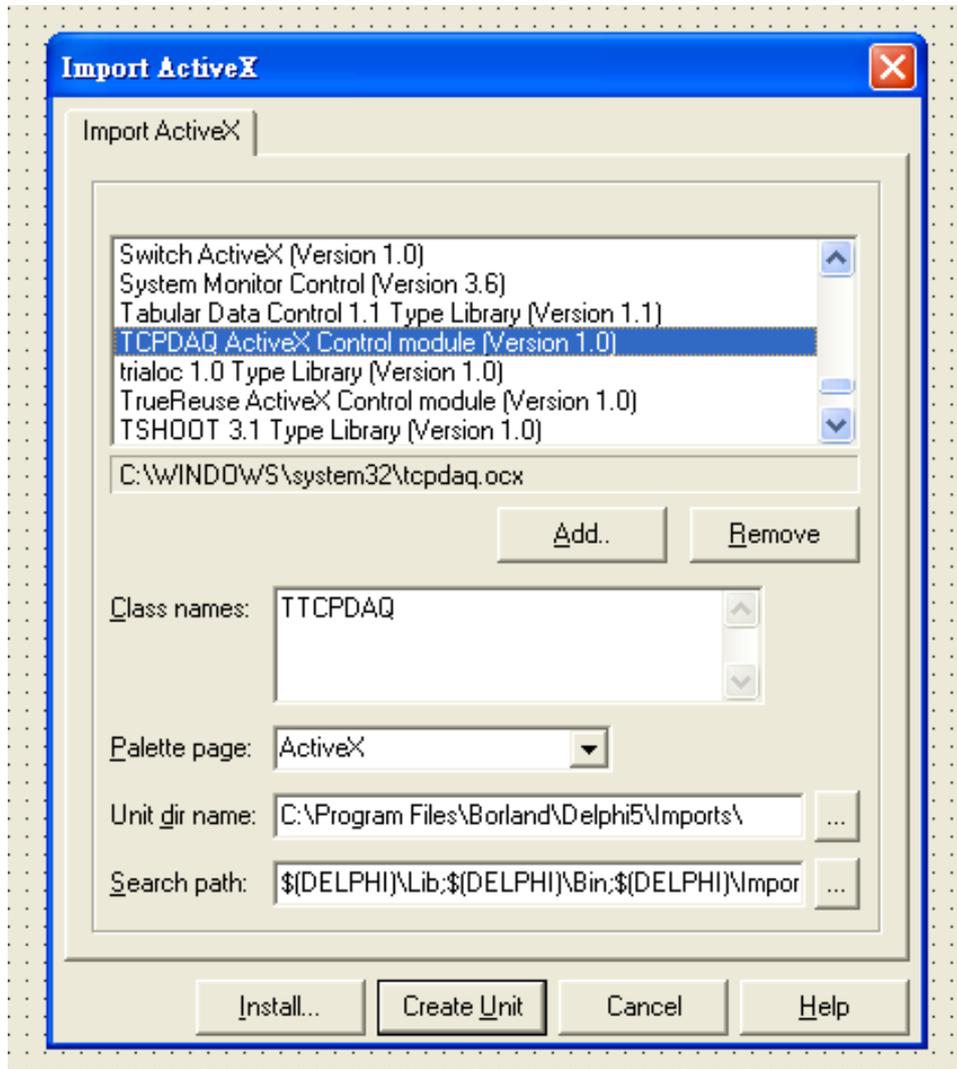

The [TCPDAQ control](#) is loaded into the **Component Palette**. You can check it by clicking on **Install Package...** from the **Component** menu. A dialog box is shown as below.

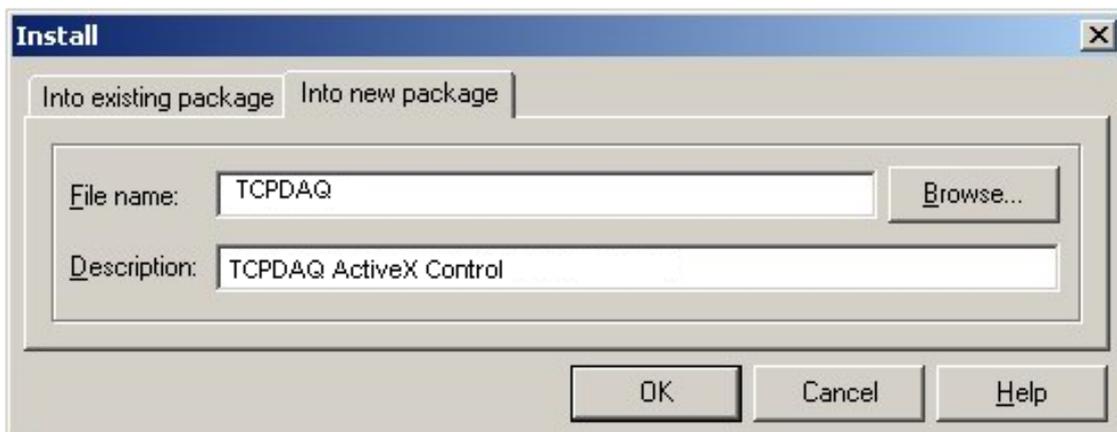


- ◆ Switch to the form and select the ActiveX tab from the **Component Palette**.
- ◆ Place a [TCPDAQ](#) control from the **Component Palette** on the form. Use the default names TCPDAQ1.
- ◆ Your form should look similar to the one shown below:

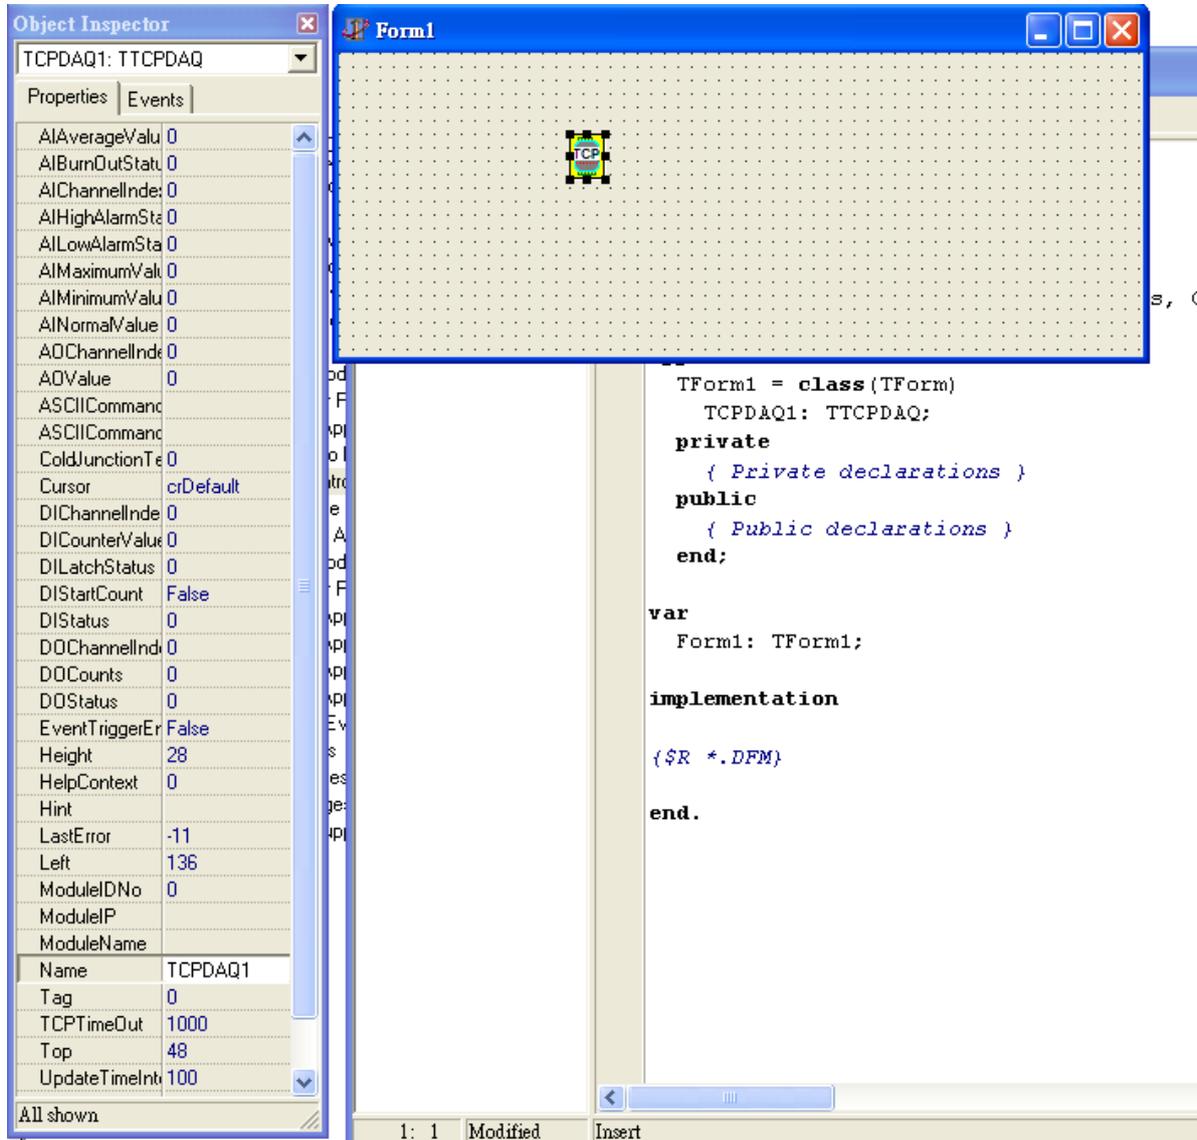


### 6.5 Building TCPDAQ Applications with Visual C++

- ◆ Start Visual C++ program.
- ◆ Select **Add to Project** → **Components and Controls** from the **Project** menu, and double-click on **Registered ActiveX Controls**. The result should be as below:

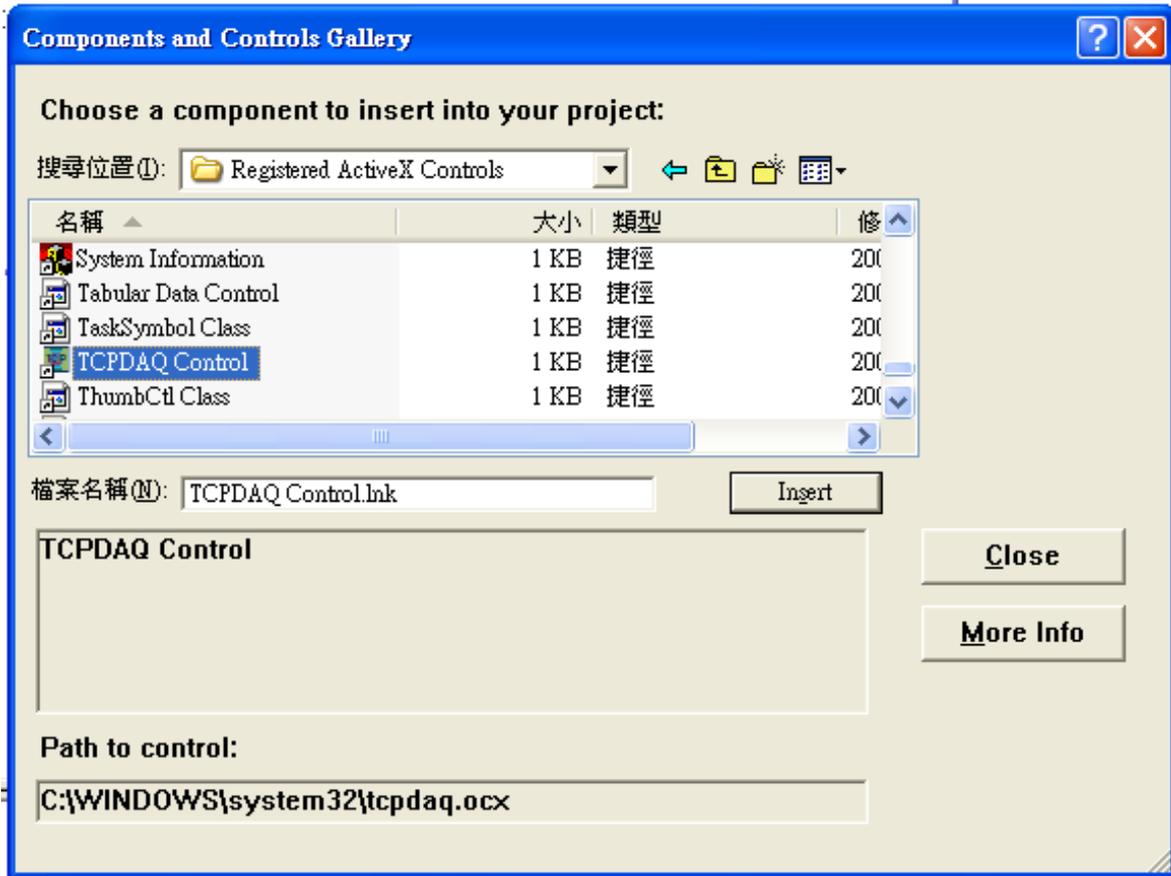

- ◆ Scroll down to the [TCPDAQ Control](#) and press the **Insert** button. A Class Confirm dialog box is displayed, Press **OK** button.

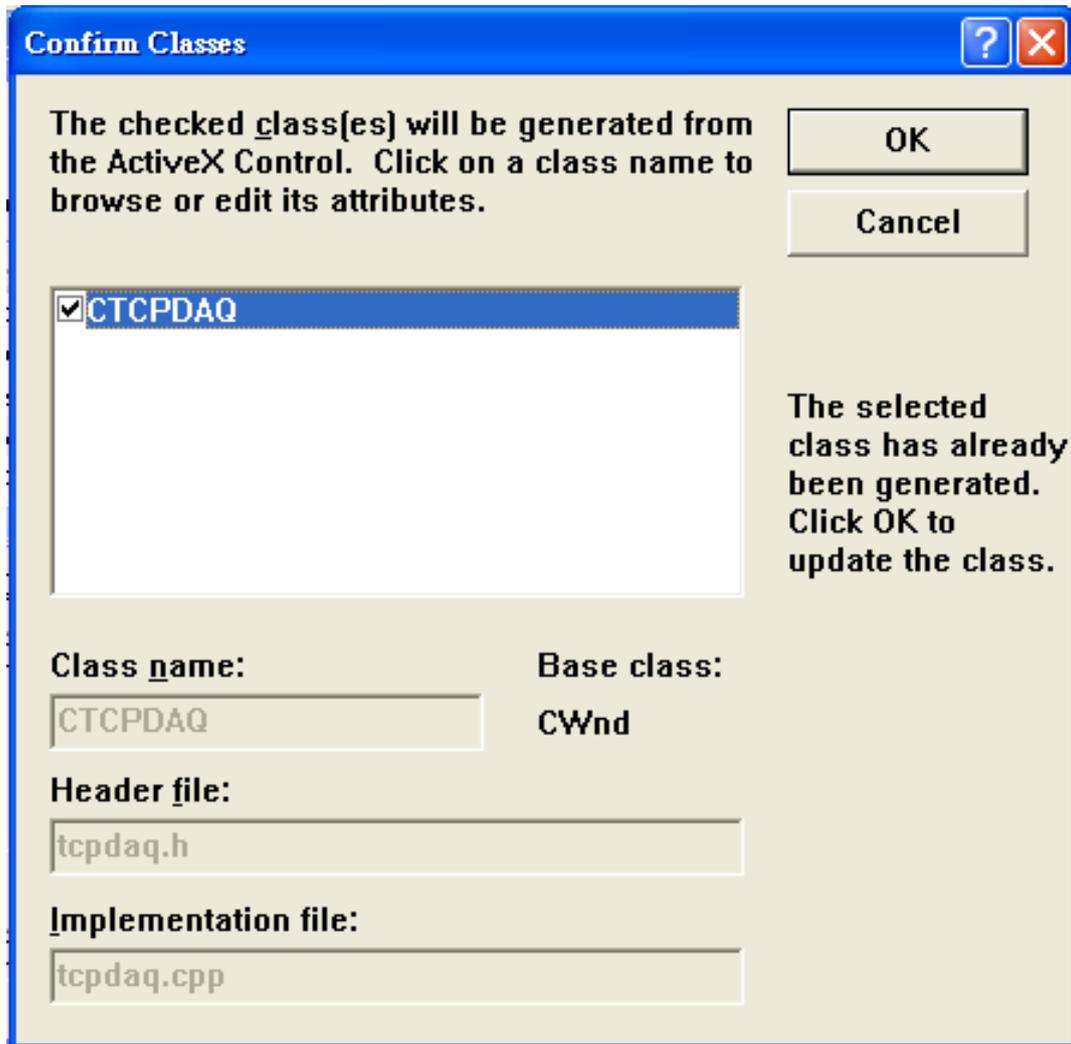


- ◆ The [TCPDAQ](#) control will be showed in Visual C++ Toolbar.
- ◆ Place a [TCPDAQ](#) control from the Controls Toolbar on the dialog-based form.




### 6.6 Building TCPDAQ Applications with Borland C++ Builder

- ◆ Start Borland C++ Builder (BCB), BCB will launch as shown below:
- ◆ Select **Import ActiveX Control...** from the **Component** menu. The Import ActiveX dialog box loads:
- ◆ Select the [TCPDAQ Control](#) and press the **Install...** button. A dialog box is displayed as follows:

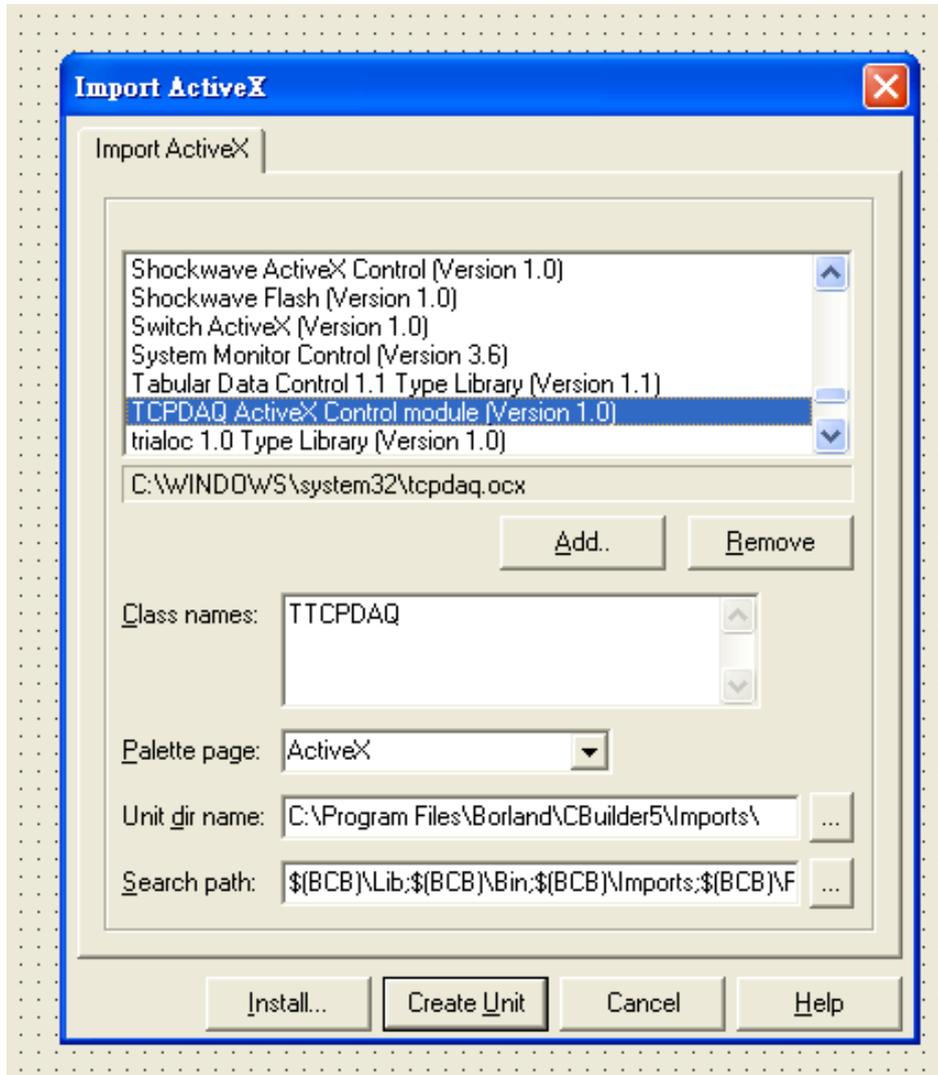

- ◆ Enter "TCPDAQ" into the File name field under the **Into new package** tab, and press **OK** button. A Confirm dialog box is displayed. press **"Yes"** button.
- ◆ The [TCPDAQ control](#) is loaded into the **Component Palette**. You can check it by clicking on **Install Package...** from the **Component** menu. A dialog box is shown as below.

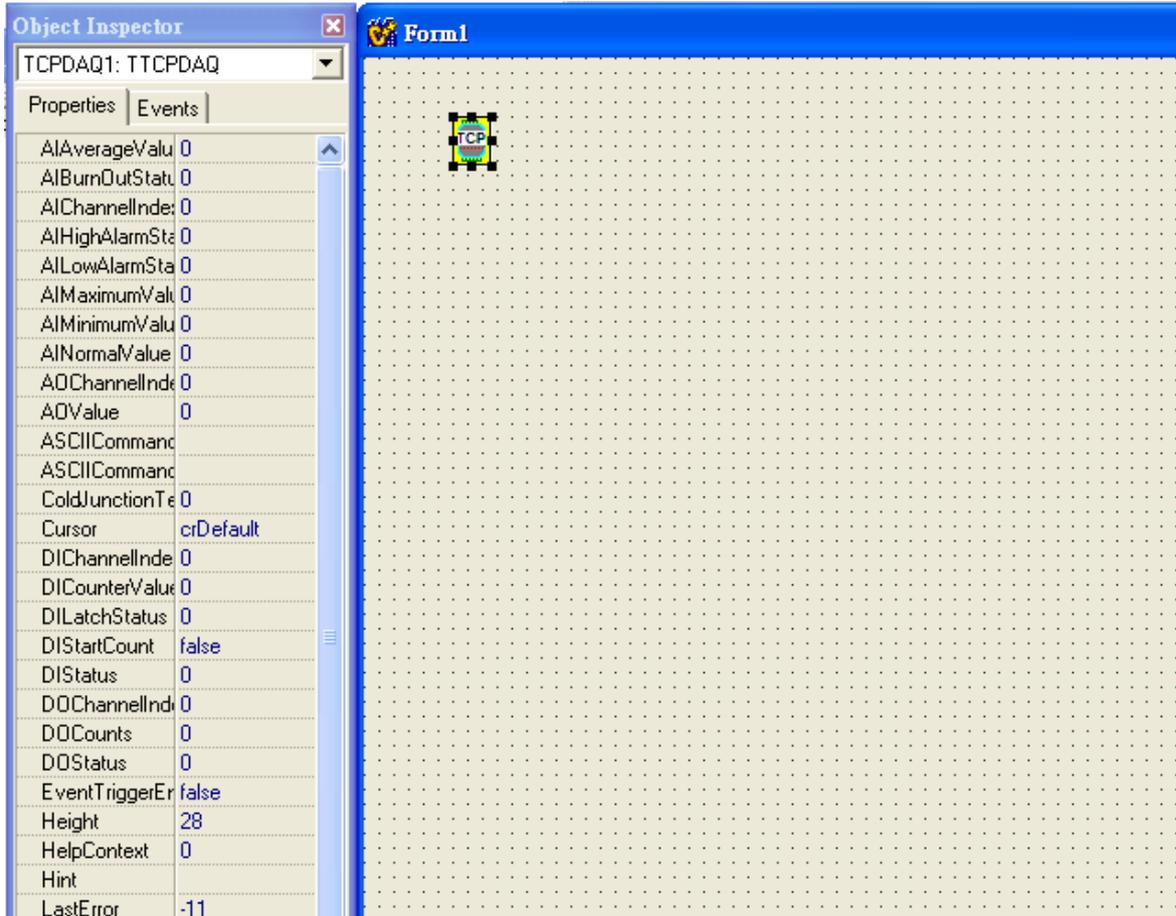

6.7 Properties of TCPDAQ ActiveX Control

| Name                | Type    | Description   | Available Model(s) |
|---------------------|---------|---|--------------------|
| AOValue             | double  | Set the analog output voltage   | All models         |
| ASCIICommandReceive | string  | Return the ASCII response message from module   | All models         |
| ASCIICommandSend    | string  | Send the ASCII command message to module  | All models         |
| DIChannelIndex      | short   | Specifies the digital input channel to perform other DI properties read/write operation.                                  | All DIO models     |
| DIcounterValue      | long    | Return the counting value for the specific DI channel which functions in "Count/Frequency mode"                           | All DIO models     |
| DILatchStatus       | short   | Return the latch status for the specific DI channel which functions in "Lo-Hi/Hi-Lo latch mode" (1=Latched, 0=No latched) | All DIO models     |
| DIStartCount        | boolean | Start/stop counting for the specific DI channel which functions in "Count/Frequency mode" (True=Start, 0=Stop)            | All DIO models     |
| DIStatus            | short   | Return the status for the specific DI channel which functions in "DI mode" (1=Active, 0=Inactive)                         | All DIO models     |
| DOChannelIndex      | short   | Specifies the digital output channel to perform other DO properties read/write operation.                                 | All DIO models     |
| DOCount             | long    | Set the output count value for the specific DO channel which functions in "Pulse output mode"                             | All DIO models     |
| DOStatus            | short   | Return/set the status for the specific DO channel which functions in "D/O mode" (1=Active, 0=Inactive)                    | All DIO models     |
| EventTriggerEnable  | boolean | Enable/disable event trigger mode (True=Enable, False=Disable)  | All models         |
| LastError           | short   | Return the Error code of operation  | All models         |
| ModuleIDNo          | short   | Return the module ID number   | All models         |
| ModuleIP            | string  | Set the remote module IP address  | All models         |
| ModuleName          | string  | Return the module name  | All models         |
| TCPTimeOut          | long    | Return/set the TCP/IP Timeout (ms)  | All models         |
| UpdateTimeInterval  | long    | Return/set data update time interval(ms)  | All models         |

6.8 Methods of TCPDAQ ActiveX Control

| Name            | Arguments  | Returned type | Description   |
|-----------------|--|---------------|---|
| Open            | None   | None          | Open TCPDAQ.OCX to start operation (Must be called before accessing properties at run time) |
| Close           | None   | None          | Close TCPDAQ.OCX(Must be called before terminating the APP)                                 |
| ModBusReadCoil  | short Startaddress<br>short Counts<br>short coildata[] | None          | Read coil data from remote module, and stored into coildata[] buffer                        |
| ModBusWriteCoil | shot StartAddress<br>short Counts<br>short coildata[]  |               | Write coil data stored in coildata[] buffer to remote module                                |
| ModBusReadReg   | short Startaddress<br>short Counts<br>short regdata[]  | None          | Read holding register data from remote module, and stored into regdata[] buffer             |
| ModBusWriteReg  | shot StartAddress<br>short Counts<br>short regdata[]   |               | Write register data stored in regdata[] buffer to remote module                             |

6.9 Events of TCPDAQ ActiveX Control

| Name             | Arguments  | Returned type | Description  |
|------------------|--|---------------|--|
| OnError          | short ErrCode(out)<br>string Errmsg(out)   | None          | be called when error occurred                                    |
| EventDataArrival | string Datetime(out)<br>short EventChannel(out)<br>short EventType(out)<br>short EventStatus(out)<br>short EventValue(out) | None          | be called when received an event data from the remote module (*) |

(\*): Please see [TCPDAQ\\_Data\\_Structure.pdf](#) file to understand the means of parameters

6.10 Building TCPDAQ ActiveX Applications with Various Development Tools

The demo programs of TCPDAQ ActiveX control module are included in the provided DISC. The Installed folders include the demo programs for various development tools.

**Chapter 7 TCPDAQ DLL API**

**7.1 Common Functions**

| NO. | Function Name         | Description  | Sec. |
|-----|-----------------------|--|------|
| 1   | TCP_Open              | To initiate the TCPDAQ.dll to use.   |      |
| 2   | TCP_Close             | To terminates use of the TCPDAQ.dll.   |      |
| 3   | TCP_Connect           | To create a Window TCP socket then establishing a connection to a specific EX-92xx-MTCP Series(A)  |      |
| 4   | TCP_Disconnect        | Disconnecting the Window TCP socket from all EX-92xx-MTCP Series modules   |      |
| 5   | TCP_ModuleDisconnect  | Disconnecting the Window TCP socket from a specific EX-92xx-MTCP Series  |      |
| 6   | TCP_SendData          | Send data to a specific EX-92xx-MTCP Series(A) module  |      |
| 7   | TCP_RecvData          | Receive data to a specific EX-92xx-MTCP Series(A) module   |      |
| 8   | TCP_SendReceiveASCcmd | To accept an ASCII format string as a command, and transform it to meet the Modbus/TCP's specification. Then sending it to EX-92xx-MTCP Series(A) and receiving the response from EX-92xx-MTCP Series(A) |      |
| 9   | UDP_Connect           | To create a Window UDP socket then establishing a connection to a specific EX-92xx-MTCP Series(A)  |      |
| 10  | UDP_Disconnect        | Disconnecting the Window UDP socket from all EX-92xx-MTCP Series(A) modules  |      |
| 11  | UDP_ModuleDisconnect  | Disconnecting the Window UDP socket from a specific EX-92xx-MTCP Series(A)   |      |
| 12  | UDP_SendData          | Send data to a specific EX-92xx-MTCP Series(A) module  |      |
| 13  | UDP_RecvData          | Receive data to a specific EX-92xx-MTCP Series(A) module   |      |
| 14  | UDP_SendReceiveASCcmd | Direct send an ASCII format string as a command, and receive the response from EX-92xx-MTCP Series(A)  |      |
| 15  | TCP_GetModuleIPinfo   | Return module IP information of a specific module  |      |
| 16  | TCP_GetModuleID       | Return module ID number of a specific module   |      |
| 17  | TCP_GetIPFromID       | Return IP address of a specific module ID number   |      |
| 18  | TCP_ScanOnLineModules | Scan all on-line EX-92xx-MTCP Series(A) modules  |      |
| 19  | TCP_GetDLLVersion     | Return the DLL's version, that is the version of TCPDAQ.DLL  |      |
| 20  | TCP_GetModuleNo       | Return the module name of a specific IP address  |      |
| 21  | TCP_GetLastError      | Return the error code of the latest called function  |      |
| 22  | TCP_PingIP            | Ping to Remote IP address  |      |

**7.2 Stream/Event Functions**

|                    |  |        |
|--------------------|--|--------|
| TCP_StartStream    | To instruct the PC to start to receive stream data that coming from EX-92xx-MTCP Series      |        |
| TCP_StopStream     | To instruct the PC to stop receiving stream data from all modules                            |        |
| TCP_ReadStreamData | To receive stream data that coming from the specific EX-92xx-MTCP Series(A)                  |        |
| TCP_StartEvent     | To instruct the PC to start to receive alarm event data that coming from EX-92xx-MTCP Series | 7.5.26 |
| TCP_StopEvent      | To instruct the PC to stop receiving alarm event data from all modules                       |        |

|                   |  |  |
|-------------------|--|--|
| TCP_ReadEventData | To receive alarm event data that coming from the specific EX-92xx-MTCP Series(A) |  |
|-------------------|--|--|

## 7.3 Digital I/O Functions

|                        |  |  |
|------------------------|--|--|
| TCP_ReadDIOMode        | To read the type for every D/I & D/O channels of an EX-92xx-MTCP Series(A) module                  |  |
| TCP_ReadDIO            | To read DI/DO's status for an EX-92xx-MTCP Series(A) module  |  |
| TCP_ReadDISignalWidth  | To read the minimal high/low signal width of each D/I channel for an EX-92xx-MTCP Series(A) module |  |
| TCP_WriteDISignalWidth | To set the minimal high/low signal width of each D/I channel for an EX-92xx-MTCP Series(A) module  |  |
| TCP_ReadDICounter      | To read the counter value when a D/I channel function in 'Counter' mode                            |  |
| TCP_ClearDICounter     | To clear the counter value when a D/I channel function in 'Counter' mode                           |  |
| TCP_StartDICounter     | To start the counting when a D/I channel function in 'Counter' mode                                |  |
| TCP_StopDICounter      | To stop the counting when a D/I channel function in 'Counter' mode                                 |  |
| TCP_ClearDILatch       | To clear the latch when a D/I channel function as 'Lo to Hi Latch' or 'Hi to Lo Latch'             |  |
| TCP_ReadDILatch        | To read the counter value when a D/I channel function in 'Counter' mode                            |  |
| TCP_WriteDO            | To write some value to D/O channels for an EX-92xx-MTCP Series(A) module                           |  |
| TCP_WriteDOPulseCount  | To write the pulse output count for EX-92xx-MTCP Series(A) DIO modules during runtime              |  |
| TCP_WriteDODelayWidth  | To set the pulse and delay signal widths to the specific EX-92xx-MTCP Series(A) DIO modules        |  |
| TCP_ReadDODelayWidth   | To read the pulse and delay signal width from the specific EX-92xx-MTCP Series(A) DIO modules      |  |

## 7.4 MODBUS/TCP Functions

|                      |  |  |
|----------------------|--|--|
| TCP_MODBUS_ReadCoil  | To read the coil values at a specific range described in parameters                  |  |
| TCP_MODBUS_WriteCoil | To write the coil values at a specific range described in parameters.                |  |
| TCP_MODBUS_ReadReg   | To read the holding register value at a specific range described in parameters       |  |
| TCP_MODBUS_WriteReg  | To write values to the holding registers at a specific range described in parameters |  |

## 7.5 Function Description

The TCPDAQ.DLL function declarations are all included in following files that are attached with the provided DISC.

- ◆ TCPDAQ.h : Include file for both VC++ and Borland C++ Builder
- ◆ TCPDAQ.lib : Library file for VC++
- ◆ TCPDAQ\_BC.lib : Library file for Borland C++ Builder
- ◆ TCPDAQ.bas : Module file for Visual Basic
- ◆ TCPDAQ.pas : Module file for Delphi

**You need to add the above file into your AP project before using TCPDAQ.DLL functions**

### 7.5.1 TCP\_Open

**Description:** To initiate the TCPDAQ.dll to use.

Syntax:

- ◆ **Visual Basic:** (see TCPDAQ.bas)  
Declare Sub TCP\_Open Lib "TCPDAQ.dll" Alias "\_TCP\_Open@0" ()
  - ◆ **Borland C++ Builder:** (see TCPDAQ.h)  
int TCP\_Open();
  - ◆ **Delphi:** (see TCPDAQ.pas)  
function TCP\_Open(); StdCall;
  - ◆ **VC++:** (see TCPDAQ.h)  
int TCP\_Open();
- Parameters:** void
- Return Code:** refer to the [Error code](#).

### 7.5.2 TCP\_Close

**Description:** To terminates use of the TCPDAQ.dll.

Syntax:

- ◆ **Visual Basic:** (see TCPDAQ.bas)  
Declare Sub TCP\_Close Lib "TCPDAQ.dll" Alias "\_TCP\_Close@0" ()
  - ◆ **Borland C++ Builder:** (see TCPDAQ.h)  
int TCP\_Close();
  - ◆ **Delphi:** (see TCPDAQ.pas)  
function TCP\_Close(); StdCall;
  - ◆ **VC++:** (see TCPDAQ.h)  
int TCP\_Close();
- Parameters:** void
- Return Code:** refer to the [Error code](#).

### 7.5.3 TCP\_Connect

**Description:** to create a Window TCP socket then establishing a connection to a specific EX-92xx-MTCP Series

Syntax:

- ◆ **Visual Basic:** (see TCPDAQ.bas)  
Declare Function TCP\_Connect Lib "TCPDAQ.dll" Alias "\_TCP\_Connect@20" ( ByVal szIP As String, ByVal port As Integer, ByVal ConnectionTimeout As Long, ByVal SendTimeout As Long, ByVal ReceiveTimeout As Long) As Long
- ◆ **Borland C++ Builder:** (see TCPDAQ.h)  
int TCP\_Connect( char szIP[],u\_short port,int ConnectionTimeout, int SendTimeout,int ReceiveTimeout);
- ◆ **Delphi:** (see TCPDAQ.pas)  
FunctionTCP\_Connect ( szIP: PChar; port: Integer; ConnectionTimeout: Longint; SendTimeout:

Longint;ReceiveTimeout: Longint): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_Connect(char szIP[],u\_short port,int ConnectionTimeout, int SendTimeout, int ReceiveTimeout);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- port[in] : the TCP/IP port used by Modbus/TCP, it is 502
- ConnectionTimeout[in] : Connection timeout value (msec)
- SendTimeout[in] : Send timeout value (msec)
- ReceiveTimeout[in] : Receive timeout value (msec)

**Return Code:** refer to the [Error code](#).

## 7.5.4 TCP\_Disconnect

**Description:** disconnecting the Window TCP socket from all EX-92xx-MTCP Series modules

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Sub TCP\_Disconnect Lib "TCPDAQ.dll" Alias "\_TCP\_Disconnect@0" ()

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

void TCP\_Disconnect(void);

◆ **Delphi:** (see *TCPDAQ.pas*)

procedure TCP\_Disconnect ; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

void TCP\_Disconnect(void);

**Parameters:** void

**Return Code:** none.

## 7.5.5 TCP\_ModuleDisconnect

**Description:** disconnecting the Window TCP socket to a specific EX-92xx-MTCP Series

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ModuleDisconnect Lib "TCPDAQ.dll" Alias "\_TCP\_ModuleDisconnect@4" (ByVal szIP As String) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_ModuleDisconnect(char szIP[]);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ModuleDisconnect (szIP: PChar): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_ModuleDisconnect(char szIP[]);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

**Return Code:** refer to the [Error code](#).

## 7.5.6 TCP\_SendData

**Description:** to send data to a specific EX-92xx-MTCP Series module

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_SendData Lib "TCPDAQ.dll" Alias "\_TCP\_SendData@12" ( ByVal szIP As String, ByRef pData As Byte, ByVal wDataLen As Integer) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_SendData(char szIP[],char \*pData,u\_short wDataLen);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_SendData (szIP: PChar; pData: PByte; wDataLen: Integer): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_SendData(char szIP[],char \*pData,u\_short wDataLen);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

pData[in] : 8 bit data array

wDataLen[in] : length of data be sent

**Return Code:** refer to the [Error code](#).

### 7.5.7 TCP\_RecvData

**Description:** receive data to a specific EX-92xx-MTCP Series module

**Syntax:**◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_RecvData Lib "TCPDAQ.dll" Alias "\_TCP\_RecvData@12" ( ByVal szIP As String, ByVal pData As Byte, ByVal wDataLen As Integer) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_RecvData(char szIP[],char \*pData,u\_short wDataLen);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_RecvData (szIP: PChar; pData: PByte; wDataLen: Integer): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_RecvData(char szIP[],char \*pData,u\_short wDataLen);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

pData[out] : 8 bit data array

wDataLen [in] : length of data array

**Return Code:**

If return value >=0, it represents the length of received data

If return value <0, it represents [Error code](#).

### 7.5.8 TCP\_SendReceiveASCcmd

**Description:** to accept an ASCII format string as a command, and transform it to meet the Modbus/TCP's specification. Then sending it to EX-92xx-MTCP Series and receiving the response from EX-92xx-MTCP Series

**Syntax:**◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_SendReceiveASCcmd Lib "TCPDAQ.dll" Alias "\_TCP\_SendReceiveASCcmd@12" ( ByVal szIP As String, ByVal Sendbuf As String, ByVal Recvbuf As String) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_SendReceiveASCcmd(Char szIP[], char Sendbuf [], char Recvbuf []);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_SendReceiveasCcmd (szIP: PChar; Sendbuf: PChar; Recvbuf: PChar): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_SendReceiveASCcmd(Char szIP[], char Sendbuf[], char Recvbuf[]);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

Sendbuf [in] : 8 bit data array to be sent

Recvbuf [out] : 8 bit data array that stored the received data

**Return Code:** refer to the [Error code](#).

### 7.5.9 UDP\_Connect

**Description:** to create a Window UDP socket then establishing a connection to a specific EX-92xx-MTCP Series

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function UDP_Connect Lib "TCPDAQ.dll" Alias "_UDP_Connect@24" ( ByVal szIP As String, ByVal s_port
    As Integer, ByVal d_port As Integer, ByVal ConnectionTimeout As Long, ByVal SendTimeout As Long,
    ByVal ReceiveTimeout As Long) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
Int    UDP_Connect(char szIP[],u_short s_port,u_short d_port, int ConnectionTimeout,
    int SendTimeout, int ReceiveTimeout);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function UDP_Connect (szIP: PChar; s_port: word; d_port: word; ConnectionTimeout: Longint; SendTimeout:
    Longint; ReceiveTimeout: Longint): Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
Int    UDP_Connect(char szIP[],u_short s_port,u_short d_port,int ConnectionTimeout,
    int SendTimeout,int ReceiveTimeout);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
 s\_port : source port number  
 d\_port : destination port number  
 ConnectionTimeout : timeout value for connection (msec)  
 SendTimeout : timeout value for sending (msec)  
 ReceiveTimeout : timeout value for receiving (msec)

**Return Code:** refer to the [Error code](#).

### 7.5.10 UDP\_Disconnect

**Description:** disconnecting the Window UDP socket from all EX-92xx-MTCP Series modules

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Sub UDP_Disconnect Lib "TCPDAQ.dll" Alias "_UDP_Disconnect@0" ()
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
void    UDP_Disconnect(void);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
procedure UDP_Disconnect ; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
void    UDP_Disconnect(void);
```

**Parameters:** void

**Return Code:** None

### 7.5.11 UDP\_ModuleDisconnect

**Description:** disconnecting the Window UDP socket from a specific EX-92xx-MTCP Series

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function UDP_ModuleDisconnect Lib "TCPDAQ.dll" Alias "_UDP_ModuleDisconnect@4" (ByVal szIP As
    String) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int    UDP_ModuleDisconnect(Char szIP[]);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function UDP_ModuleDisconnect (szIP: PChar): Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
int    UDP_ModuleDisconnect(char szIP[]);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be disconnected

**Return Code:** refer to the [Error code](#).

### 7.5.12 UDP\_SendData

**Description:** send data to a specific EX-92xx-MTCP Series module (Datagram)

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function UDP_SendData Lib "TCPDAQ.dll" Alias "_UDP_SendData@12"  
    (ByVal szIP As String, ByVal pData As Byte, ByVal wDataLen As Integer) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int    UDP_SendData(char szIP[],char *pData,u_short wDataLen);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

Function UDP\_SendData (szIP: PChar; pData: PByte; wDataLen: Integer): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

```
int    UDP_SendData(char szIP[],char *pData,u_short wDataLen);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

pData[in] : points to data buffer

wDataLen[in] : length of data be sent

**Return Code:** refer to the [Error code](#).

### 7.5.13 UDP\_RecvData

**Description:** receive data to a specific EX-92xx-MTCP Series module (Datagram)

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function UDP_RecvData Lib "TCPDAQ.dll" Alias "_UDP_RecvData@12"  
    (ByVal szIP As String, ByVal pData As Byte, ByVal wDataLen As Integer) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int    UDP_RecvData(char szIP[],char *pData,u_short wDataLen);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

Function UDP\_RecvData (szIP: PChar; pData: PByte; wDataLen: Integer): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

```
int    UDP_RecvData(char szIP[],char *pData,u_short wDataLen);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

pData[out] : 8 bit array that stored the received data

wDataLen [in] : length of received data

**Return Code:** refer to the [Error code](#).

### 7.5.14 UDP\_SendReceiveASCcmd

**Description:** send an ASCII format string as a command to EX-92xx-MTCP Series and receiving the response from EX-92xx-MTCP Series.

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function UDP\_SendReceiveASCcmd Lib "TCPDAQ.dll" Alias "\_UDP\_SendReceiveASCcmd@12"  
(ByVal szIP As String, ByVal Txdata As \_String, ByVal Rxdata As String) As Long

◆ **Borland C++ Builder:** (see TCPDAQ.h)

int UDP\_SendReceiveASCcmd(char szIP[],char Txdata [],char Rxdata []);

◆ **Delphi:** (see TCPDAQ.pas)

Function UDP\_SendReceiveAsCcmd (szIP: PChar; Txdata:PChar; Rxdata: PChar): Longint; StdCall;

◆ **VC++:** (see TCPDAQ.h)

int UDP\_SendReceiveASCcmd(char szIP[],char Txdata [],char Rxdata []);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- Txdata [in] : 8 bit array that stored the data to be sent
- Rxdata [out] : 8 bit array that stored the received data

**Return Code:** refer to the [Error code](#).

## 7.5.15 TCP\_GetModuleIPinfo

**Description:** return module IP information of a specific module

**Syntax:**

◆ **Visual Basic:** (see TCPDAQ.bas)

Declare Function TCP\_GetModuleIPinfo Lib "TCPDAQ.dll" Alias "\_TCP\_GetModuleIPinfo@8" (ByVal szIP As String,  
ByRef ModuleIP As ModuleInfo) As Long

◆ **Borland C++ Builder:** (see TCPDAQ.h)

Int TCP\_GetModuleIPinfo( char szIP[],struct ModuleInfo \*ModuleIP);

◆ **Delphi:** (see TCPDAQ.pas)

Function TCP\_GetModuleIPinfo (szIP: PChar; var ModuleIP: TModuleInfo): Longint; StdCall;

◆ **VC++:** (see TCPDAQ.h)

Int TCP\_GetModuleIPinfo( char szIP[],struct ModuleInfo \*ModuleIP);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- ModuleIP[out] : a structure array that stroes the module IP information

**Return Code:** refer to the [Error code](#).

## 7.5.16 TCP\_GetModuleID

**Description:** return ID number of a specific module.

**Syntax:**

◆ **Visual Basic:** (see TCPDAQ.bas)

Declare Function TCP\_GetModuleID Lib "TCPDAQ.dll" Alias "\_TCP\_GetModuleID@8" (ByVal szIP As String, ByRef  
ModuleID As Byte) As Long

◆ **Borland C++ Builder:** (see TCPDAQ.h)

Int TCP\_GetModuleID(char szIP[], char \* ModuleID);

◆ **Delphi:** (see TCPDAQ.pas)

Function TCP\_GetModuleID(szIP: PChar; ModuleID: PByte): Longint; StdCall;;

◆ **VC++:** (see TCPDAQ.h)

Int TCP\_GetModuleID(char szIP[], char \* ModuleID);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- ModuleID [in] : the ID number

**Return Code:** refer to the [Error code](#).

### 7.5.17 TCP\_GetIPFromID

**Description:** get IP address for a specific module ID number. This function is helpful when the module is DHCP enabled

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_GetIPFromID Lib "TCPDAQ.dll" Alias "\_TCP\_GetIPFromID@8" (ByVal szID As Byte, ByRef szIP As String) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_GetIPFromID(u\_char szID ,char szIP[]);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_GetIPFromID(szID: Byte; szIP: PChar): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_GetIPFromID(u\_char szID ,char szIP[]);

**Parameters:**

szID[in] : module ID number (0~255)

szIP[out] : 8 bit array that stored the IP address string(such as "192.168.0.2")

**Return Code:** refer to the [Error code](#).

### 7.5.18 TCP\_ScanOnLineModules

**Description:** search on-line EXPERTDAQ900 modules in the same subnet

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ScanOnLineModules Lib "TCPDAQ.dll" Alias "\_TCP\_ScanOnLineModules@8" (ModuleIP As ModuleInfo, ByVal Sortkey As Byte) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_ScanOnLineModules( struct ModuleInfo ModuleIP[], u\_char SortKey);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function Scan\_OnLineModules (var ModuleIP: TModuleInfo; Sortkey: Byte): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_ScanOnLineModules( struct ModuleInfo ModuleIP[], u\_char SortKey);

**Parameters:**

ModuleIP[out] : points to ModuleInfo structure array

SortKey[in] : sortkey word (by IP address,by ID number, or by Module no)

=SORT\_MODULE\_IP ,sort by IP address

=SORT\_MODULE\_ID ,sort by ID number

=SORT\_MODULE\_NO ,sort by module number

**Return Code:** refer to the [Error code](#).

### 7.5.19 TCP\_GetDLLVersion

**Description:** return the version number of TCPDAQ.dll

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_GetDLLVersion Lib "TCPDAQ.dll" Alias "\_TCP\_GetDLLVersion@0" () As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_GetDLLVersion(void);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_GetDLLVersion: Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_GetDLLVersion(void);

**Parameters:** void

**Return Code:** the version number.

### 7.5.20 TCP\_GetModuleNo

**Description:** return the module name of a specific IP address

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_GetModuleNo Lib "TCPDAQ.dll" Alias "\_TCP\_GetModuleNo@8" \_  
(ByVal szIP As String, ByRef Mname As Byte) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_GetModuleNo(char szIP[], char Mname[]);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_GetModuleNo (szIP: PChar; Mname: PByte): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_GetModuleNo(char szIP[], char Mname[]);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
Mname[out] : 8 bit array that stored the module name string

**Return Code:** refer to the [Error code](#).

### 7.5.21 TCP\_GetLastError

**Description:** return the error code of the latest called function

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_GetLastError Lib "TCPDAQ.dll" Alias "\_TCP\_GetLastError@0" () As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_GetLastError(void);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_GetLastError: Longint ; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_GetLastError(void);

**Parameters:** void

**Return Code:** refer to the [Error code](#)

### 7.5.22 TCP\_PingIP

**Description:** ping to remote IP address

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_PingIP Lib "TCPDAQ.dll" Alias "\_TCP\_PingIP@8" (ByVal IPadr As String, ByVal PingTimes As  
Integer) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

int TCP\_PingIP(char szIP[],int PingTimes);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_PingIP(szIP: PChar;PingTimes: Integer): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_PingIP(char szIP[],int PingTimes);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
PingTimes [in] :Timeout value

**Return Code:** = -1, no response from remote IP  
>0, response time from remote IP

### 7.5.23 TCP\_StartStream

**Description:** to instruct the PC to start to receive stream data that coming from EX-92xx-MTCP Series

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function TCP_StartStream Lib "TCPDAQ.dll" Alias "_TCP_StartStream@8" (ByVal IP As String, ByVal
    EventFromApp As Long) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int TCP_StartStream(char szIP[],HANDLE EventFromApp);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function TCP_StartStream (szIP: PChar; EventFromApp: Longint): Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
int TCP_StartStream(char szIP[],HANDLE EventFromApp);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
 EventFromApp : event handle (be signaled, when stream data arrived)

**Return Code:** refer to the [Error code](#).

### 7.5.24 TCP\_StopStream

**Description:** to instruct the PC to stop receiving stream data from all modules.

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function TCP_StopStream Lib "TCPDAQ.dll" Alias "_TCP_StopStream@0" () As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int TCP_StopStream(void);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function TCP_StopStream: Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
int TCP_StopStream(void);
```

**Parameters:** void

**Return Code:** refer to the [Error code](#).

### 7.5.25 TCP\_ReadStreamData

**Description:** to read stream data that coming from the specific EX-92xx-MTCP Series

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function TCP_ReadStreamData Lib "TCPDAQ.dll" Alias "_TCP_ReadStreamData@8" (ByVal szIP As String,
    ByRef lpData As StreamData) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int TCP_ReadStreamData (char szIP[], struct _StreamData *lpData);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function TCP_ReadStreamData (szIP: PChar; Var lpData: TStreamData): integer; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
int TCP_ReadStreamData (char szIP[], struct _StreamData *lpData);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
 lpData[out] : points to stream data structure that stored the stream data

**Return Code:** refer to the [Error code](#).

### 7.5.26 TCP\_StartEvent

**Description:** to start listening the alarm event trigger

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_StartEvent Lib "TCPDAQ.dll" Alias "\_TCP\_StartEvent@8" (ByVal IPadr As String, ByVal EventFromApp As Long) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

int TCP\_StartEvent(char szIP[],HANDLE EventFromApp);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_StartEvent(szIP: PChar; EventFromApp: Longint): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_StartEvent(char szIP[],HANDLE EventFromApp);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

EventFromApp : event handle (be signaled, when alarm event occurred)

**Return Code:** refer to the [Error code](#).

### 7.5.27 TCP\_StopEvent

**Description:** to stop listening the alarm event trigger from all module

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_StopEvent Lib "TCPDAQ.dll" Alias "\_TCP\_StopEvent@0" () As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_StopEvent(void);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_StopEvent: Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_StopEvent(void);

**Parameters:** void

**Return Code:** refer to the [Error code](#).

### 7.5.28 TCP\_ReadEventData

**Description:** to read triggered alarm event message

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ReadEventData Lib "TCPDAQ.dll" Alias "\_TCP\_ReadEventData@8" (ByVal szIP As String, ByRef IpData As AlarmData) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

int TCP\_ReadEventData (char szIP[], struct \_AlarmInfo \*IpData);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ReadEventData (SzIP: PChar; Var IpData: TEventInfo): integer; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_ReadEventData (char szIP[], struct \_AlarmInfo \*IpData);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

IpData[out] : points to alarm event data structure that stored event message (ref. to TCPDAQ.H)

**Return Code:** refer to the [Error code](#).

### 7.5.29 TCP\_ReadDIOMode

**Description:** to read the mode of D/I & D/O channels of an EX-92xx-MTCP Series module.

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ReadDIOMode Lib "TCPDAQ.dll" Alias "\_TCP\_ReadDIOMode@12" \_  
(ByVal szIP As String, ByRef DImode As Byte, ByRef DOMode As Byte) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_ReadDIOMode(char szIP[],u\_char DImode[],u\_char DOMode[]);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ReadDIOMode (szIP: PChar; DImode: PByte; DOMode: PByte): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_ReadDIOMode(char szIP[],u\_char DImode[],u\_char DOMode[]);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

DImode[out] : an 8 bit array that stored the DI channel mode

DOMode[out] : an 8 bit array that stored the DO channel mode

**Return Code:** refer to the [Error code](#).

### 7.5.30 TCP\_ReadDIO

**Description:** to read DI/DO's status for an EX-92xx-MTCP Series module

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ReadDIO Lib "TCPDAQ.dll" Alias "\_TCP\_ReadDIO@12" \_  
(ByVal szIP As String, ByRef ByDi As Byte, ByRef ByDo As Byte) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_ReadDIO(char szIP[],u\_char byDI[],u\_char byDO[] );

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ReadDIO (szIP: PChar; ByDi: PByte; ByDo: PByte): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_ReadDIO(char szIP[],u\_char u\_byDI[],u\_char byDO[] );

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

byDI[out] : an 8 bit array that stored the DI channel status (ex: byDI[0]= 0 → DI channel 0 = 0)

byDO[out] : an 8 bit array that stored the DO channel status (ex: byDO[3] = 1 → channel 3 = 1)

**Return Code:** refer to the [Error code](#).

### 7.5.31 TCP\_ReadDISignalWidth

**Description:** to read the minimal high/low signal width of all D/I channels

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ReadDISignalWidth Lib "TCPDAQ.dll" Alias "\_TCP\_ReadDISignalWidth@12" (ByVal szIP As String, ByRef ulLoWidth As Long, ByRef ulHiWidth As Long) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

Int TCP\_ReadDISignalWidth(char szIP[],u\_long ulLoWidth[],u\_long ulHiWidth[]);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ReadDISignalWidth (szIP: PChar; var ulLoWidth:array of Longword; var ulHiWidth:array of Longword): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

Int TCP\_ReadDISignalWidth(char szIP[],u\_long ulLoWidth[],u\_long ulHiWidth[]);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- ulLoWidth[out] : an 32 bit array that stored channel low width value
- ulHiWidth[out] : an 32 bit array that stored channel high width value

**Return Code:** refer to the [Error code](#).

### 7.5.32 TCP\_WriteDISignalWidth

**Description:** to set the minimal high/low signal width of all D/I channels

**Syntax:**◆ **Visual Basic: (see TCPDAQ.bas)**

Declare Function TCP\_WriteDISignalWidth Lib "TCPDAQ.dll" Alias "\_TCP\_WriteDISignalWidth@12" (ByVal szIP As String, ByRef ulLoWidth As Long, ByRef ulHiWidth As Long) As Long

◆ **Borland C++ Builder: (see TCPDAQ.h)**

Int TCP\_WriteDISignalWidth(char szIP[],u\_long ulLoWidth[],u\_long ulHiWidth[]);

◆ **Delphi: (see TCPDAQ.pas)**

Function TCP\_WriteDISignalWidth(szIP: PChar; var ulLoWidth:array of Longword; var ulHiWidth:array of Longword): Longint; StdCall;

◆ **VC++: (see TCPDAQ.h)**

Int TCP\_WriteDISignalWidth(char szIP[],u\_long ulLoWidth[],u\_long ulHiWidth[]);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- ulLoWidth[in] : an unsigned 32 bits array that stored the minimal low signal width for each D/I channel. The unit is 0.5 mSec
- ulHiWidth[in] : an unsigned 32 bits array that stored the minimal high signal width for each D/I channel. The unit is 0.5 mSec

**Return Code:** refer to the [Error code](#).

### 7.5.33 TCP\_ReadDICounter

**Description:** to read the counter value of all D/I channels (the counter value is available only for channel that functions in 'Counter' mode)

**Syntax:**◆ **Visual Basic: (see TCPDAQ.bas)**

Declare Function TCP\_ReadDICounter Lib "TCPDAQ.dll" Alias "\_TCP\_ReadDICounter@8" (ByVal szIP As String, ByRef ulCounterValue As Long) As Long

◆ **Borland C++ Builder: (see TCPDAQ.h)**

Int TCP\_ReadDICounter(Char szIP[],u\_long ulCounterValue[]);

◆ **Delphi: (see TCPDAQ.pas)**

Function TCP\_ReadDICounter (szIP: PChar; var ulCounterValue:array of Longword): Longint; StdCall;

◆ **VC++: (see TCPDAQ.h)**

Int TCP\_ReadDICounter(Char szIP[],u\_long ulCounterValue[]);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- ulCounterValue[out] :an unsigned 32 bits array that stored the counter value for each D/I channel

**Return Code:** refer to the [Error code](#).

### 7.5.34 TCP\_ClearDICounter

**Description:** to clear the counter value when a D/I channel function in 'Counter' mode

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function TCP_ClearDICounter Lib "TCPDAQ.dll" Alias "_TCP_ClearDICounter@8"  
    (ByVal szIP As String, ByVal wChno As Integer) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int TCP_ClearDICounter(char szIP[],u_short wChNo);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function TCP_ClearDICounter (szIP: PChar; wChno: Integer): Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
int TCP_ClearDICounter(char szIP[],u_short wChNo);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

wChNo[in] : the D/I channel to be cleared.

**Return Code:** refer to the [Error code](#).

### 7.5.35 TCP\_StartDICounter

**Description:** to start the counting when a D/I channel function as 'Counter' mode

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function TCP_StartDICounter Lib "TCPDAQ.dll" Alias "_TCP_StartDICounter@8" (ByVal szIP As String,  
    ByVal wChno As Integer) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int TCP_StartDICounter(Char szIP[],u_short wChNo);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function TCP_StartDICounter (szIP: PChar; wChno: Integer): Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
int TCP_StartDICounter(Char szIP[],u_short wChNo);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

wChNo[in] : the channel number that is enabled to count

**Return Code:** refer to the [Error code](#).

### 7.5.36 TCP\_StopDICounter

**Description:** to stop the counting when a D/I channel function as 'Counter' mode

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

```
Declare Function TCP_StopDICounter Lib "TCPDAQ.dll" Alias "_TCP_StopDICounter@8"  
    (ByVal szIP As String, ByVal wChno As Integer) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int TCP_StopDICounter(char szIP[],u_short wChNo);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function TCP_StopDICounter (szIP: PChar; wChno: Integer): Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
int TCP_StopDICounter(char szIP[],u_short wChNo);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

wChNo[in] : the channel number that is disabled to count

**Return Code:** refer to the [Error code](#).

### 7.5.37 TCP\_ClearDILatch

**Description:** to clear the latch when a D/I channel function as 'Lo to Hi Latch' or 'Hi to Lo Latch'

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ClearDILatch Lib "TCPDAQ.dll" Alias "\_TCP\_ClearDILatch@8" (ByVal szIP As String, ByVal wChno As Integer) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

int TCP\_ClearDILatch(char szIP[],u\_short wChNo);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ClearDILatch(szIP: PChar; wChno: Integer): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_ClearDILatch(char szIP[],u\_short wChNo);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

wChNo[in] : the channel number that latch status is cleared

**Return Code:** refer to the [Error code](#).

### 7.5.38 TCP\_ReadDILatch

**Description:** to read the DI latch status when a D/I channel function in 'Lo to Hi Latch' or 'Hi to Lo Latch'

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ReadDILatch Lib "TCPDAQ.dll" Alias "\_TCP\_ReadDILatch@8" (ByVal szIP As String, ByRef wLatch As Byte) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

int TCP\_ReadDILatch(char szIP[],u\_char wLatch[]);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ReadDILatch (szIP: PChar; wLatch: PByte): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_ReadDILatch(char szIP[],u\_char wLatch[]);

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected

wLatch[out] : an unsigned 8 bits array that stored the latch status for each D/I channel

**Return Code:** refer to the [Error code](#).

### 7.5.39 TCP\_WriteDO

**Description:** to write some value to D/O channels for an EX-92xx-MTCP Series module

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_WriteDO Lib "TCPDAQ.dll" Alias "\_TCP\_WriteDO@16" (ByVal szIP As String, ByVal wStartDO As Integer, ByVal wCount As Integer, ByRef ByDo As Byte) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

int TCP\_WriteDO(Char szIP[], u\_short wStartDO, u\_short wCount,u\_char byDO[]);

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_WriteDO(szIP: PChar; wStartDO: Integer; wCount: Integer;ByDo: PByte): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

int TCP\_WriteDO(Char szIP[], u\_short wStartDO, u\_short wCount,u\_char byDO[]);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- wStartDO[in] : the starting channel that to be written.
- wCount[in] : how many channels to be written.
- byDO[in] : an 8 bit array that stored the values that written to the connected EX-92xx-MTCP Series
- Return Code:** refer to the [Error code](#).

## 7.5.40 TCP\_WriteDOPulseCount

**Description:** to write the pulse output count for EX-92xx-MTCP Series DIO modules during runtime

**Syntax:**

◆ **Visual Basic:** (see [TCPDAQ.bas](#))

Declare Function TCP\_WriteDOPulseCount Lib "TCPDAQ.dll" Alias "\_TCP\_WriteDOPulseCount@12" (ByVal szIP As String, ByVal wDoChannel As Integer, ByVal ulPulseCount As Long) As Long

◆ **Borland C++ Builder:** (see [TCPDAQ.h](#))

int TCP\_WriteDOPulseCount(char szIP[],u\_short wDoChannel,u\_long ulPulseCount);

◆ **Delphi:** (see [TCPDAQ.pas](#))

Function TCP\_WriteDOPulseCount(szIP: PChar; wDoChannel: Integer; ulPulseCount: Longint): Longint; StdCall;

◆ **VC++:** (see [TCPDAQ.h](#))

int TCP\_WriteDOPulseCount(char szIP[],u\_short wDoChannel,u\_long ulPulseCount);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- wDoChannel[in] : the channel index for writing
- ulPulseCount[in] : the pulse output count.

**Return Code:** refer to the [Error code](#).

## 7.5.41 TCP\_WriteDODelayWidth

**Description:** to set the pulse and delay signal widths to specific EX-92xx-MTCP Series DIO modules

**Syntax:**

◆ **Visual Basic:** (see [TCPDAQ.bas](#))

Declare Function TCP\_WriteDODelayWidth Lib "TCPDAQ.dll" Alias "\_TCP\_WriteDODelayWidth@24" (ByVal szIP As String, ByVal wChno As Integer, ByVal ulLoPulseWidth As Long, ByVal ulHiPulseWidth As Long, ByVal ulLoDelayWidth As Long, ByVal ulHiDelayWidth As Long) As Long

◆ **Borland C++ Builder:** (see [TCPDAQ.h](#))

Int TCP\_WriteDODelayWidth(Char szIP[], u\_short wChno,u\_long ulLoPulseWidth,u\_long ulHiPulseWidth, u\_long ulLoDelayWidth,u\_long ulHiDelayWidth);

◆ **Delphi:** (see [TCPDAQ.pas](#))

Function TCP\_WriteDODelayWidth (szIP: PChar; wChno: Integer; ulLoPulseWidth: Longint; ulHiPulseWidth: Longint;ulLoDelayWidth: Longint; ulHiDelayWidth: Longint): Longint; StdCall;

◆ **VC++:** (see [TCPDAQ.h](#))

int TCP\_WriteDODelayWidth(char szIP[], u\_short wChno, u\_long ulLoPulseWidth, u\_long ulHiPulseWidth, u\_long ulLoDelayWidth, u\_long ulHiDelayWidth);

**Parameters:**

- szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected
- wChno[in] : the channel index for writing
- ulLoPulseWidth[in] : the output pulse signal width at low level.
- ulHiPulseWidth[in] : the output pulse signal width at high level.
- ulLoDelayWidth[in] : the output signal delay width when set DO from high to low level.
- ulHiDelayWidth[in] : the output signal delay width when set DO from low to high level.

**Return Code:** refer to the [Error code](#).

### 7.5.42 TCP\_ReadDODelayWidth

**Description:** to read the pulse and delay signal widths from specific EXPERTDAQ-6000 DIO modules

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_ReadDODelayWidth Lib "TCPDAQ.dll" Alias "\_TCP\_ReadDODelayWidth@24" (ByVal szIP As String, ByVal wChno As Integer, ByRef ulLoPulseWidth As Long, ByRef ulHiPulseWidth As Long, ByRef ulLoDelayWidth As Long, ByRef ulHiDelayWidth As Long) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
int TCP_ReadDODelayWidth(char szIP[],u_short wChno,
    u_long *ulLoPulseWidth,u_long *ulHiPulseWidth,
    u_long *ulLoDelayWidth,u_long *ulHiDelayWidth);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_ReadDODelayWidth (szIP: PChar; wChno: Integer; ulLoPulseWidth: Longint; ulHiPulseWidth: Longint;ulLoDelayWidth: Longint; ulHiDelayWidth: Longint): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

```
int TCP_ReadDODelayWidth(char szIP[],u_short wChno, u_long *ulLoPulseWidth,lu_long *ulHiPulseWidth,
    u_long *ulLoDelayWidth,u_long *ulHiDelayWidth);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
wChno[in] : the channel index for reading  
ulLoPulseWidth[out] : the pulse output signal width at low level  
ulHiPulseWidth[out] : the pulse output signal width at high level  
ulLoDelayWidth[out] : the delay output signal width at low level  
ulHiDelayWidth) [out]: the delay output signal width at high level

**Return Code:** refer to the [Error code](#).

### 7.5.43 TCP\_MODBUS\_ReadCoil

**Description:** to read the coil values at a specific range described in parameters

**Syntax:**

◆ **Visual Basic:** (see *TCPDAQ.bas*)

Declare Function TCP\_MODBUS\_ReadCoil Lib "TCPDAQ.dll" Alias "\_TCP\_MODBUS\_ReadCoil@16" (ByVal szIP As String, ByVal wStartAddress As Integer, ByVal wCount As Integer, ByRef DATA As Byte) As Long

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
Int TCP_MODBUS_ReadCoil(char szIP[],u_short wStartaddress,u_short wCount,u_char byData[]);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

Function TCP\_MODBUS\_ReadCoil (szIP: PChar; wStartAddress: Integer; wCount: Integer; Data: PByte): Longint; StdCall;

◆ **VC++:** (see *TCPDAQ.h*)

```
Int TCP_MODBUS_ReadCoil(char szIP[],u_short wStartAddress,u_short wCount,u_char byData[]);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
wStartAddress[in] : start address of coil registers (1 ~ 255)  
wCount[in] : the count that coil data be read  
byData[in] : the 8 bit array that stored the coil data (0=set, 1=reset)

**Return Code:** refer to the [Error code](#).

### 7.5.44 TCP\_MODBUS\_WriteCoil

**Description:** to write the coil values at a specific range described in parameters.

**Syntax:**

◆ **Visual Basic: (see TCPDAQ.bas)**

```
Declare Function TCP_MODBUS_WriteCoil Lib "TCPDAQ.dll" Alias "_TCP_MODBUS_WriteCoil@16"
    (ByVal szIP As String, ByVal wStartAddress As Integer, ByVal wCount As Integer,
    ByVal DATA As Byte) As Long
```

◆ **Borland C++ Builder: (see TCPDAQ.h)**

```
int TCP_MODBUS_WriteCoil(char szIP[],u_short wStartAddress,u_short wCount,u_char byData[]);
```

◆ **Delphi: (see TCPDAQ.pas)**

```
Function TCP_MODBUS_WriteCoil(szIP: PChar; wStartAddress: Integer; wCount: Integer; Data: PByte):
    Longint; StdCall;
```

◆ **VC++: (see TCPDAQ.h)**

```
int TCP_MODBUS_WriteCoil(char szIP[],u_short wStartAddress,u_short wCount,u_char byData[]);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
 wStartAddress[in] : start address of coil registers (1 ~ 255)  
 wCount[in] : the count that coil data be written  
 byData[in] : the 8 bit array that stored the coil data (0=set, 1=reset)

**Return Code:** refer to the [Error code](#).

### 7.5.45 TCP\_MODBUS\_ReadReg

**Description:** to read the holding register value at a specific range described in parameters

**Syntax:**

◆ **Visual Basic: (see TCPDAQ.bas)**

```
Declare Function TCP_MODBUS_ReadReg Lib "TCPDAQ.dll" Alias "_TCP_MODBUS_ReadReg@16"
    (ByVal szIP As String, ByVal wStartAddress As Integer, ByVal wCount As Integer,
    ByVal DATA As Integer) As Long
```

◆ **Borland C++ Builder: (see TCPDAQ.h)**

```
Int TCP_MODBUS_ReadReg(char szIP[],u_short wStartAddress,u_short wCount,u_short wData[]);
```

◆ **Delphi: (see TCPDAQ.pas)**

```
Function TCP_MODBUS_ReadReg (szIP: PChar; wStartAddress: Integer; wCount: Integer; Data: PWord):
    Longint; StdCall;
```

◆ **VC++: (see TCPDAQ.h)**

```
Int TCP_MODBUS_ReadReg(char szIP[],u_short wStartAddress,u_short wCount,u_short wData[]);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
 wStartAddress[in] : start address of holding registers (1 ~ 255)  
 wCount[in] : the count that holding data be read  
 byData[in] : the 16 bit array that stored the holding data

**Return Code:** refer to the [Error code](#).

### 7.5.46 TCP\_MODBUS\_WriteReg

**Description:** to write values to the holding registers at a specific range described in parameters

**Syntax:**

◆ **Visual Basic: (see TCPDAQ.bas)**

```
Declare Function TCP_MODBUS_WriteReg Lib "TCPDAQ.dll" Alias "_TCP_MODBUS_WriteReg@16"
    (ByVal szIP As String, ByVal wStartAddress As Integer, ByVal wCount As Integer,
    ByVal DATA As Integer) As Long
```

◆ **Borland C++ Builder:** (see *TCPDAQ.h*)

```
Int TCP_MODBUS_WriteReg(char szIP[],u_short wStartAddress,u_short wCount,u_short wData[]);
```

◆ **Delphi:** (see *TCPDAQ.pas*)

```
Function TCP_MODBUS_WriteReg(szIP: PChar; wStartAddress: Integer; wCount: Integer; Data: PWord):  
Longint; StdCall;
```

◆ **VC++:** (see *TCPDAQ.h*)

```
Int TCP_MODBUS_WriteReg(char szIP[],u_short wStartAddress,u_short wCount,u_short wData[]);
```

**Parameters:**

szIP[in] : the IP address for an EX-92xx-MTCP Series that to be connected  
wStartAddress[in] : start address of holding registers (1 ~ 255)  
wCount[in] : the count that holding data be read  
byData[in] : the 16 bit array that stored the holding data

**Return Code:** refer to the [Error code](#).

## Chapter 8 ASCII Commands for EX-92xx-MTCP Series Modules

### 8.1 About ASCII Commands

For users do not familiar to Modbus protocol, TOPSCCC offers a function library as a protocol translator, integrating ASCII command into Modbus/TCP structure. Therefore, users familiar to ASCII command can access EX-92xx-MTCP Series easily. Before explaining the structure of ASCII command packed with Modbus/TCP format. Let's see how to use an ASCII command and how many are available for your program.

*EX-92xx-MTCP Series Series also integrate ASCII command into **UDP protocol with port 1025**. User can simply send the Command of ASCII format through UDP protocol (such as `UPD_send (Dest_IP, "$01M")`).*

### 8.2 Syntax of ASCII

Command Syntax: [delimiter character][address][channel][command][ data][checksum][carriage return] Every command begins with a delimiter character.

There are two valid characters: \$ and # .The delimiter character is followed by a two-character address (hex-decimal) that specifies the target system. The two characters following the address specific the module and channel.

Depending on the command, an optional data segment may follow the command string. An optional two-character checksum may also be appended to the command string. Every command is terminated with a carriage return(cr).

The command set is divided into the following five categories:

- ◆ System Command Set
- ◆ Analog Input Command Set
- ◆ Analog Input Alarm Command Set
- ◆ Universal I/O Command Set
- ◆ Digital I/O Command Set

Every command set category starts with a command summary of the particular type of module, followed by datasheets that give detailed information about individual commands. Although commands in different subsections sometime share the same format, the effect they have on a certain module can be completely different than that of another. Therefore, the full command sets for each type of modules are listed along with a description of the effect the command has on the given module.

*Note: All commands should be issued in **UPPERCASE characters** only!*

### 8.3 ASCII Command Set

#### 8.3.1 General commands

| Command      | Function                           | Description   | Modules | Pg. |
|--------------|------------------------------------|---|---------|-----|
| \$AAM        | Read Module Name                   | Returns the module name from a specific module                        | All     | 87  |
| \$AAF        | Read Firmware Version              | Returns the firmware version from a specific module.                  | All     | 88  |
| \$AAID       | Read module ID                     | Read user define module address(ID)<br>(for tcpdaq.dll driver)        | All     | 89  |
| \$AAIDFF     | Set Module ID number               | Set user define module address(ID)<br>(for tcpdaq.dll device driver). | All     | 90  |
| \$AAMD(data) | Write module description           | Write module description(max 30 characters)                           | All     | 91  |
| \$AAMD       | Read module description            | Read module description   | All     | 92  |
| \$AAS1       | Reloads the module factory default | Reloads the module factory default                                    | All     | 93  |
| ~AAI         | Soft INIT* command (Enable)        | Soft INIT* command (Enable)   | All     | 94  |
| ~AATNN       | Sets the soft INIT* timeout value  | Sets the soft INIT* timeout value                                     | All     | 95  |
| \$AARS       | Reboot the module                  | Reboot the module to the power-on state                               | All     | 96  |
| \$AA5        | Reads the Reset Status of a module | Reads the Reset Status of a module                                    | All     | 97  |
| ~AADNNNNN    | Set timeout to search DHCP         | Set timeout to search DHCP  | All     | 98  |
| ~AAD         | Read timeout to search DHCP        | Read timeout to search DHCP   | All     | 99  |
| ^AAMAC       | Read MAC address                   | Read MAC address  | All     | 100 |

#### 8.3.2 Digital I/O commands

| Command    | Function                                 | Description   | Modules | Pg. |
|------------|--|---|---------|-----|
| \$AACONNDD | Set a single DO mode for channel N       | Set a single DO mode for channel N                                      | All     | 101 |
| \$AACONN   | Read a single DO mode for channel N      | Read a single DO mode for channel N                                     | All     | 102 |
| \$AACINNDD | Set a single DI mode for channel N       | Set a single DI mode for channel N                                      | All     | 103 |
| \$AACINN   | Read a single DI mode for channel N      | Read a single DI mode for channel N                                     | All     | 104 |
| ~AADSMN    | Set DI/O active state                    | Set digital input/output active state                                   | All     | 105 |
| ~AADS      | Read DI/O active state                   | Read digital input/output active state                                  | All     | 106 |
| \$AA6      | Read DI/O Channel Status                 | Read the status of all DI(0~15) and DO(0~15) channels. (Same as "@AA")  | All     | 107 |
| @AA        | Read DI/O Status                         | Read the status of all DI(0~15) and DO(0~15) channels. (Same as "@AA6") | All     | 108 |
| #AA0DD     | Write DO channels(0~7)                   | Write a value to digital output channels(0~7)                           | All     | 109 |
| #AA1NDD    | Set a single DO channel                  | Set a single digital output channel                                     | All     | 110 |
| @AA6DDDD   | Write DO channels                        | Write a value to digital output channels(0~15)                          | All     | 111 |
| @AA6ONSS   | Set a single DO channel                  | Set a single digital output channel(0~15)                               | All     | 112 |
| @AA6ON     | Read single digital output for channel N | Read a single digital output for channel (0~15)                         | All     | 113 |

|           |   |  |     |     |
|-----------|---|--|-----|-----|
| @AA6      | Read the status of all DIO channels       | Read the status of all DIO(0~15) channels.     | All | 114 |
| @AA6IN    | Read a single digital input for channel N | Read a single digital input for channel (0~15) | All | 115 |
| \$AA7     | Read DI latch status                      | Read DI latch status                           | All | 116 |
| \$AACLSNN | Clear DI latch status                     | Clear DI latch status for channel N            | All | 117 |

### 8.3.3 DIO Synchronization Mode(Mirror Local DI to Local /Remote DO) Commands

| Command                    | Function  | Description   | Modules | Pg. |
|----------------------------|---|---|---------|-----|
| \$AAYM5CRPS<br>TTTT (data) | Set <u>DI match DO latch mode of DIO Sync.</u>                | Set <u>DI match DO latch mode</u> of DIO Sync.<br>( For Mirror Local DI to <u>Local DO channel</u> & <u>Remote DO channel</u> )<br><i>(for firmware version 6.100 or later)</i>     | All     | 118 |
| \$AAYM6CRPS<br>TTTT (data) | Set DI mismatch DO latch mode of DIO Sync.                    | Set <u>DI mismatch DO latch mode</u> for DIO Sync.<br>( For Mirror Local DI to <u>Local DO channel</u> & <u>Remote DO channel</u> )<br><i>(for firmware version 6.100 or later)</i> | All     | 119 |
| \$AAYMNDDDD<br>DDDD        | Set remote device IP for DO channel N<br>(for DIO sync. mode) | Set remote device IP for DO channel N<br>(for DIO sync. mode)<br><i>(for firmware version 6.100 or later)</i>   | All     | 120 |
| \$AAYMRCS                  | Start(Run)/Stop DIO synchronize                               | Start(Run)/Stop DIO sync. operation<br><i>(for firmware version 6.100 or later)</i>   | All     | 122 |
| \$AAYMC                    | Read DIO Sync. mode   | Read DIO Sync. mode<br><i>(for firmware version 6.100 or later)</i>   | All     | 123 |
| \$AAYM4C                   | Read DIO Sync. Mode parameters                                | Read DIO Sync. Mode parameters<br><i>(for firmware version 6.100 or later)</i>  | All     | 121 |
| \$AAYMS                    | Read DIO Sync. DO active status                               | Read DIO Sync. DO active status<br><i>(for firmware version 6.100 or later)</i>   | All     | 124 |
| \$AAYMPN                   | Read DO Sync. remote device IP for DO ch. N                   | Read remote device IP for DO channel N<br>(for DIO sync. mode)<br><i>(for firmware version 6.100 or later)</i>  | All     | 125 |

### 8.3.4 DO Pulse Output mode & Digital output Auto-Off Time mode commands

| Command              | Function                                   | Description   | Modules | Pg. |
|----------------------|--|---|---------|-----|
| #AA2NPPPPPPP         | Write DO pulse counts                      | Write DO pulse counts to the specific DO channel (For <u>High/Low delay mode</u> )  | All     | 126 |
| \$AA9PNLLLL<br>HHHH  | Set DO pulse low/high width for channel N  | Set DO pulse low/high width for channel N.<br>(For High/Low delay mode)   | All     | 127 |
| \$AA9NN              | Read DO pulse low/high width for channel N | Read DO pulse low/high width and DO Low/high delay output width for ch. N,<br>( For <u>High/Low delay mode</u> and <u>Digital output Auto-Off Time Mode</u> ) | All     | 128 |
| \$AA9DNNHHHH<br>LLLL | Set DO low/high delay width for channel N  | Set DO Low/high delay output width for channel N (00~15), unit: 0.5ms.<br>( For <u>High/Low delay mode</u> and <u>Digital output Auto-Off Time Mode</u> )     | All     | 129 |

## 8.3.5 Digital Input Counter commands

| Command                 | Function                               | Description  | Modules         | Pg. |
|-------------------------|--|--|-----------------|-----|
| \$AA0MCC                | Read DI counter filter (debounce time) | Read DI counter pre-debounce and post-debounce of channel N (unit = 0.5ms) | All Except 9251 | 131 |
| \$AA0MCC (data1)(data2) | Set DI counter filter (debounce time)  | Set DI counter pre-debounce and post-debounce of channel N (unit = 0.5ms)  | Except 9251     | 132 |
| \$AAECN                 | Start/Stop DI counter                  | Start/Stop counter of the specific DI channel.                             | All             | 133 |
| \$AACN                  | Clear DI counter                       | Clear DI counter of the specific DI channel.                               | All             | 134 |
| #AAN                    | Read DI counter                        | Read counter value of the specific DI channel.                             | All             | 135 |
| #AARN                   | Read DI counter with overflow          | Read a single DI channel counter with overflow.                            | All             | 136 |

## 8.3.6 WatchDog commands

| Command  | Function   | Description   | Modules | Pg. |
|----------|--|---|---------|-----|
| ~**      | Host ok  | host ok. Refresh WDT counter of all modules via broadcast,<br>(No reply from modbus response)                   | All     | 137 |
| ~AA**    | Host ok  | host ok. Refresh WDT counter of the specific module (Response : !01)  | All     | 138 |
| ~AA0     | Read host watchdog timeout status                                    | Read host watchdog timeout status.<br>bit(7) - watchdog Enable/Disable,<br>bit(2) - watchdog timeout(1) status) | All     | 139 |
| ~AA1     | Reset host watchdog timeout status                                   | Reset host watchdog timeout status  | All     | 140 |
| ~AA2     | Read host communication Timeout value.                               | Read host communication Timeout value.<br>(0.1sec)  | All     | 141 |
| ~AA3EVVV | Set Host watchdog timeout interval.                                  | Enable Host watchdog and set timeout interval (unit=0.1sec)   | All     | 142 |
| ~AA4V    | Read the power-on DO value or the safe DO value of a module          | Read the power-on DO value or the safe DO value of a module   | All     | 144 |
| ~AA5V    | Sets the current value as the power-on DO value or the safe DO value | Sets the current value as the power-on DO value or the safe DO value  | All     | 145 |
| ~AA3PPP  | Set module Power-on delay time.                                      | Set module Power-on delay time (unit=0.1sec) to start host communication timeout watchdog                       | All     | 146 |
| ~AA3P    | read module Power-on delay time                                      | Read module Power-on delay time (unit=0.1sec) to start host communication timeout watchdog                      | All     | 147 |

8.4 ASCII Command Description

8.4.1 \$AAM Read Module Name

|              |                      |   |
|--------------|----------------------|---|
| Description: | Read the module name |   |
| Command:     | \$AAM[CHK](cr)       |   |
| Syntax:      | \$                   | Command leading code                                    |
|              | AA                   | Module address ID (01 to FF , Always 01)                |
|              | M                    | Command for Read Module Name                            |
|              | CHK                  | Check sum   |
|              | (cr)                 | Carriage return   |
| Response:    | !AA(data)[CHK](cr)   | Valid command   |
|              | ?AA[CHK](cr)         | Invalid command   |
|              | !                    | Delimiter for valid command                             |
|              | ?                    | Delimiter for invalid command                           |
|              | AA                   | Module address ID                                       |
|              | (data)               | A string showing the name of the module (max. 8 chars.) |
|              | CHK                  | Check sum   |
| (cr)         | Carriage return      |   |

Example:

The command requests the system at address 01h to send its module name. The system at address 01h responds with module name EX-9050A indicating that there is an EX-9050A at address 01h.

Command: \$01M(cr)

Response: !019050A(cr)

8.4.2 \$AAF Read Firmware Version

|              |  |   |
|--------------|--|---|
| Description: | Returns the firmware version from a specific module. |   |
| Command:     | \$AAF[CHK](cr)                                       |   |
| Syntax:      | \$   | Command leading code  |
|              | AA   | Module address ID (01 to FF , Always 01)                            |
|              | F  | is the Firmware Version command                                     |
|              | CHK  | Check sum   |
| Response:    | (cr)   | Carriage return   |
|              | !AA(data)[CHK](cr)                                   | Valid command   |
|              | ?AA[CHK](cr)   | Invalid command   |
|              | !  | Delimiter for valid command   |
|              | ?  | Delimiter for invalid command                                       |
|              | AA   | Module address ID   |
|              | (data)   | A string showing the firmware version of the module (max. 6 chars.) |
| CHK          | Check sum  |   |
| (cr)         | Carriage return                                      |   |

Example:

The command requests the system at address 01h to send its firmware version. The system responds with firmware version 6.080

Command: \$01F(cr)

Response: !01 6.080 (cr)

## 8.4.3 \$AAID Read module ID number

|              |   |  |
|--------------|---|--|
| Description: | Read user define module address(ID). (for tcpdaq.dll device driver) |  |
| Command:     | \$AAID[CHK](cr)   |  |
| Syntax:      | \$  | Command leading code                     |
|              | AA  | Module address ID (01 to FF , Always 01) |
|              | ID  | is the ID command.                       |
|              | CHK   | Check sum                                |
|              | (cr)  | Carriage return                          |
| Response:    | !AANN[CHK](cr)  | Valid command                            |
|              | ?AA[CHK](cr)  | Invalid command                          |
|              | !   | Delimiter for valid command              |
|              | ?   | Delimiter for invalid command            |
|              | AA  | Module address ID                        |
|              | NN  | represents the ID number of the module.  |
|              | CHK   | Check sum                                |
| (cr)         | Carriage return   |  |

**Example:**

The command requests the system at address 01h to send its ID number. The system responds with ID number 10(0AH).

Command: \$01ID (cr)

Response: !010A (cr)

**Related command:** \$AAIDFF

## 8.4.4 \$AAIDFF Set module ID number

|              |   |  |
|--------------|---|--|
| Description: | Set user define module address(ID) (for tcpdaq.dll device driver) |  |
| Command:     | \$AAIDFF[CHK](cr)   |  |
| Syntax:      | \$  | Command leading code                     |
|              | AA  | Module address ID (01 to FF , Always 01) |
|              | ID  | is the ID command.                       |
|              | FF  | Module address (range 01-FF)             |
|              | CHK   | Check sum                                |
| Response:    | (cr)  | Carriage return                          |
|              | !AA[CHK](cr)  | Valid command                            |
|              | ?AA[CHK](cr)  | Invalid command                          |
|              | !   | Delimiter for valid command              |
|              | ?   | Delimiter for invalid command            |
|              | AA  | Module address ID                        |
|              | CHK   | Check sum                                |
| (cr)         | Carriage return   |  |

**Example:**

The command Sets the ID of the module 01 to be "1A " and returns a valid response.

Command: \$01ID1A (cr)

Response: !01 (cr)

**Related command:** \$AAID

8.4.5 \$AAMD(data) Set module description

|              |                        |  |
|--------------|------------------------|--|
| Description: | Set module description |  |
| Command:     | \$AAMD(data)[CHK](cr)  |  |
| Syntax:      | \$                     | Command leading code                     |
|              | AA                     | Module address ID (01 to FF , Always 01) |
|              | MD                     | Set module description command.          |
|              | (data)                 | module description (max 30 characters)   |
|              | CHK                    | Check sum                                |
| Response:    | (cr)                   | Carriage return                          |
|              | !AA[CHK](cr)           | Valid command                            |
|              | ?AA[CHK](cr)           | Invalid command                          |
|              | !                      | Delimiter for valid command              |
|              | ?                      | Delimiter for invalid command            |
|              | AA                     | Module address ID                        |
|              | CHK                    | Check sum                                |
| (cr)         | Carriage return        |  |

Example:

Set the desc. of the module 01 to be "12DI8DO " and returns a valid response.

Command: \$01MD12DI8DO(cr)

Response: !01 (cr)

Related command: \$AAMD

## 8.4.6 \$AAMD Read module description

|              |                         |  |
|--------------|-------------------------|--|
| Description: | Read module description |  |
| Command:     | \$AAMD [CHK](cr)        |  |
| Syntax:      | \$                      | Command leading code                     |
|              | AA                      | Module address ID (01 to FF , Always 01) |
|              | MD                      | Set module description command.          |
|              | CHK                     | Check sum                                |
|              | (cr)                    | Carriage return                          |
| Response:    | !AA(data)[CHK](cr)      | Valid command                            |
|              | ?AA[CHK](cr)            | Invalid command                          |
|              | !                       | Delimiter for valid command              |
|              | ?                       | Delimiter for invalid command            |
|              | AA                      | Module address ID                        |
|              | (data)                  | module description (max 30 characters)   |
|              | CHK                     | Check sum                                |
| (cr)         | Carriage return         |  |

**Example:**

Set the desc. of the module 01 to be "12DI8DO " and returns a valid response.

Command: \$01MD12DI8DO(cr)

Response: !01 (cr)

**Related command:** \$AAMD(data)

8.4.7 \$AAS1 Reloads the module factory default

|              |                                    |  |
|--------------|------------------------------------|--|
| Description: | Reloads the module factory default |  |
| Command:     | \$AAS1 [CHK](cr)                   |  |
| Syntax:      | \$                                 | Command leading code                     |
|              | AA                                 | Module address ID (01 to FF , Always 01) |
|              | S1                                 | command to reload the factory default.   |
|              | CHK                                | Check sum                                |
|              | (cr)                               | Carriage return                          |
| Response:    | !AA [CHK](cr)                      | Valid command                            |
|              | ?AA[CHK](cr)                       | Invalid command                          |
|              | !                                  | Delimiter for valid command              |
|              | ?                                  | Delimiter for invalid command            |
|              | AA                                 | Module address ID                        |
|              | CHK                                | Check sum                                |
|              | (cr)                               | Carriage return                          |

**Note:** Before the command is issued, The Soft INIT\* switch should be set to enable via “set the soft INIT\* “ command. (ref. ~AAI, ~AATnn)

**Example :**

- (1) Sets the soft INIT\* timeout value of module 01 to 32 seconds and returns a valid response.

Command: ~01T32(cr)

Response: !01(cr)

- (2) Sets the soft INIT\* enable and returns a valid response.

Command: ~01I(cr)

Response: !01(cr)

- (3) Reloads the module factory default

Command: \$01S1(cr)

Response: !01(cr)

**Related command:** ~AATnn, ~AAI

8.4.8 ~AAI Set the Soft INIT\*

|              |   |  |
|--------------|---|--|
| Description: | The Soft INIT* command is used to enable modification of the IP, Gateway and communication protocol settings using software only. |  |
| Command:     | ~AAI [CHK](cr)  |  |
| Syntax:      | ~   | Command leading code                     |
|              | AA  | Module address ID (01 to FF , Always 01) |
|              | I   | command to set the Soft INIT* enable     |
|              | CHK   | Check sum                                |
| Response:    | (cr)  | Carriage return                          |
|              | !AA [CHK](cr)   | Valid command                            |
|              | ?AA[CHK](cr)  | Invalid command                          |
|              | !   | Delimiter for valid command              |
|              | ?   | Delimiter for invalid command            |
|              | AA  | Module address ID                        |
|              | CHK   | Check sum                                |
| (cr)         | Carriage return   |  |

**Example :**

1. Sets the soft INIT\* timeout value of module 01 to 16 seconds and returns a valid response.

Command: ~01T10(cr)

Response: !01(cr)

2. Sets the soft INIT\* enable and returns a valid response.

Command: ~01I(cr)

Response: !01(cr)

3. Reloads the module factory default

Command: \$01S1(cr)

Response: !01(cr)

**Related command:** ~AATnn, \$AAS1

8.4.9 ~AATNN Sets the soft INIT\* timeout value

|              |   |  |
|--------------|---|--|
| Description: | The Soft INIT* command is used to enable modification of the IP, Gateway and communication protocol settings using software only. |  |
| Command:     | ~AATNN [CHK](cr)  |  |
| Syntax:      | ~   | Command leading code   |
|              | AA  | Module address ID (01 to FF , Always 01)   |
|              | T   | command to Sets the soft INIT* timeout value   |
|              | NN  | Two hexadecimal digits representing the timeout value in seconds. The maximum timeout value is 60 seconds. When changing the IP or Gateway settings without altering the INIT* slide switch, the ~AAI and (or \$AAS1) commands should be sent consecutively and the time interval between the two commands should be less than the soft INIT* timeout. If the soft INIT* timeout is 0, then the IP and Gateway settings cannot be changed using software only. The power-on reset value of the soft INIT timeout is 0. |
|              | CHK<br>(cr)   | Check sum<br>Carriage return   |
| Response:    | !AA [CHK](cr)   | Valid command  |
|              | ?AA[CHK](cr)  | Invalid command  |
|              | !   | Delimiter for valid command  |
|              | ?   | Delimiter for invalid command  |
|              | AA  | Module address ID  |
|              | CHK   | Check sum  |
|              | (cr)  | Carriage return  |

**Example :**

1. Sets the soft INIT\* timeout value of module 01 to 16 seconds and returns a valid response.  
 Command: ~01T10(cr)  
 Response: !01(cr)
2. Sets the soft INIT\* enable and returns a valid response.  
 Command: ~01I(cr)  
 Response: !01(cr)
3. Reloads the module factory default  
 Command: \$01S1(cr)  
 Response: !01(cr)

**Related command:** ~AAI, \$AAS1

## 8.4.10 \$AARS Reboot the module to the power-on state

|              |   |  |
|--------------|---|--|
| Description: | Reboot the module to the power-on state |  |
| Command:     | \$AARS [CHK](cr)                        |  |
| Syntax:      | \$                                      | Command leading code                               |
|              | AA                                      | Module address ID (01 to FF , Always 01)           |
|              | RS                                      | command to reboot the module to the power-on state |
|              | CHK                                     | Check sum  |
|              | (cr)                                    | Carriage return                                    |
| Response:    | !AA [CHK](cr)                           | Valid command                                      |
|              | ?AA[CHK](cr)                            | Invalid command                                    |
|              | !                                       | Delimiter for valid command                        |
|              | ?                                       | Delimiter for invalid command                      |
|              | AA                                      | Module address ID                                  |
|              | CHK                                     | Check sum  |
|              | (cr)                                    | Carriage return                                    |

**Example:**

command: \$01RS(cr)

response: !01(cr) ; Reboot the module to the power-on state.

**Related command:** \$AA5

8.4.11 \$AA5 Reads the Reset Status of a module

|              |                                    |   |
|--------------|------------------------------------|---|
| Description: | Reads the Reset Status of a module |   |
| Command:     | \$AA5 [CHK](cr)                    |   |
| Syntax:      | \$                                 | Command leading code  |
|              | AA                                 | Module address ID (01 to FF , Always 01)  |
|              | 5                                  | Command for read reset status   |
|              | CHK                                | Check sum   |
|              | (cr)                               | Carriage return   |
| Response:    | !AAS [CHK](cr)                     | Valid command   |
|              | ?AA[CHK](cr)                       | Invalid command   |
|              | !                                  | Delimiter for valid command   |
|              | ?                                  | Delimiter for invalid command   |
|              | AA                                 | Module address ID   |
|              | S                                  | the Reset Status of a module.<br>= 0 - the module is not been reseted.<br>= 1 - the module is been reseted. |
|              | CHK                                | Check sum   |
| (cr)         | Carriage return                    |   |

**Example 1:**

command: \$015(cr)  
 response: !011(cr) ; the module is been reseted

**Example 2:**

command: \$015(cr)  
 response: !010(cr) ; the module is not been reseted

**Related command:** \$AARS

8.4.12 ~AADNNNNN Set timeout to search DHCP

|              |                            |  |
|--------------|----------------------------|--|
| Description: | Set timeout to search DHCP |  |
| Command:     | ~AADNNNNN [CHK](cr)        |  |
| Syntax:      | ~                          | Command leading code                     |
|              | AA                         | Module address ID (01 to FF , Always 01) |
|              | D                          | is set DHCP search timeout command.      |
|              | NNNNN                      | DHCP timeout value (10~1800 sec, dec)    |
|              | CHK                        | Check sum                                |
|              | (cr)                       | Carriage return                          |
| Response:    | !AA [CHK](cr)              | Valid command                            |
|              | ?AA[CHK](cr)               | Invalid command                          |
|              | !                          | Delimiter for valid command              |
|              | ?                          | Delimiter for invalid command            |
|              | AA                         | Module address ID                        |
|              | CHK                        | Check sum                                |
|              | (cr)                       | Carriage return                          |

**Example:**

The command set timeout value to search DHCP servo. If there is no DHCP exist and timeout reached, the module will reboot and use static (Fixed) IP assigned by E9KUtiliy.exe

command: ~01D01200(cr)

response: !01(cr)

**Related command:** ~AAD

8.4.13 ~AAD Read timeout to search DHCP

|              |                            |  |
|--------------|----------------------------|--|
| Description: | Set timeout to search DHCP |  |
| Command:     | ~AAD [CHK](cr)             |  |
| Syntax:      | ~                          | Command leading code                                     |
|              | AA                         | Module address ID (01 to FF , Always 01)                 |
|              | D                          | is read DHCP search timeout command.                     |
|              | CHK                        | Check sum  |
| Response:    | (cr)                       | Carriage return  |
|              | !AANNNNN,D [CHK](cr)       | Valid command  |
|              | ?AA[CHK](cr)               | Invalid command  |
|              | !                          | Delimiter for valid command                              |
|              | ?                          | Delimiter for invalid command                            |
|              | AA                         | Module address ID  |
|              | NNNNN                      | DHCP timeout value (10~1800 sec, dec)                    |
|              | ,                          | Delimiter for DHCP IP OK                                 |
|              | D                          | DHCP IP OK,<br>= 1 - DHCP IP OK, otherwise<br>= 0 - none |
|              | CHK                        | Check sum  |
| (cr)         | Carriage return            |  |

**Example:**

The command read timeout is 1200 seconds and None DHCP IP.

command: **~01D(cr)**

response: **!0101200,0(cr)**

**Related command:** ~AADNNNNN

8.4.14 ^AAMAC Read MAC address

|              |                                |  |
|--------------|--------------------------------|--|
| Description: | Read MAC address               |  |
| Command:     | ^AAMAC [CHK](cr)               |  |
| Syntax:      | ^                              | Command leading code                     |
|              | AA                             | Module address ID (01 to FF , Always 01) |
|              | MAC                            | ccommand for read MAC address            |
|              | CHK                            | Check sum                                |
|              | (cr)                           | Carriage return                          |
| Response:    | !AAMMMMMMM<br>MMMMMM [CHK](cr) | Valid command                            |
|              | ?AA[CHK](cr)                   | Invalid command                          |
|              | !                              | Delimiter for valid command              |
|              | ?                              | Delimiter for invalid command            |
|              | AA                             | Module address ID                        |
|              | MMMMMMMMMMMMMM                 | MAC address(hex)                         |
|              | CHK                            | Check sum                                |
| (cr)         | Carriage return                |  |

**Example:**

command: ^01MAC(cr)

response: !0100E04C360629(cr) ; MAC Address: 00E04C360629

## 8.4.15 \$AACONNDD Set a single DO channel mode

|              |                               |  |
|--------------|-------------------------------|--|
| Description: | Set a single DO channel mode. |  |
| Command:     | \$AACONNDD [CHK](cr)          |  |
| Syntax:      | ^                             | Command leading code   |
|              | AA                            | Module address ID (01 to FF , Always 01)   |
|              | CO                            | command for set a single DO mode for channel N   |
|              | NN                            | Channel number (00~1F)   |
|              | DD                            | DO mode setting (2 characters),<br>= 00 - Direct DO output(default)<br>= 01 - Pluse output mode<br>= 02 - Low to high delay<br>= 03 - High to low delay<br>= 04 - Automatic DIO Synchronization Mode<br>= 05 - reserved<br>= 06 - DO Auto-Off Time Mode for DO <i>Low to High to Low</i> .<br>= 07 - DO Auto-Off Time Mode for DO <i>High to Low to High</i> . |
|              | CHK                           | Check sum  |
|              | (cr)                          | Carriage return  |
| Response:    | !AA [CHK](cr)                 | Valid command  |
|              | ?AA[CHK](cr)                  | Invalid command  |
|              | !                             | Delimiter for valid command  |
|              | ?                             | Delimiter for invalid command  |
|              | AA                            | Module address ID  |
|              | CHK                           | Check sum  |
|              | (cr)                          | Carriage return  |

**Example:**

Set DO channel(0) to *Low to high delay mode*.

Command: \$01CO0002(cr)

Response: !01(cr)

**Related command:** \$AACONN, \$AACIINDD, \$AACINN

## 8.4.16 \$AACONN Read a single DO channel mode

|              |                               |   |
|--------------|-------------------------------|---|
| Description: | Read a single DO channel mode |   |
| Command:     | \$AACONN [CHK](cr)            |   |
| Syntax:      | ^                             | Command leading code  |
|              | AA                            | Module address ID (01 to FF , Always 01)  |
|              | CO                            | command for read a single DO mode for channel N   |
|              | NN                            | Channel number (00~1F)  |
|              | CHK                           | Check sum   |
|              | (cr)                          | Carriage return   |
| Response:    | !AADD [CHK](cr)               | Valid command   |
|              | ?AA[CHK](cr)                  | Invalid command   |
|              | !                             | Delimiter for valid command   |
|              | ?                             | Delimiter for invalid command   |
|              | AA                            | Module address ID   |
|              | DD                            | DO mode setting (2 characters),<br>= 00 - Direct DO output(default)<br>= 01 - Pluse output mode<br>= 02 - Low to high delay<br>= 03 - High to low delay<br>= 04 - Automatic DIO Synchronization Mode<br>= 06 - DO Auto-Off Time Mode for DO <i>Low to High to Low.</i><br>= 07 - DO Auto-Off Time Mode for DO <i>High to Low to High.</i> |
|              | CHK                           | Check sum   |
|              | (cr)                          | Carriage return   |

**Example:**

 read DO channel(0) *Low to high delay mode*

Command: \$01CO00(cr)

Response: !0102(cr)

**Related command:** \$AACONNDD, \$AACIINNDD, \$AACINN

## 8.4.17 \$AACINDD Set a single DI channel mode

|              |                              |  |
|--------------|------------------------------|--|
| Description: | Set a single DI channel mode |  |
| Command:     | \$AACINDD [CHK](cr)          |  |
| Syntax:      | ^                            | Command leading code   |
|              | AA                           | Module address ID (01 to FF , Always 01)   |
|              | CI                           | command for set a single DI mode for channel N   |
|              | NN                           | Channel number (00~1F)   |
|              | DD                           | DI mode setting (2 characters),<br>bit(2,1,0) - DI mode setting(default).<br>= 0x000 - Direct DI input<br>= 0x001 - Counter Mode<br>= 0x010 - Low to high latch<br>= 0x011 - High to low latch<br>= 0x100 - Input frequency mode<br>bit(5,4,3) - always 0,<br>bit(6) - DI counter H/L width filter (Default H/L width =5ms)<br>= 0 - disable (off), (default)<br>= 1 - enable (on)<br>bit(7) - always 0, |
|              | CHK                          | Check sum  |
|              | (cr)                         | Carriage return  |
| Response:    | !AA [CHK](cr)                | Valid command  |
|              | ?AA[CHK](cr)                 | Invalid command  |
|              | !                            | Delimiter for valid command  |
|              | ?                            | Delimiter for invalid command  |
|              | AA                           | Module address ID  |
|              | CHK                          | Check sum  |
|              | (cr)                         | Carriage return  |

**Example:**

Set DI channel(0) to Counter Mode, DI counter H/L width filter enable,

Command: \$01CI00C1(cr) // bit(2,1,0) = 0x001, bit(6)=1

Response: !01(cr)

**Related command:** \$AACINN, \$AACONNDD, \$AACONN

## 8.4.18 \$AACINN Read a single DI channel mode

|              |                               |  |
|--------------|-------------------------------|--|
| Description: | Read a single DI channel mode |  |
| Command:     | \$AACINN [CHK](cr)            |  |
| Syntax:      | \$                            | Command leading code   |
|              | AA                            | Module address ID (01 to FF , Always 01)   |
|              | CI                            | command for read a single DI mode for channel N  |
|              | NN                            | Channel number (00~1F)   |
|              | CHK                           | Check sum  |
|              | (cr)                          | Carriage return  |
| Response:    | !AADD [CHK](cr)               | Valid command  |
|              | ?AA[CHK](cr)                  | Invalid command  |
|              | !                             | Delimiter for valid command  |
|              | ?                             | Delimiter for invalid command  |
|              | AA                            | Module address ID  |
|              | DD                            | DI mode setting (2 characters),<br>bit(2,1,0) - DI mode setting.<br>= 0x000 - Direct DI input<br>= 0x001 - Counter Mode<br>= 0x010 - Low to high latch<br>= 0x011 - High to low latch<br>= 0x100 - Input frequency mode<br>bit(5,4,3) - always 0,<br>bit(6) - DI counter H/L width filter (Default H/L width =5ms)<br>= 0 - disable (off).<br>= 1 - enable (on).<br>bit(7) - always 0, |
|              | CHK                           | Check sum  |
|              | (cr)                          | Carriage return  |

**Related command:** \$AACINNDD, \$AACONNDD, \$AACONN

8.4.19 ~AADSMN Set DI/O active state

|              |  |   |
|--------------|--|---|
| Description: | Set digital input/output active state. |   |
| Command:     | ~AADSMN [CHK](cr)                      |   |
| Syntax:      | ~                                      | Command leading code  |
|              | AA                                     | Module address ID (01 to FF , Always 01)  |
|              | DS                                     | Command for setting DIO active status   |
|              | M                                      | Digital input channel active values,<br>= 0 - represent input value=0 is activate (ON),<br>input value=1 is deactivate (OFF or OPEN). <b>(Default)</b><br>= 1 - represent input value=1 is activate (ON),<br>input value=0 is deactivate (OFF or OPEN). |
|              | N                                      | Digital output channel active values,<br>= 0 - represent output value=1 is activate (ON),<br>output value=0 is deactivate (OFF). <b>(Default)</b><br>= 1 - represent output value=1 is deactivate (OFF),<br>output value=0 is activate (ON).            |
|              | CHK                                    | Check sum   |
|              | (cr)                                   | Carriage return   |
| Response:    | !AA [CHK](cr)                          | Valid command   |
|              | ?AA[CHK](cr)                           | Invalid command   |
|              | !                                      | Delimiter for valid command   |
|              | ?                                      | Delimiter for invalid command   |
|              | AA                                     | Module address ID   |
|              | CHK                                    | Check sum   |
|              | (cr)                                   | Carriage return   |

**Example:** For EX-9050A (10-DI/6-DO channels)

◆ Reads the value of the DI/DO channels

Command: @016(cr)

Response: >000003FF (cr) ; DO=0000 & DI=03FF

◆ Read DI active state is 0 and DO active state is 0.

Command: ~01DS(cr)

Response: !0100(cr)

◆ Set input active state= 1, when input value=1 and set output active state =1, when output value=high/open,

Command: ~01DS11(cr)

Response: !01(cr)

◆ Reads the value of the DI/DO channels

Command: @016(cr)

Response: >003F0000 (cr) ; DO=003F & DI=0000

**Related command:** ~AADS

8.4.20 ~AADS Read DI/O active state

|              |   |   |
|--------------|---|---|
| Description: | Read digital input/output active state. |   |
| Command:     | ~AADS [CHK](cr)                         |   |
| Syntax:      | ~                                       | Command leading code  |
|              | AA                                      | Module address ID(01 to FF , Always 01)   |
|              | DS                                      | Command for read DIO active status  |
|              | CHK                                     | Check sum   |
| Response:    | (cr)                                    | Carriage return   |
|              | !AAMN [CHK](cr)                         | Valid command   |
|              | ?AA[CHK](cr)                            | Invalid command   |
|              | !                                       | Delimiter for valid command   |
|              | ?                                       | Delimiter for invalid command   |
|              | AA                                      | Module address ID   |
|              | M                                       | Digital input channel active values,<br>= 0 - represent input value=0 is activate (ON),<br>input value=1 is deactivate (OFF or OPEN). <b>(Default)</b><br>= 1 - represent input value=1 is activate (ON),<br>input value=0 is deactivate (OFF or OPEN). |
|              | N                                       | Digital output channel active values,<br>= 0 - represent output value=1 is activate (ON),<br>output value=0 is deactivate (OFF). <b>(Default)</b><br>= 1 - represent output value=1 is deactivate (OFF),<br>output value=0 is activate (ON).            |
|              | CHK                                     | Check sum   |
|              | (cr)                                    | Carriage return   |

**Example:** Ref. command ~AADSMN

**Related command:** ~AADSMN

8.4.21 \$AA6 Read DI /DO Channel Status

|              |  |  |
|--------------|--|--|
| Description: | This command requests that the specific EX-92xx-MTCP Series module return the status of its digital input and digital output channels. (same as “@AA”) |  |
| Command:     | \$AA6 [CHK](cr)  |  |
| Syntax:      | \$   | Command leading code                     |
|              | AA   | Module address ID (01 to FF , Always 01) |
|              | 6  | Command for read DIO channel status      |
|              | CHK  | Check sum                                |
| Response:    | (cr)   | Carriage return                          |
|              | >DDDDFFFF[CHK](cr)   | Valid command                            |
|              | ?AA[CHK](cr)   | Invalid command                          |
|              | >  | Delimiter for valid command              |
|              | ?  | Delimiter for invalid command            |
|              | AA   | Module address ID                        |
|              | DDDD   | Hexadecimal DO status (0000~FFFF).       |
|              | FFFF   | Hexadecimal DI status (0000~FFFF).       |
|              | CHK  | Check sum                                |
| (cr)         | Carriage return  |  |

Example 2: Read EX-9250-MTCP DIO status

command: \$016(cr) ; read EX-9250-MTCP DIO status

response : !01000030004(cr) ; represents DO0, DO1 are ON and DI2 is ON

Related command: @AA, @AA6

8.4.22 @AA Read DIO status

|              |   |   |
|--------------|---|---|
| Description: | This command requests that the specific EX-92xx-MTCP Series module return the status of its digital input and digital output channels. (same as “@AA6”) |   |
| Command:     | @AA [CHK](cr)   |   |
| Syntax:      | @   | Command leading code                    |
|              | AA  | Module address ID(01 to FF , Always 01) |
|              | CHK   | Check sum                               |
|              | (cr)  | Carriage return                         |
| Response:    | >DDDDFFFF[CHK](cr)  | Valid command                           |
|              | ?AA[CHK](cr)  | Invalid command                         |
|              | >   | Delimiter for valid command             |
|              | ?   | Delimiter for invalid command           |
|              | AA  | Module address ID                       |
|              | DDDD  | Hexadecimal DO status (0000~FFFF).      |
|              | FFFF  | Hexadecimal DI status (0000~FFFF).      |
|              | CHK<br>(cr)   | Check sum<br>Carriage return            |

**Example 1:** Read EX-9250-MTCP DIO status

command: @01(cr) ; read EX-9250-MTCP DIO status  
 response : >00030004(cr) ; represents DO0, DO1 are ON and DI2 is ON

**Related command:** @AA6, \$AA6

## 8.4.23 #AA00DD Write DO channels

|              |  |   |
|--------------|--|---|
| Description: | Write a value to digital output channels). |   |
| Command:     | #AA00DD [CHK](cr)                          |   |
| Syntax:      | #  | Command leading code                                      |
|              | AA   | Module address ID (01 to FF , Always 01)                  |
|              | 00   | Represents Writing to all channels (write a byte) command |
|              | DD   | Represents the data be written to digital output(00~FF)   |
|              | CHK  | Check sum   |
|              | (cr)                                       | Carriage return   |
| Response:    | >AA [CHK](cr)                              | Valid command   |
|              | ?AA[CHK](cr)                               | Invalid command   |
|              | >  | Delimiter for valid command                               |
|              | ?  | Delimiter for invalid command                             |
|              | AA   | Module address ID   |
|              | CHK  | Check sum   |
|              | (cr)                                       | Carriage return   |

**Example:** An output byte with value 33h (00110011) is sent to the digital output module at address 01h.  
 The Output channel 0,1,4,5 = ON, Output channel 2,3,6,7 = OFF

command: #010033(cr)

response: >01(cr)

**Related command:** @AA, \$AA6, @AA6, @AA6DDD

8.4.24 #AA1NDD Set a single Digital Output Channel

|              |                                       |  |
|--------------|---------------------------------------|--|
| Description: | Write a single digital output channel |  |
| Command:     | #AA1NDD [CHK](cr)                     |  |
| Syntax:      | #                                     | Command leading code   |
|              | AA                                    | Module address ID (01 to FF , Always 01)   |
|              | 1                                     | represents writing to a single DO channel command  |
|              | N                                     | Channel number (0-F).  |
|              | DD                                    | represents the status you want to set to the specific channel.<br>= 00 – output Deactivate.<br>= 01 – output Activate. |
|              | CHK                                   | Check sum  |
|              | (cr)                                  | Carriage return  |
| Response:    | !AA [CHK](cr)                         | Valid command  |
|              | ?AA[CHK](cr)                          | Invalid command  |
|              | !                                     | Delimiter for valid command  |
|              | ?                                     | Delimiter for invalid command  |
|              | AA                                    | Module address ID  |
|              | CHK                                   | Check sum  |
|              | (cr)                                  | Carriage return  |

**Example 1:** The command set digital channel 2 Activate (ON) status for the specific module at address 01h.

command: #011201(cr)

response: !01

**Example 2:** The command set digital channel 2 Deactivate (OFF) status for the specific module at address 01h.

command: #011200(cr)

response: !01

**Related command:** @AA, \$AA6, @AA6, @AA6DDD , #AA0DD

8.4.25 @AA6DDDD Write DO channels (0~15)

|              |   |   |
|--------------|---|---|
| Description: | Write value to digital output channels (0~15) |   |
| Command:     | @AA6DDDD [CHK](cr)                            |   |
| Syntax:      | @   | Command leading code  |
|              | AA  | Module address ID(01 to FF , Always 01)                     |
|              | 6   | represents write value to digital output channels command   |
|              | DDDD  | Represents the data be written to digital output(0000~FFFF) |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |
| Response:    | > [CHK](cr)                                   | Valid command   |
|              | ?AA[CHK](cr)                                  | Invalid command   |
|              | >   | Delimiter for valid command                                 |
|              | ?   | Delimiter for invalid command                               |
|              | AA  | Module address ID   |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |

**Example: For E-9050A**, write DO(0,2) to Activate (ON)

command: @0160005(cr)

response: >(cr)

**Related command:** @AA, \$AA6, @AA6, @AA6DDD , #AA0DD, #AA1NDD

8.4.26 @AA6ONSS Set a single digital output channel

|              |                                       |  |
|--------------|---------------------------------------|--|
| Description: | Write a single digital output channel |  |
| Command:     | @AA6ONSS [CHK](cr)                    |  |
| Syntax:      | @                                     | Command leading code   |
|              | AA                                    | Module address ID(01 to FF , Always 01)  |
|              | 6O                                    | represents writing to a single DO channel command  |
|              | N                                     | Channel number (0-F).  |
|              | SS                                    | represents the status you want to set to the specific channel.<br>= 00 – output Deactivate.<br>= 01 – output Activate. |
|              | CHK                                   | Check sum  |
|              | (cr)                                  | Carriage return  |
| Response:    | !AA [CHK](cr)                         | Valid command  |
|              | ?AA[CHK](cr)                          | Invalid command  |
|              | !                                     | Delimiter for valid command  |
|              | ?                                     | Delimiter for invalid command  |
|              | AA                                    | Module address ID  |
|              | CHK                                   | Check sum  |
|              | (cr)                                  | Carriage return  |

**Example:** Set DO(1) to active state

command: @016O1(cr) ; Read channel(1) DO status  
 response: >00(cr) ; 00 represents DO channel(1) is deactivated

command: @016O101(cr) ; set DO(1) to activate state  
 response: !01(cr)

command: @016O1(cr) ; Read DO channel(1) value  
 response: >01(cr) ; 01 represents DO channel(1) is activated

**Related command:** @AA, \$AA6, @AA6, @AA6DDD , #AA00DD, #AA1NDD, @AA6DDDD

8.4.27 @AA6ON Read a single digital output channel

|              |  |  |
|--------------|--|--|
| Description: | Read status of a single digital output channel |  |
| Command:     | @AA6ON [CHK](cr)                               |  |
| Syntax:      | @  | Command leading code   |
|              | AA   | Module address ID (01 to FF , Always 01)   |
|              | 6O   | command to read status of a single digital output channel.   |
|              | N  | Channel number (0-F).  |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return  |
| Response:    | >DD [CHK](cr)                                  | Valid command  |
|              | ?AA[CHK](cr)                                   | Invalid command  |
|              | >  | Delimiter for valid command  |
|              | ?  | Delimiter for invalid command  |
|              | AA   | Module address ID  |
|              | DD   | Represents the status you want to set to the specific channel.<br>= 00 – output Deactivate.<br>= 01 – output Activate. |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return  |

**Example:** Read DO(1) status

command: @016O1(cr)

response: >01(cr) ; 01 represents DO channel(1) is activated

**Related command:** @AA, \$AA6, @AA6, @AA6DDD , #AA00DD, #AA1NDD, @AA6DDDD, @AA6ONSS

8.4.28 @AA6 Read the status of all DIO channels

|              |   |  |
|--------------|---|--|
| Description: | Read the status of all 16 DO and 16 DI channels |  |
| Command:     | @AA6 [CHK](cr)                                  |  |
| Syntax:      | @   | Command leading code   |
|              | AA  | Module address ID(01 to FF , Always 01)                      |
|              | 6   | command for read DIO status                                  |
|              | CHK   | Check sum  |
|              | (cr)  | Carriage return  |
| Response:    | >TTTTNNNN [CHK](cr)                             | Valid command  |
|              | ?AA[CHK](cr)                                    | Invalid command  |
|              | >   | Delimiter for valid command                                  |
|              | ?   | Delimiter for invalid command                                |
|              | AA  | Module address ID  |
|              | TTTT  | Represents the 4-character hexadecimal DO status (0000~FFFF) |
|              | NNNN  | Represents the 4-character hexadecimal DI status (0000~FFFF) |
|              | CHK   | Check sum  |
| (cr)         | Carriage return                                 |  |

**Example:** For E-9050A,

command: @016(cr)

response: >00030004(cr) ; 0003 represents DO0, DO1 are ON and DO2~DO15 are OFF  
; 0004 represents DI2 is ON and DI0, DI1, and DI3~DI15 are OFF

**Related command:** @AA, \$AA6, @AA6, @AA6DDD , #AA0DD, #AA1NDD, @AA6DDDD, @AA6ONSS

8.4.29 @AA6IN Read a single digital input channel

|              |   |  |
|--------------|---|--|
| Description: | Read status of a single digital input channel |  |
| Command:     | @AA6IN [CHK](cr)                              |  |
| Syntax:      | @   | Command leading code                                       |
|              | AA  | Module address ID (01 to FF, Always 01)                    |
|              | 6I  | command to read status of a single digital input channel   |
|              | N   | Channel number (0-F).                                      |
|              | CHK   | Check sum  |
|              | (cr)  | Carriage return  |
| Response:    | >DD [CHK](cr)                                 | Valid command  |
|              | ?AA[CHK](cr)                                  | Invalid command  |
|              | >   | Delimiter for valid command                                |
|              | ?   | Delimiter for invalid command                              |
|              | AA  | Module address ID  |
|              | DD  | Input value<br>= 00 – Inactive(OFF).<br>= 01 – Active(ON). |
|              | CHK   | Check sum  |
|              | (cr)  | Carriage return  |

**Example:** Read the status of DI channel(1)

command: @016I1(cr)

response: >01(cr) ; 01 represents DI channel(1) is active

**Related command:** @AA, \$AA6, @AA6, @AA6DDD, #AA00DD, #AA1NDD, @AA6DDDD, @AA6ONSS, @AA6ON

8.4.30 \$AA7 Read DI latch status

|              |                      |  |
|--------------|----------------------|--|
| Description: | Read DI latch status |  |
| Command:     | \$AA7 [CHK](cr)      |  |
| Syntax:      | \$                   | Command leading code   |
|              | AA                   | Module address ID (01 to FF , Always 01)   |
|              | 7                    | Represents read DI latch status command  |
|              | CHK                  | Check sum  |
|              | (cr)                 | Carriage return  |
| Response:    | !AADDDD [CHK](cr)    | Valid command  |
|              | ?AA[CHK](cr)         | Invalid command  |
|              | !                    | Delimiter for valid command  |
|              | ?                    | Delimiter for invalid command  |
|              | AA                   | Module address ID  |
|              | DDDD                 | Represent DI latch status, The discrete DI latch status in the response message are packed as one input per bit of the data field. Status is indicated as 1= latched; 0= no latched. |
|              | CHK                  | Check sum  |
| (cr)         | Carriage return      |  |

**Example:** The command read DI latch status= 0003, DI #0 latched, DI #1 latched, and DI #2 ~ DI #15 no latched  
 command: \$017(cr)  
 response: !010003(cr)

**Related command:** \$AACLSNN

## 8.4.31 \$AACLSNN Clear DI latch status for channel N

|              |                      |   |
|--------------|----------------------|---|
| Description: | Read DI latch status |   |
| Command:     | \$AACLSNN [CHK](cr)  |   |
| Syntax:      | \$                   | Command leading code  |
|              | AA                   | Module address ID (01 to FF , Always 01)  |
|              | CLS                  | Represents clear DI latch status command  |
|              | NN                   | Represents DI channel to be cleared,<br>= 0x00 ~ 0x0F - channel number.<br>= 0xFF - Clear all DI channels |
|              | CHK                  | Check sum   |
|              | (cr)                 | Carriage return   |
| Response:    | !AA [CHK](cr)        | Valid command   |
|              | ?AA[CHK](cr)         | Invalid command   |
|              | !                    | Delimiter for valid command   |
|              | ?                    | Delimiter for invalid command   |
|              | AA                   | Module address ID   |
|              | CHK                  | Check sum   |
|              | (cr)                 | Carriage return   |

**Example:** This command clears DI(1) latch status

command: \$01CLS01(cr)

response: !01(cr)

**Example:** This command clears all DI latch status

command: \$01CLSFF(cr)

response: !01(cr)

**Related command:** \$AA7

8.4.32 \$AAYM5CRPSTTTT (data) Set DI match DO latch Mode of DIO Sync.

|              |   |  |
|--------------|---|--|
| Description: | Set DO to DI match DO latch Mode of DIO Synchronization. A single digital output channel is activated (1 or 0) and latched, when DI input value match DI mask pattern.<br>(available for version 6.100 or later). |  |
| Command:     | \$AAYM5CRPSTTTT (data) [CHK](cr)  |  |
| Syntax:      | \$  | Command leading code   |
|              | AA  | Module address ID (01 to FF , Always 01)   |
|              | YM5   | command to set DI match/ DO latch mode of Auto DIO Sync.   |
|              | C   | Mirrored DO channel number (hex 0~F).  |
|              | R   | write DO to local module or remote module when DIO sysnc active.<br>= 0 - Local Mode, (Local DI->Local DO)<br>= 1 - remote Mode,(Local DI->Remote DO)  |
|              | P   | Enable/Disable Auto Run(Start) DIO Synchronization operation when power-on.<br>= 0 - Disable<br>= 1 - Enable   |
|              | S   | digital output active state when DI data pattern match<br>= 0 - digital output 0 when DI data pattern match<br>= 1 - digital output 1 when DI data pattern match<br>= 2 - toggle digital output  |
|              | TTTT  | DI channel pre-bounce time (hex 0000~FFFF ms)  |
|              | (data)  | represent DI mask pattern is used to indicate the monitored input channels(0~15) and mask state (16char),<br>bits(15..0) - indicate DI channel(15..0) to be monitored and mask state,<br>= '1' - indicate DI channel n is monitored and mask state is '1'.<br>= '0' - indicate DI channel n is monitored and mask state is '0'.<br>= 'X' - don't care (not be monitored) |
|              | CHK   | Check sum  |
| (cr)         | Carriage return   |  |
| Response:    | !AA [CHK](cr)   | Valid command  |
|              | ?AA[CHK](cr)  | Invalid command  |
|              | !   | Delimiter for valid command  |
|              | ?   | Delimiter for invalid command  |
|              | AA  | Module address ID  |
|              | CHK   | Check sum  |
|              | (cr)  | Carriage return  |

**Note:** Before running DIO Synchronization function, you must set DO Mode to "DIO Sync. Mode" via command \$AACONNDD.

**Example:** Assume DI channel 0,2,5 are monitored and the ASCII form of DI mask pattern is XXXXXXXXXX1XX0X1.  
When DI input ch(0,5)=1 and ch(2)=0, the corresponding DO(0) will be set to ON(1) and latched.  
DI pre-debounce time is 300 msec. (Ref. to 12.7)

**command:** \$01YM50111012C XXXXXXXXXX1XX0X1(cr)

where R = 1 - remote Mode,(Local DI->Remote DO).

P = 1 - Enable Auto Run(Start) DIO Synchronization operation when power-on.

S = 1 - digital output active state(=1) when DI value match DI mask pattern

TTTT = 0x012C (300ms)

**response:** !01(cr) ; valid

**Related command:** \$AACONNDD, @AA6ONSS, \$AAY6MRCS, \$AAY6MC, \$AAY6MS,  
\$AAYM4CRPHHHLLLL (data), \$AAYM6CRPSTTTT(data)

8.4.33 \$AAYM6CRPSTTTT (data) Set DI mismatch DO latch Mode of DIO Sync.

|              |  |  |
|--------------|--|--|
| Description: | Set DO to DI mismatch DO latch Mode for Automatic DIO Synchronization. A single digital output channel is activated (1 or 0) and latched, when DI input value mismatch DI mask pattern.<br>(available for version 6.100 or later). |  |
| Command:     | \$AAYM6CRPSTTTT (data) [CHK](cr)   |  |
| Syntax:      | \$   | Command leading code   |
|              | AA   | Module address ID (01 to FF , Always 01)   |
|              | YM6  | command to set DI mismatch/DO latch mode of Auto DIO Sync.   |
|              | C  | Mirrored DO channel number (hex 0~F).  |
|              | R  | write DO to local module or remote module when DIO sysnc active.<br>= 0 - Local Mode, (Local DI->Local DO)<br>= 1 - remote Mode,(Local DI->Remote DO)  |
|              | P  | Enable/Disable Auto Run(Start) DIO Synchronization operation when power-on.<br>= 0 - Disable<br>= 1 - Enable   |
|              | S  | digital output active state when DI data pattern match<br>= 0 - digital output 0 when DI data pattern match<br>= 1 - digital output 1 when DI data pattern match<br>= 2 - toggle digital output  |
|              | TTTT   | DI channel pre-debounce time (hex 0000~FFFF ms)  |
|              | (data)   | represent DI mask pattern is used to indicate the monitored input channels(0~15) and mask state, (16 char),<br>bits(15..0) - indicate DI channel(15..0) to be monitored and mask state,<br>= '1' - indicate DI channel n is monitored and mask state is '1'.<br>= '0' - indicate DI channel n is monitored and mask state is '0'.<br>= 'X' - don't care (not be monitored) |
|              | CHK  | Check sum  |
| (cr)         | Carriage return  |  |
| Response:    | !AA [CHK](cr)  | Valid command  |
|              | ?AA[CHK](cr)   | Invalid command  |
|              | !  | Delimiter for valid command  |
|              | ?  | Delimiter for invalid command  |
|              | AA   | Module address ID  |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return  |

**Note:** Before starting Automatic DIO Synchronization function, you must set DO Mode to "DIO Sync. Mode" (Ref. \$AACONNDD).

**Example:** Assume DI channel 0,2,5 are monitored and the ASCII form of DI mask pattern is XXXXXXXXXX1XX0X1. When DI input ch(0) ≠ 1 or ch(5) ≠ 1 or ch(2) ≠ 0(mismatch DI mask pattern), the corresponding DO(0) will be set to ON(1) and latched. DI pre-debounce time is 300 msec.

**command:** \$01YM6011012CXXXXXXXXXX1XX0X1(cr)

where R = 1 - remote Mode,(Local DI->Remote DO).

P = 1 - enable Auto Run(Start) DIO Synchronization operation when power-on.

S = 1 - digital output active state(=1) when DI value mismatch DI mask pattern

TTTT = 0x012C (300ms)

**response:** !01(cr) ; valid

**Related command:** \$AACONNDD, @AA6ONSS, \$AAY6MRCS, \$AAY6MC, \$AAY6MS, \$AAYM1CPSHHHLLLL (data), \$AAYM2CPSTTTT(data)

8.4.34 **\$AAYMNDDDDDDD** Set DIO Sync. remote device IP for DO channel N

|              |   |   |
|--------------|---|---|
| Description: | Set remote device IP for DO channel N (for DIO sync. mode)<br>(available for version 6.100 or later). |   |
| Command:     | \$AAYMNDDDDDDD [CHK](cr)  |   |
| Syntax:      | \$  | Command leading code  |
|              | AA  | Module address ID (01 to FF , Always 01)  |
|              | YM  | command to set DI mismatch/DO latch mode of Auto DIO Sync.  |
|              | N   | Mirrored DO channel number (hex 0~F).   |
|              | DDDDDDDD  | IP number(hex). (Ex: IP 192.168.0.122 = C0A8007A)<br>(IP= 0xFFFFFFFF(255.255.255.255) for all remote modules) |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |
|              | !AA [CHK](cr)   | Valid command   |
|              | ?AA[CHK](cr)  | Invalid command   |
| Response:    | !   | Delimiter for valid command   |
|              | ?   | Delimiter for invalid command   |
|              | AA  | Module address ID   |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |

**Example:** Set DIO Sync. Remote device IP(0xC0A8007A/192.168.0.122) for DO channel 0.

**command:** \$01YM0C0A8007A (cr)

**response:** !01(cr) ; valid

**Related command:** \$AACONNDD, @AA6ONSS, \$AAY6MRCS, \$AAY6MC, \$AAY6MS, \$AAYM5CRPHHHLLLL (data), \$AAYM5CRPSTTTT(data), \$AAYM6CRPSTTTT(data)

8.4.35 \$AAYM4C Read DIO Synchronization Mode parameters

|              |  |   |
|--------------|--|---|
| Description: | This command is used to read parameters of DIO Synchronization Mode<br>(available for version 6.100 or later). |   |
| Command:     | \$AAYM4C [CHK](cr)   |   |
| Syntax:      | \$   | Command leading code  |
|              | AA   | Module address ID (01 to FF , Always 01)  |
|              | YM4  | command to read parameters of DIO Synchronization Mode.   |
|              | C  | mirrored DO channel number (0~F).   |
|              | CHK  | Check sum   |
|              | (cr)   | Carriage return   |
| Response:    | !AARDPSTTTT(data)(cr)  | For " <u>DI match/mismatch DO latch Mode</u> " Valid command.   |
|              | ?AA[CHK](cr)   | Invalid command   |
|              | !  | Delimiter for valid command   |
|              | ?  | Delimiter for invalid command   |
|              | AA   | Module address ID   |
|              | R  | write DO to local module or remote module when DIO sysnc active.<br>= 0 - Local Mode, (Local DI->Local DO)<br>= 1 - remote Mode,(Local DI->Remote DO)   |
|              | D  | Specific DO channel mode.<br>= 0 - specific DO channel isn't mirrored to DI hannel(s).<br>= 2 - DIO Synchronization- DI match DO latch Mode.<br>= 3 - DIO Synchronization- DI mismatch DO latch Mode.   |
|              | P  | Enable/Disable Auto Run(Start) DIO Synchronization operation when power-on.<br>= 0 - Disiable<br>= 1 - Enable   |
|              | S  | digital output active state when DI data pattern match<br>= 0 - digital output 0 when DI data pattern match<br>= 1 - digital output 1 when DI data pattern match<br>= 2 - toggle digital output   |
|              | TTTT   | DI channels pre-debounce time(0000~FFFF/ms).  |
|              | (data)   | This parameter is used to indicate the monitored input channels(15~0) (16 char).<br><br>bits(15..0) - indicate DI channel(15..0) state to be monitored,<br>bit n = '1' or '0' - indicate DI channel n(0~15) is monitored and mask state is 1 or 0<br>= 'X' - indicate the DI channel n(0~15) isn't monitored,<br><br>Example: DI channel(0,1,2,4,5,7) are monitored,<br>(data) = "XXXXXXXX0X10X011" |
|              | CHK  | Check sum   |
| (cr)         | Carriage return  |   |

**Example:** Read parameters of DO(0) DIO sync Mode.

command: \$01YM4(cr) ; Read DIO sync Mode parameters of DO(0).

response: !011100000A000AXXXXXXXXXX1XXXXXX (cr) ; valid

**Related command:** \$AACONNDD, @AA6ONSS, \$AAY6MRCS, \$AAY6MS, \$AAYM4CRPHHHLLLL (data), \$AAYM5CRPSTTTT(data), \$AAYM6CRPSTTTT(data)

8.4.36 \$AAYMRCS Start(Run)/Stop *DIO Synchronization* operation

|              |  |  |
|--------------|--|--|
| Description: | This command is used to start (run)/stop the DIO Synchronization operation.<br>(available for version 6.070 or later). |  |
| Command:     | \$AAYMRCS [CHK](cr)  |  |
| Syntax:      | \$   | Command leading code   |
|              | AA   | Module address ID (01 to FF , Always 01)   |
|              | YMR  | represent this command is used to start/stop DIO Synchronization operation.  |
|              | C  | mirrored DO channel number (0~F).  |
|              | S  | Start/Stop DIO Synchronization operation.<br>= 0 - Stop DIO Synchronization operation (default)<br>= 1 - Start(Run) DIO Synchronization operation. |
|              | CHK  | Check sum  |
| Response:    | (cr)   | Carriage return  |
|              | !AA [CHK](cr)  | Valid command  |
|              | ?AA[CHK](cr)   | Invalid command  |
|              | !  | Delimiter for valid command  |
|              | ?  | Delimiter for invalid command  |
|              | AA   | Module address ID  |
|              | CHK  | Check sum  |
| (cr)         | Carriage return  |  |

**Note:** Before starting *Automatic DIO Synchronization* function, you must set DO Mode to "*DIO Sync. Mode*" (Ref. \$AACONNDD).

**Example:** Assume DI channel 0,2,5 are monitored and the ASCII form of DI mask pattern is XXXXXXXXXX1XX0X1. When DI input ch(0,5)=1 and ch(2)=0, the corresponding DO(0) will be set to ON(1) (*DO toggle mode*), otherwise DO(0) will be set to OFF(0). DI pre-debounce time is 300 msec and post-debounce time=150msec.

Step 1: set DO mode(DD=04) to "*DIO Sync. Mode*" for DO channel 0 (Ref. \$AACONNDD)

**command:** \$01CO0004(cr)  
**response:** !01(cr) ; valid

Step 2: set DI channels(ch(0,5)=1,ch(2)=0) DI mask pattern for *DO Toggle Mode*.

**command:** \$01YM1011012C0096XXXXXXXXXX1XX0X1(cr)  
**response:** !01(cr) ; valid

Step 3: set the digital output channel to OFF. (ref. @AA6ONSS)

**command:** @016O000(cr)  
**response:** !01(cr) ; valid

Step 4: Start(Run) DO(0) DIO Sync. operation

**command:** \$01YMR01(cr)  
**response:** !01(cr) ; valid

**Related command:** \$AACONNDD, @AA6ONSS, \$AAY6MC, \$AAY6MS, \$AAYM1CPSHHHHLLLL (data), \$AAYM2CPSTTTT(data)

8.4.37 \$AAYMC Read DIO Synchronization Mode parameters

|              |  |  |
|--------------|--|--|
| Description: | This command is used to read parameters of DIO Synchronization Mode (Ref. to 12.7). (available for version 6.07 or later). |  |
| Command:     | \$AAYMC [CHK](cr)  |  |
| Syntax:      | \$   | Command leading code   |
|              | AA   | Module address ID (01 to FF , Always 01)   |
|              | YM   | command to read parameters of DIO Synchronization Mode.  |
|              | C  | mirrored DO channel number (0~F).  |
|              | CHK<br>(cr)  | Check sum<br>Carriage return   |
| Response:    | !AADPSTTTT(data)(cr)   | For " <u>DI match/mismatch DO latch Mode</u> " Valid command.  |
|              | ?AA[CHK](cr)   | Invalid command  |
|              | !  | Delimiter for valid command  |
|              | ?  | Delimiter for invalid command  |
|              | AA   | Module address ID  |
|              | D  | Specific DO channel mode.<br>= 0 - specific DO channel isn't mirrored to DI hannel(s).<br>= 2 - DIO Synchronization- DI match DO latch Mode.<br>= 3 - DIO Synchronization- DI mismatch DO latch Mode.  |
|              | P  | Enable/Disable Auto Run(Start) DIO Synchronization operation when power-on.<br>= 0 - Disiable<br>= 1 - Enable  |
|              | S  | digital output active state when DI data pattern match<br>= 0 - digital output 0 when DI data pattern match<br>= 1 - digital output 1 when DI data pattern match<br>= 2 - toggle digital output  |
|              | TTTT   | DI channels pre-debounce time(0000~FFFF/ms).   |
|              | (data)   | This parameter is used to indicate the monitored input channels(15~0) (16 char).<br>bits(15..0) - indicate DI channel(15..0) state to be monitored,<br>bit n = '1' or '0' - indicate DI channel n(0~15) is monitored and mask state is 1 or 0<br>= 'X' - indicate the DI channel n(0~15) isn't monitored,<br>Example: DI channel(0,1,2,4,5,7) are monitored,<br>(data) = "XXXXXXXXX0X10X011" |
|              | CHK<br>(cr)  | Check sum<br>Carriage return   |

**Example:** Read parameters of DO(0) DIO sync Mode (Ref. to 12.7).

command: \$01YM0(cr) ; Read DIO sync Mode parameters of DO(0).  
response: !01301012CXXXXXXXXXXXXXXXX01(cr) ; valid

**Related command:** \$AACONNDD, @AA6ONSS, \$AAY6MRCS, \$AAY6MS, \$AAYM1CPSHHHLLLL (data), \$AAYM2CPSTTTT(data)

8.4.38 \$AAYMS Read current DO activated status during DIO Sync. operation

|              |  |  |
|--------------|--|--|
| Description: | The DO activity status bit is sets when th channel of output has occurred (for <i>DIO Sync. mode</i> ).<br>(Ref. to 12.7), (available for version 6.070 or later). |  |
| Command:     | \$AAYMS [CHK](cr)  |  |
| Syntax:      | \$   | Command leading code   |
|              | AA   | Module address ID (01 to FF , Always 01)   |
|              | YMS  | command to read DO current state during DIO Sync. operation  |
|              | CHK  | Check sum  |
| Response:    | (cr)   | Carriage return  |
|              | !AADDDD (cr)   | Valid command.   |
|              | ?AA[CHK](cr)   | Invalid command  |
|              | !  | Delimiter for valid command  |
|              | ?  | Delimiter for invalid command  |
|              | AA   | Module address ID  |
|              | DDDD   | DO channels (15..0) status(1=active, 0=inactive)<br>(After read the all of DO activity status are cleared) |
|              | CHK  | Check sum  |
| (cr)         | Carriage return  |  |

**Example:** Read DO current status of DIO Synchronization(Ref. to 12.7).

command: \$01YMS(cr)

response: !010005(cr) ; valid and DO(0,2) have been activated

**Related command:** \$AACONNDD, @AA6ONSS, \$AAY6MRCS, \$AAY6MC, \$AAYM1CPSHHHLLLL (data), \$AAYM2CPSTTTT(data)

8.4.39 \$AAYMPN Read remote device IP for DO channel N(for DIO sync. mode)

|              |   |   |
|--------------|---|---|
| Description: | Read remote device IP for DO channel N(for DIO sync. mode) .<br>(for firmware version 6.100 or later) |   |
| Command:     | \$AAYMPN [CHK](cr)  |   |
| Syntax:      | \$  | Command leading code  |
|              | AA  | Module address ID (01 to FF , Always 01)  |
|              | YMP   | command to Read remote device IP  |
|              | N   | DO channel number (0~F)   |
|              | (cr)  | Carriage return   |
| Response:    | !AADDDDDDD (cr)   | Valid command.  |
|              | ?AA[CHK](cr)  | Invalid command   |
|              | !   | Delimiter for valid command   |
|              | ?   | Delimiter for invalid command   |
|              | AA  | Module address ID   |
|              | DDDDDDDD  | IP address(hex). (ex: C0A8007A = 192.168.0.122)<br>( IP= 0xFFFFFFFF(255.255.255.255) for all remote modules ) |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |

**Example:** Read remote device IP for DO channel 0.

command: \$01YMP0(cr)

response: !01C0A8005C (cr) ; IP addr.: C0A8005C = 192.168.0.92

**Related command:** \$AAYMNDDDDDDDD

8.4.40 #AA2NPPPPPPP Write DO pulse counts

|              |   |   |
|--------------|---|---|
| Description: | Write DO pulse counts to the specific DO channel (For <i>DO Pulse Output mode</i> ) |   |
| Command:     | #AA2NPPPPPPP [CHK](cr)  |   |
| Syntax:      | #   | Command leading code  |
|              | AA  | Module address ID (01 to FF , Always 01)  |
|              | 2   | Represent generates DO pulse output command.  |
|              | N   | Channel number(0~F)   |
|              | PPPPPPP   | Represents pulse counts (8 digits, decimal 0~5242879)<br>if ppppppp = 0000000, continue DO pulse<br>if ppppppp = 0000001, stop DO pulse |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |
| Response:    | !AA (cr)  | Valid command.  |
|              | ?AA[CHK](cr)  | Invalid command   |
|              | !   | Delimiter for valid command   |
|              | ?   | Delimiter for invalid command   |
|              | AA  | Module address ID   |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |

**Example:**

- (\$AACONNDD ) Set DO channel(3) to Pluse output mode.  
command: \$01CO0301(cr)  
response: !01(cr)
  
- (\$AA9PNNLLLLHHH) Set DO pulse Low/high output width of channel 3.  
command: \$019P0301230456(cr)  
response: !01(cr)
  
- (#AA2NPPPPPPP) The command force the DO channel 3 to output 9 pulses.  
command: #012300000009 (cr)  
response: !01(cr)

**Related command:** \$AA9PNNLLLLHHH, \$AA9NN , \$AA9DNNHHHLLLL

## 8.4.41 \$AA9PNNLLLLHHHH Set DO pluse Low/High width of channel N

|              |   |  |
|--------------|---|--|
| Description: | Set DO Pluse Low /High output width of channel N (unit: 0.5ms) (For <i>DO Pulse Output mode</i> ) |  |
| Command:     | \$AA9PNNLLLLHHHH [CHK](cr)  |  |
| Syntax:      | \$  | Command leading code   |
|              | AA  | Module address ID (01 to FF , Always 01)   |
|              | 9P  | command to set DO pluse high/low width of channel N.   |
|              | NN  | DO channel number.<br>= 00~0F (hex) - DO channel number.<br>= FF (hex) - Copy the setting to all DO channels |
|              | LLLL  | 4 char, DO pulse low signal width (hex 0001~ 3332, uint: 0.5ms)  |
|              | HHHH  | 4 char, DO pulse high signal width (hex 0001~ 3332, uint: 0.5ms)   |
|              | CHK   | Check sum  |
|              | (cr)  | Carriage return  |
| Response:    | !AA (cr)  | Valid command.   |
|              | ?AA[CHK](cr)  | Invalid command  |
|              | !   | Delimiter for valid command  |
|              | ?   | Delimiter for invalid command  |
|              | AA  | Module address ID  |
|              | CHK   | Check sum  |
|              | (cr)  | Carriage return  |

**Example:** Ref. command "#AA2NPPPPPPP"

**Related command:** #AA2NPPPPPPP, \$AA9NN, \$AA9DNNHHHHLLLL

## 8.4.42 \$AA9NN Read DO pulse and DO High/Low delay width for channel N

|              |   |   |
|--------------|---|---|
| Description: | Read DO pulse low/high width and DO High/Low delay output width of channel N (unit: 0.5ms).<br>(For <i>DO Pulse Output mode</i> , <i>High/Low delay mode</i> and <i>DO Auto-Off Time Mode</i> ) |   |
| Command:     | \$AA9NN [CHK](cr)   |   |
| Syntax:      | \$  | Command leading code  |
|              | AA  | Module address ID (01 to FF, Always 01)   |
|              | 9   | command for Read a single digital input..   |
|              | NN  | Channel number( 00~0F)  |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |
| Response:    | !AALLLHHHH<br>UUUUDDDD (cr)   | Valid command.  |
|              | ?AA[CHK](cr)  | Invalid command   |
|              | !   | Delimiter for valid command   |
|              | ?   | Delimiter for invalid command   |
|              | AA  | Module address ID   |
|              | LLLL  | 4 char, DO pulse low signal width (hex, uint: 0.5ms)<br>(For <i>DO Pulse Output mode</i> )                                  |
|              | HHHH  | 4 char, DO pulse high signal width (hex, uint: 0.5ms)<br>(For <i>DO Pulse Output mode</i> )                                 |
|              | UUUU  | 4 char, DO low to high delay width (hex, uint 0.5ms)<br>(For <i>High/Low delay mode</i> and <i>DO Auto-Off Time Mode</i> )  |
|              | DDDD  | 4 char, DO high to low delay width (hex, uint: 0.5ms)<br>(For <i>High/Low delay mode</i> and <i>DO Auto-Off Time Mode</i> ) |
|              | CHK   | Check sum   |
| (cr)         | Carriage return   |   |

**Example:** Read DO pulse and Low/high delay output width of DO channel 3

command: \$01903(cr)

response: !0101230456000A000A (cr) ; LLLL=hex 0123, HHHH=hex 0456,  
; UUUU=hex 000A, DDDD=hex 000A

**Related command:** #AA2NPPPPPPP, \$AA9DNNHHHHLLLL, \$AA9DNNHHHHLLLL

## 8.4.43 \$AA9DNNHHHLLLL Set DO low/high delay time

|              |  |  |
|--------------|--|--|
| Description: | Set DO Low/high delay output width for channel N ( unit: 0.5ms).<br>(For <i>High/Low delay mode</i> and <i>DO Auto-Off Time Mode</i> ) |  |
| Command:     | \$AA9DNNHHHLLLL [CHK](cr)  |  |
| Syntax:      | \$   | Command leading code   |
|              | AA   | Module address ID (01 to FF , Always 01)   |
|              | 9D   | Command to set DO low/high delay time of DO channel N  |
|              | NN   | DO channel number.<br>= 00~0F (hex) - DO channel number.<br>= FF (hex) - Copy the setting to all DO channels                         |
|              | HHHH   | 4 char, DO low to high delay width (hex 0001~hex 3332, uint: 0.5ms)<br>(For "High->Low->High Auto-Off Time mode" HHHH always "0001") |
|              | LLLL   | 4 char, DO high to low delay width (hex 0001~hex 3332, uint: 0.5ms)<br>(For "Low->High->Low Auto-Off Time mode" LLLL always "0001")  |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return  |
| Response:    | !AA (cr)   | Valid command.   |
|              | ?AA[CHK](cr)   | Invalid command  |
|              | !  | Delimiter for valid command  |
|              | ?  | Delimiter for invalid command  |
|              | AA   | Module address ID  |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return  |

**Example(1):** For DO *Low to High delay mode*

- (\$AACONNDD ) Set DO channel(1) to *Low to High delay mode*.  
command: \$01CO0102(cr)  
response: !01(cr)
  
- (\$AA9DNNHHHLLLL) Set DO Low to high delay time(2000ms) for channel 1.  
command: \$019D010FA00001(cr) ; HHHH=0FA0, LLLL=0001  
response: !01(cr)
  
- (#AA1NDD) Set DO(1) to High(1).  
command: #011101 (cr) ; after 2000ms the DO(1) to high(1)  
response: !01(cr)

**Example(2):** For DO *High to Low delay mode*

- (\$AACONNDD ) Set DO channel(1) to *High to Low delay mode*.  
command: \$01CO0203(cr)  
response: !01(cr)
  
- (\$AA9DNNHHHLLLL) Set DO Low to high delay time(2000ms) for channel 2.  
command: \$019D0200010FA0 (cr) ; HHHH=0001, LLLL=0FA0  
response: !01(cr)
  
- (#AA1NDD) Set DO(2) to High(1).  
command: #011200 (cr) ; after 2000ms the DO(2) to high(0)  
response: !01(cr)

**Example(3):** For DO Low to High to Low of DO Auto-Off Time Mode

- (\$AACONNDD) Set DO channel(0) to DO Low to High to Low of DO Auto-Off Time Mode.  
command: \$01CO0006(cr)  
response: !01(cr)
  
- (\$AA9DNNHHHHLLLL) Set DO High time(2000ms) for channel 0.  
command: \$019D000FA00001 (cr) ; HHHH=0FA0, LLLL=0001  
response: !01(cr)
  
- (#AA1NDD) Set DO(0) to High(1).  
command: #011001 (cr) ; after 2000ms the DO(0) to Low(0)  
response: !01(cr)

**Example(4):** For DO High to Low to High of DO Auto-Off Time Mode

- (\$AACONNDD) Set DO channel(0) to DO High to Low to High of DO Auto-Off Time Mode.  
command: \$01CO0007(cr)  
response: !01(cr)
  
- (\$AA9DNNHHHHLLLL) Set DO Low time(2000ms) for channel 0.  
command: \$019D0000010FA0 (cr) ; HHHH=001, LLLL=00FA0  
response: !01(cr)
  
- (#AA1NDD) Set DO(0) to Low(0).  
command: #011000 (cr) ; after 2000ms the DO(0) to high(1)  
response: !01(cr)

**Related command:** \$AA9NN

8.4.44 \$AA0MCC Read DI counter filter (debounce time)

|              |  |  |
|--------------|--|--|
| Description: | Read DI counter pre-debounce and post-debounce of channel N (unit = 0.5ms) |  |
| Command:     | \$AA0MCC [CHK](cr)   |  |
| Syntax:      | \$   | Command leading code   |
|              | AA   | Module address ID (01 to FF , Always 01)                               |
|              | 0M   | command for read DI counter filter of channel N                        |
|              | CC   | Represents DI channel number (00~0F)                                   |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return  |
| Response:    | !AA(data1)(data2) (cr)   | Valid command.   |
|              | ?AA[CHK](cr)   | Invalid command  |
|              | !  | Delimiter for valid command  |
|              | ?  | Delimiter for invalid command  |
|              | AA   | Module address ID  |
|              | (data1)  | DI counter pre-debounce (Min. Low width) time, 8-chars, (unit=0.5ms)   |
|              | (data2)  | DI counter post-debounce (Min. High width) time, 8-chars, (unit=0.5ms) |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return  |

**Example:** Read DI counter filter (debounce time) for channel 0,

command: \$010M00(cr)

response: !01000000200000003(cr) ; (data1) = 00000002 - represents channel(0) Low signal width.  
; (data2) = 00000003 - represents channel(0) High signal width.

**Ref. command:** \$AA0MCC(data1)(data2), \$AAECN

## 8.4.45 \$AA0MCC(data1)(data2) Set DI counter debounce time

|              |   |   |
|--------------|---|---|
| Description: | Set DI counter pre-debounce and post-debounce of channel N (unit = 0.5ms) |   |
| Command:     | \$AA0MCC(data1)(data2) [CHK](cr)  |   |
| Syntax:      | \$  | Command leading code  |
|              | AA  | Module address ID (01 to FF , Always 01)                              |
|              | 0M  | command for read DI counter filter of channel N                       |
|              | CC  | Represents DI channel number (00~0F)                                  |
|              | (data1)   | DI counter pre-debounce (Min. Low width) time, 8-chars, (unit=0.5ms)  |
|              | (data2)   | DI counter post-debounce(Min. High width) time, 8-chars, (unit=0.5ms) |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |
| Response:    | !AA (cr)  | Valid command.  |
|              | ?AA[CHK](cr)  | Invalid command   |
|              | !   | Delimiter for valid command   |
|              | ?   | Delimiter for invalid command   |
|              | AA  | Module address ID   |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |

**Example:** Set DI counter channel(0) pre-debounce time to 00000002(=1 ms) and post-debounce time to 00000003(=1.5 ms)

command: \$010M000000000200000003(cr)

response: !01(cr)

**Ref. command:** \$AA0MCC, \$AAECN

## 8.4.46 \$AAECN Start/Stop single DI counter

|              |  |  |
|--------------|--|--|
| Description: | Start/Stop single digital input counter (Falling Edge Trigger) |  |
| Command:     | \$AAECN [CHK](cr)  |  |
| Syntax:      | \$   | Command leading code                               |
|              | AA   | Module address ID (01 to FF , Always 01)           |
|              | E  | Represents enable/disable DI counter command       |
|              | C  | Represents DI counter channel number (0~F)         |
|              | N  | Represents Start/Stop option (=0 -Stop, =1 -Start) |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return                                    |
| Response:    | !AA (cr)   | Valid command.                                     |
|              | ?AA[CHK](cr)   | Invalid command                                    |
|              | !  | Delimiter for valid command                        |
|              | ?  | Delimiter for invalid command                      |
|              | AA   | Module address ID                                  |
|              | CHK  | Check sum  |
|              | (cr)   | Carriage return                                    |

**Example 1:** Start DI(2) counter

command: \$01E21(cr)

response: !01(cr)

**Example 2:** Stop DI(2) counter

command: \$01E20(cr)

response: !01(cr)

**Ref. command:** \$AA0MCC, \$AAECN, \$AA0MCC(data1)(data2)

## 8.4.47 \$AACN Clear single DI counter value and overflow flag

|              |   |  |
|--------------|---|--|
| Description: | Clear single digital input counter value with overflow flag |  |
| Command:     | \$AACN [CHK](cr)  |  |
| Syntax:      | \$  | Command leading code                       |
|              | AA  | Module address ID (01 to FF , Always 01)   |
|              | C   | Represents clear DI counter command        |
|              | N   | Represents DI counter channel number (0~F) |
|              | CHK   | Check sum                                  |
|              | (cr)  | Carriage return                            |
| Response:    | !AA (cr)  | Valid command.                             |
|              | ?AA[CHK](cr)  | Invalid command                            |
|              | !   | Delimiter for valid command                |
|              | ?   | Delimiter for invalid command              |
|              | AA  | Module address ID                          |
|              | CHK   | Check sum                                  |
|              | (cr)  | Carriage return                            |

**Example:** Clear DI counter channel 2

command: \$01C2(cr)

response: !01(cr)

**Related command:** \$AA0MCC, \$AAECN, \$AA0MCC(data1)(data2), \$AAECN

8.4.48 #AAN Read single DI counter value

|              |   |   |
|--------------|---|---|
| Description: | Read single digital input counter value |   |
| Command:     | #AAN [CHK](cr)                          |   |
| Syntax:      | #                                       | Command leading code                            |
|              | AA                                      | Module address ID (01 to FF , Always 01)        |
|              | N                                       | Represents DI channel number (0~F)              |
|              | CHK                                     | Check sum                                       |
|              | (cr)                                    | Carriage return                                 |
| Response:    | !AA(data) (cr)                          | Valid command.                                  |
|              | ?AA[CHK](cr)                            | Invalid command                                 |
|              | !                                       | Delimiter for valid command                     |
|              | ?                                       | Delimiter for invalid command                   |
|              | AA                                      | Module address ID                               |
|              | (data)                                  | 10-characters(decimal) represents counter value |
|              | CHK                                     | Check sum                                       |
| (cr)         | Carriage return                         |   |

**Example:** Read single digital input channel(2) counter value

command: #012(cr)

response: !01000000123(cr) ; 000000123 represents counter value is 123

**Related command:** \$AA0MCC, \$AAECN, \$AA0MCC(data1)(data2), \$AAECN, \$AACN

## 8.4.49 #AARN Read single DI counter value and overflow flag

|              |   |   |
|--------------|---|---|
| Description: | Read single digital input counter value with overflow |   |
| Command:     | #AARN [CHK](cr)                                       |   |
| Syntax:      | #   | Command leading code  |
|              | AA  | Module address ID(01 to FF , Always 01)   |
|              | R   | represent read single DI counter value with overflow command  |
|              | N   | represents DI channel number (0~F)  |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |
| Response:    | !AAR(data) (cr)                                       | Valid command.  |
|              | ?AA[CHK](cr)  | Invalid command   |
|              | !   | Delimiter for valid command   |
|              | ?   | Delimiter for invalid command   |
|              | AA  | Module address ID   |
|              | R   | DI Counter Overflow.<br>= 0 - No counter overflow has occurred.<br>= 1 - A counter overflow has occurred. |
|              | (data)  | 10-characters(decimal) represents counter value   |
|              | CHK   | Check sum   |
| (cr)         | Carriage return                                       |   |

**Example 1:** Read single digital input channel(5) counter value with overflow

command: #01R5(cr)

response: !0110000000123(cr) ; R represents counter value is 0000000123 and counter overflow(1) has occurred.

**Example 2:** Read single digital input channel(5) counter value with overflow

command: #01R5(cr)

response: !0100000000123(cr) ; R represents counter value is 0000000123 and No counter overflow(0) has occurred.

**Related command:** \$AA0MCC, \$AAECN, \$AA0MCC(data1)(data2), \$AAECN, \$AACN, #AAN

8.4.50 ~\*\* Send "Host OK" to all modules via broadcast

|              |   |                      |
|--------------|---|----------------------|
| Description: | Host send this command via broadcast IP to tell all modules that host and network are alive (No reply from modules) When host watchdog timer is enable, host computer must send this command to all module before timeout otherwise "Host watchdog timer enabled" module will go to safety state. |                      |
| Command:     | ~** [CHK](cr)   |                      |
| Syntax:      | ~   | Command leading code |
|              | **  | command for Host OK  |
|              | CHK   | Check sum            |
|              | (cr)  | Carriage return      |
| Response:    | No response.  |                      |

**Related command:** ~AA\*\*, ~AA0, ~AA1, ~AA2, ~AA4V, ~AA5V, ~AA3E VV, ~AA3PPP, ~AA3P

8.4.51 ~AA\*\* Send Host OK to the specific module

|              |   |  |
|--------------|---|--|
| Description: | Host send this command via broadcast IP to tell all modules that host and network are alive (No reply from modules) When host watchdog timer is enable, host computer must send this command to all module before timeout otherwise "Host watchdog timer enabled" module will go to safety state. |  |
| Command:     | ~AA** [CHK](cr)   |  |
| Syntax:      | ~   | Command leading code                     |
|              | AA  | Module address ID (01 to FF , Always 01) |
|              | **  | command for Host OK                      |
|              | CHK   | Check sum                                |
|              | (cr)  | Carriage return                          |
| Response:    | !AA (cr)  | Valid command.                           |
|              | ?AA[CHK](cr)  | Invalid command                          |
|              | !   | Delimiter for valid command              |
|              | ?   | Delimiter for invalid command            |
|              | AA  | Module address ID                        |
|              | CHK   | Check sum                                |
|              | (cr)  | Carriage return                          |

**Ref. command:** ~\*\*, ~AA0, ~AA1, ~AA2, ~AA4V, ~AA5V, ~AA3Evvv, ~AA3PPP, ~AA3P

## 8.4.52 ~AA0 Read watchdog timeout status

|              |                              |   |
|--------------|------------------------------|---|
| Description: | Read watchdog timeout status |   |
| Command:     | ~AA0 [CHK](cr)               |   |
| Syntax:      | ~                            | Command leading code  |
|              | AA                           | Module address ID (01 to FF , Always 01)  |
|              | 0                            | command for reading watchdog timeout status   |
|              | CHK                          | Check sum   |
|              | (cr)                         | Carriage return   |
| Response:    | !AASS (cr)                   | Valid command.  |
|              | ?AA[CHK](cr)                 | Invalid command   |
|              | !                            | Delimiter for valid command   |
|              | ?                            | Delimiter for invalid command   |
|              | AA                           | Module address ID   |
|              | SS                           | Two hexadecimal digits that represent the host watchdog status.<br>bit(7) - Host watchdog enable/disable ,<br>= 0 - Disable.<br>= 1 - Enable.<br>bit(2) - Host watchdog timeout status,<br>= 0 - indicates that no host watchdog timeout has occurred.<br>= 1 - indicates that a host watchdog timeout has occurred.<br>bit(6,5,4,3,1,0) - reserved(always 0) |
|              | CHK                          | Check sum   |
| (cr)         | Carriage return              |   |

**Note:** The host watchdog status is stored in EEPROM and can only be reset by using the ~AA1 command.

**Example 1:** Reads the host watchdog status of module 01 and returns 00, meaning that the host watchdog is disabled or no host watchdog timeout has occurred.

Command: ~010(cr)

Response: !0100(cr)

**Example 2:** Reads the host watchdog status of module 01 and returns 04, meaning that a host watchdog timeout has occurred.

Command: ~010(cr)

Response: !0104(cr)

**Ref. command:** ~\*\*, ~AA1, ~AA2, ~AA4V, ~AA5V, ~AA3EVVV, ~AA3PPP, ~AA3P

8.4.53 ~AA1 Reset host watchdog timeout status

|              |                                    |   |
|--------------|------------------------------------|---|
| Description: | Reset host watchdog timeout status |   |
| Command:     | ~AA1[CHK](cr)                      |   |
| Syntax:      | ~                                  | Command leading code                          |
|              | AA                                 | Module address ID (01 to FF , Always 01)      |
|              | 1                                  | command for resetting watchdog timeout status |
|              | CHK                                | Check sum                                     |
|              | (cr)                               | Carriage return                               |
| Response:    | !AA (cr)                           | Valid command.                                |
|              | ?AA[CHK](cr)                       | Invalid command                               |
|              | !                                  | Delimiter for valid command                   |
|              | ?                                  | Delimiter for invalid command                 |
|              | AA                                 | Module address ID                             |
|              | CHK                                | Check sum                                     |
|              | (cr)                               | Carriage return                               |

**Example 1:** Reads the host watchdog status of module 01 and shows that a host watchdog timeout has occurred.

command: ~010(cr)

response: !0104(cr)

**Example 2:** Resets the host watchdog timeout status of module 01 and returns a valid response.

command: ~011(cr)

Response: !01(cr)

**Example 3:** Reads the host watchdog status of module 01 and shows that no host watchdog timeout has occurred.

command: ~010(cr)

response: !0100(cr)

**Ref. command:** ~\*\*, ~AA\*, ~AA0, ~AA2, ~AA4V, ~AA5V, ~AA3Evvv, ~AA3PPP, ~AA3P

8.4.54 ~AA2 Read host communication Timeout value

|              |                                       |   |
|--------------|---------------------------------------|---|
| Description: | Read host communication Timeout value |   |
| Command:     | ~AA2 [CHK](cr)                        |   |
| Syntax:      | ~                                     | Command leading code  |
|              | AA                                    | Module address ID (01 to FF , Always 01)  |
|              | 2                                     | command for reading watchdog timeout value  |
|              | CHK                                   | Check sum   |
|              | (cr)                                  | Carriage return   |
| Response:    | !AAE VVV (cr)                         | Valid command.  |
|              | ?AA[CHK](cr)                          | Invalid command   |
|              | !                                     | Delimiter for valid command   |
|              | ?                                     | Delimiter for invalid command   |
|              | AA                                    | Module address ID   |
|              | E                                     | Host watchdog enabled status<br>= 1 – Enable.<br>= 0 – Disable.                             |
|              | VVV                                   | Timeout value in hex format from hex 001 to 28F .(unit 0.1 sec),<br>FF denotes 25.5 seconds |
|              | CHK                                   | Check sum   |
| (cr)         | Carriage return                       |   |

**Example:** Reads the host watchdog timeout value of module 01 and returns FF, which denotes that the host watchdog is enabled and the host watchdog timeout value is 25.5 seconds.

command: ~012(cr)

response: !011FF(cr)

**Ref. command:** ~\*\*, ~AA1, ~AA0, ~AA4V, ~AA5V, ~AA3E VVV, ~AA3PPP , ~AA3P

## 8.4.55 ~AA3EVVV Set Host watchdog timeout interval

|              |   |   |
|--------------|---|---|
| Description: | Enable/disable Host watchdog and set timeout interval (unit = 0.1sec) |   |
| Command:     | ~AA3EVVV [CHK](cr)  |   |
| Syntax:      | ~   | Command leading code  |
|              | AA  | Module address ID (01 to FF , Always 01)  |
|              | 3   | command for setting host wdt Enable/ disable and host wdt timeout value.                    |
|              | E   | Host watchdog enabled status<br>= 1 – Enable.<br>= 0 – Disable.                             |
|              | VVV   | Timeout value in hex format from hex 001 to 28F ,(unit 0.1 sec),<br>FF denotes 25.5 seconds |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |
| Response:    | !AA (cr)  | Valid command.  |
|              | ?AA[CHK](cr)  | Invalid command   |
|              | !   | Delimiter for valid command   |
|              | ?   | Delimiter for invalid command   |
|              | AA  | Module address ID   |
|              | CHK   | Check sum   |
|              | (cr)  | Carriage return   |

**Note:**

If host watchdog timer is enabled, the host should send Host OK (see “~\*\*” or ~AA\*\*) command periodically within Timeout value to refresh the timer, otherwise the module will be forced to safet state (see “~AA5V”) and The Power-LED on the module will go to flash. After timeout the all of D/O commands are disabled.

**Example:**

- (~AA3EVVV ) Set module (ID=01) to have watchdog timeout value 20.0 seconds and enable host watchdog.  
 command: ~01310C8(cr) ; enable host watchdog  
 response: !01(cr)
- (~AA2) Read watchdog timeout value form module (ID=01). The module returns 10C8, which denotes that the host watchdog is enabled and the host watchdog timeout value is 20.0 seconds.  
 command: ~012(cr)  
 response: !0110C8(cr)
- (~\*\* or ~AA\*\*) Host send this command to all modules that host and network are alive  
 command: ~\*\*(cr) ; Host OK (to all modules)  
 or  
 command: ~01\*\*(cr) ; Host OK (to the Specific module)
- Stop sending any command string to modules for at least 20.0 seconds. The Power- LED on the module will go to flash. The flash LED indicates the host watchdog is timeout and timeout status flag is set.
- (~AA0) Read watchdog timeout status, the module returns 01, which denotes that a host watchdog timeout has occurred.  
 command: ~010(cr)  
 response: !0184(cr) ; bit(7)=1 - Host watchdog enabled  
 ; bit(2)=1 - indicates that a host watchdog timeout has occurred.

- (~AA1) Reset watchdog timeout status. Watchdog timeout is cleared and LED stops flashing, and host watchdog is disabled  
command: ~011(cr)  
response: !01(cr)
  
- Reads the host watchdog status of module 01 and returns 00, meaning that the host watchdog is disabled and no host watchdog timeout has occurred.  
command: ~010(cr)  
response: !0180(cr) ; bit(7)=1 - Host watchdog enabled and Timeout status is cleared
  
- (~AA3E V V V ) Set module (ID=01) to have watchdog timeout value 20.0 seconds and disable host watchdog.  
command: ~01300C8(cr) ; disable host watchdog  
response: !01(cr)
  
- Reads the host watchdog status of module 01 and returns 00, meaning that the host watchdog is disabled and no host watchdog timeout has occurred.  
command: ~010(cr)  
response: !0180(cr) ; bit(7)=1 - Host watchdog enabled and Timeout status is cleared

**Ref. command:** ~\*\*, ~AA1, ~AA0, ~AA4V, ~AA5V, ~AA2, ~AA3PPP, ~AA3P

## 8.4.56 ~AA4V Read Power-on or Safe DO value of module

|              |  |   |
|--------------|--|---|
| Description: | Read power-on or safe DO value of module |   |
| Command:     | ~AA4V [CHK](cr)                          |   |
| Syntax:      | ~  | Command leading code  |
|              | AA                                       | Module address ID(01 to FF , Always 01)   |
|              | 4  | command for read the power-on DO value or the safe DO value of a module                   |
|              | V  | Read power-on value or safe value<br>= P - read power-on value,<br>= S - read safe value. |
|              | CHK                                      | Check sum   |
|              | (cr)                                     | Carriage return   |
| Response:    | !AADDDD (cr)                             | Valid command.  |
|              | ?AA[CHK](cr)                             | Invalid command   |
|              | !  | Delimiter for valid command   |
|              | ?  | Delimiter for invalid command   |
|              | AA                                       | Module address ID   |
|              | DDDD                                     | power-on or safe value.(0000~FFFF)  |
|              | CHK                                      | Check sum   |
|              | (cr)                                     | Carriage return   |

**Example 1:** Read Power on value and return power-on value 5A5A.

command: ~014P(cr)

response: !045A5A(cr)

**Example 2:** Read Power on value and return safe value AA00.

command: ~014S(cr)

response: !04AA00(cr)

**Ref. command:** ~\*\*, ~AA1, ~AA0, ~AA4V, ~AA5V, ~AA2, ~AA3PPP, ~AA3P, ~AA3EVVV

8.4.57 ~AA5V Sets the current DO value as power-on or safe value

|              |  |   |
|--------------|--|---|
| Description: | Set the current DO value as power-on or safe value |   |
| Command:     | ~AA5V [CHK](cr)                                    |   |
| Syntax:      | ~  | Command leading code  |
|              | AA   | Module address ID(01 to FF , Always 01)   |
|              | 5  | command for sets the current value as the power-on DO value or the safe DO value.           |
|              | V  | Set power-on value or safe value<br>= P - set power-on value,<br>= S - set safe value.      |
|              | VVV  | Timeout value in hex format from hex 001 to 28F .(unit 0.1 sec),<br>FF denotes 25.5 seconds |
|              | CHK  | Check sum   |
|              | (cr)   | Carriage return   |
| Response:    | !AA (cr)   | Valid command.  |
|              | ?AA[CHK](cr)                                       | Invalid command   |
|              | !  | Delimiter for valid command   |
|              | ?  | Delimiter for invalid command   |
|              | AA   | Module address ID   |
|              | CHK  | Check sum   |
|              | (cr)   | Carriage return   |

**Example 1: Set Safe value.**

- Set module DO to output value 2A.  
Command: @012A(cr)  
Response: >(cr)
- Set current output value 2A as safe value.  
Command: ~015S(cr)  
Response: !01(cr)
- Read safe value and return safe value 2A.  
Command: ~014S(cr)  
Response: !01002A(cr)

**Example 2: Set Power on value**

- Set module to output value 15.  
Command: @0115(cr)  
Response: >(cr)
- Set current output value 15 as power-on value.  
Command: ~015P(cr)  
Response: !01(cr)
- Read Power on value and return power-on value 0015.  
Command: ~014P(cr)  
Response: !010015(cr)

**Ref. command:** ~\*\*, ~AA1, ~AA0, ~AA4V, ~AA2, ~AA3PPP , ~AA3P, ~AA3EWWW

## 8.4.58 ~AA3PPP Set module Power-on delay time

|              |                                |  |
|--------------|--------------------------------|--|
| Description: | Set module Power-on delay time |  |
| Command:     | ~AA3PPP [CHK](cr)              |  |
| Syntax:      | ~                              | Command leading code   |
|              | AA                             | Module address ID(01 to FF , Always 01)  |
|              | 3                              | command for set module Power-on delay time   |
|              | PPP                            | Power-on delay time(unit: 0.1sec) to start communication timeout (000~FFF).<br><b>Note:</b><br>Total Power-on delay time = PPP + Normal Power-on delay time(about 7 sec) |
|              | CHK                            | Check sum  |
|              | (cr)                           | Carriage return  |
| Response:    | !AA (cr)                       | Valid command.   |
|              | ?AA[CHK](cr)                   | Invalid command  |
|              | !                              | Delimiter for valid command  |
|              | ?                              | Delimiter for invalid command  |
|              | AA                             | Module address ID  |
|              | CHK                            | Check sum  |
|              | (cr)                           | Carriage return  |

**Example:** Set power-on delay time to 096 (15 sec)

Command: ~013096(cr)

Response: !01(cr)

**Ref. command:** ~AA3PPP , ~AA3P, ~AA5V, ~AA4V

## 8.4.59 ~AA3P Read module Power-on delay time

|              |                                |  |
|--------------|--------------------------------|--|
| Description: | Set module Power-on delay time |  |
| Command:     | ~AA3P [CHK](cr)                |  |
| Syntax:      | ~                              | Command leading code   |
|              | AA                             | Module address ID(01 to FF , Always 01)  |
|              | 3P                             | command for read module Power-on delay time  |
|              | CHK                            | Check sum  |
|              | (cr)                           | Carriage return  |
| Response:    | !AAPP (cr)                     | Valid command.   |
|              | ?AA[CHK](cr)                   | Invalid command  |
|              | !                              | Delimiter for valid command  |
|              | ?                              | Delimiter for invalid command  |
|              | AA                             | Module address ID  |
|              | PPP                            | Power-on delay time(unit: 0.1sec) to start communication timeout.<br>(range hex 000~FFF) |
|              | CHK                            | Check sum  |
|              | (cr)                           | Carriage return  |

**Example 1:** Set power-on delay time to 096 (15 sec)

command: ~013096(cr)

response: !01(cr)

**Example 2:** Read power-on delay time and return 096 (15 sec)

command: ~013P(cr)

response: !01096(cr)

**Ref. command:** ~AA3PPP

## Chapter 9 MODBUS/TCP Command structure



EX-92xx-MTCP Series system accepts a command/response form with the host computer. When systems are not transmitting they are in listen mode. The host issues a command to a system with a specific address and waits a certain amount of time for the system to respond. If no response arrives, a time-out aborts the sequence and returns control to the host. This chapter explains the structure of the commands with Modbus/TCP protocol, and guides to use these command sets to implement user's programs.

### 9.1 Command Structure

It is important to understand the encapsulation of a Modbus request or response carried on the Modbus/TCP network. A complete command is consisted of command head and command body. The command head is prefixed by six bytes and responded to pack Modbus format; the command body defines target device and requested action. Following example will help you to realize this structure quickly.

#### Example:

If you want to read digital input channels(0~11) of EADM-4050 (address: 00001~00012),  
 the Request command should be: **00 00 00 00 00 06 01 01 00 00 00 0C**  
 and the Response should be: **00 00 00 00 00 05 01 01 02 00 00**

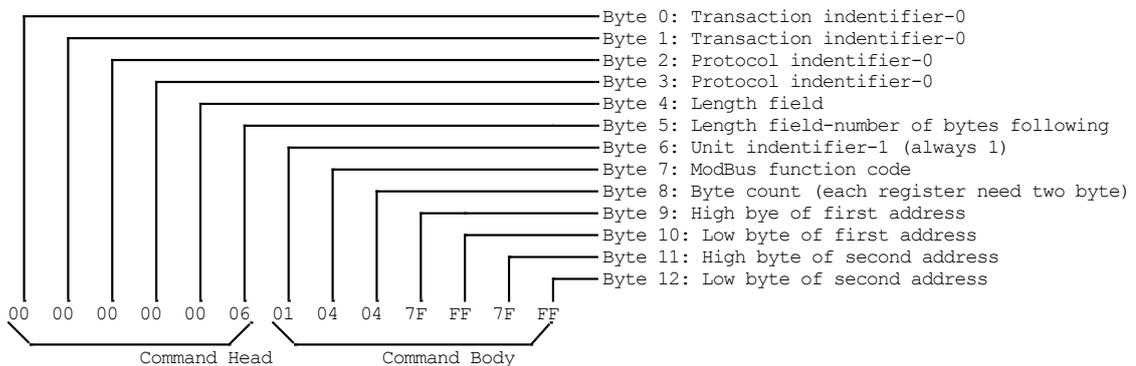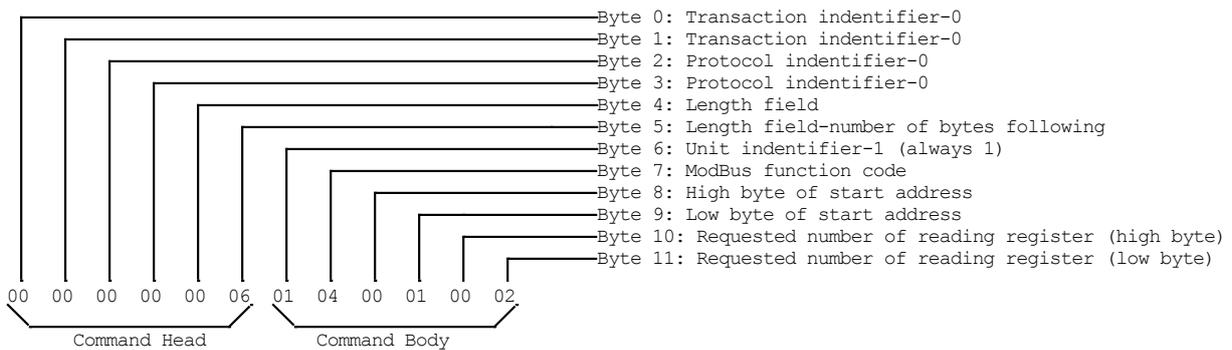

**Note:** (Byte 6) Unit Identifier 01 to FF(Always 01)

### 9.3 All Digital Input/Output Modules

All EX-92xx-MTCP Series DIO modules use the same MODBUS address mapping

### 9.4 MODBUS/TCP address Mapping & Function Number

- 0xxxx - Coils access, (For 1, 5, 15 function code)
- 1xxxx - Read discrete inputs, (For 2 function code)
- 3xxxx - Read input register, (For 4 function code)
- 4xxxx - Holding register access, (For 3, 6, 16 function code)

xxxx - Element address of a data block, In the MODBUS data model each element within a data block is numbered from 1 to n.

**Example:**

- 00005 - Means Coils access and Starting address = 0004 (0005-1)
- 10002 - Means Discrete inputs and Starting address = 0001 (0002-1)
- 30257 - Means Input register and Starting address = 0256 (0257-1)
- 40001 - Means Access holding register and Starting address = 0000 (0001-1)

◆ MODBUS function code definition:

| Function Code | Description                     |
|---------------|---------------------------------|
| 01 (0x01)     | Read coils                      |
| 02 (0x02)     | Read Discrete Inputs            |
| 03 (0x03)     | Read multiple Holding registers |
| 04 (0x04)     | Read multiple input registers   |
| 05 (0x05)     | Write single coil               |
| 06 (0x06)     | Write single register           |
| 15 (0x0F)     | write Multiple coils            |
| 16 (0x10)     | Write Multiple register         |
| 70 (0x46)     | Read / write module settings    |

◆ Error Response:

If the function specified in the message is not supported, then the module Response as follows:

| Offset | Function       | Length | Description   |
|--------|----------------|--------|---|
| 00     | Address        | 1 Byte | 1 to 247  |
| 01     | Function code  | 1 Byte | Function code   0x80  |
| 02     | Exception code | 1 Byte | = 0x01 - invalid function code.<br>= 0x02 - invalid data address.<br>= 0x03 - invalid data value.<br>= 0x04 - host WDT timeout<br>= 0x05 - The Emergency input channel was activated. |

## 9.5 Table of command sets

| General command sets |  |       |         |
|----------------------|--|-------|---------|
| Address              | Item   | Func. | Attrib. |
| 00272                | Reload the module factory default<br>= 0xFF00(or 1) - enable.  | 5,15  | W       |
| 00273                | Read module reset status<br>= 1 - first read after powered on.<br>= 0 - not the first read after powered on. | 1     | R       |
| 02210                | Reset the module to initial power-on status<br>= 0xFF00(1) - enable.   | 5,15  | W       |
| 40481                | Read Firmware version (version-1,version-2)  | 3     | R       |
| 40483~40484          | Read module name(name-1, name-2)   | 3     | R       |

| Digital Output command sets |  |        |         |
|-----------------------------|--|--------|---------|
| Address                     | Item   | Func.. | Attrib. |
| 41453~41468                 | DO mode setting: (16 Channels)<br>= 0000 - Direct DO output, (default)<br>= 0001 - Pulse output mode,<br>= 0002 - Low to high delay mode,<br>= 0003 - High to low delay mode<br>= 0004 - DIO Synchronization Mode<br>= 0006 - DO " <u>Low to High to Low</u> " for "Auto-Off Time" Mode.<br>= 0007 - DO " <u>High to Low to High</u> " for "Auto-Off Time" Mode. | 3,6,16 | R/W     |
| 00017~00032                 | Digital output (16 Channels, 1-bit /channel)   | 1,5,15 | R/W     |
| 45609                       | Power-on Digital output value for DO0~DO15, (16 Channels)  | 3,6,16 | R/W     |

| DO Pulse Output command sets |  |        |         |
|------------------------------|--|--------|---------|
| Address                      | Item   | Func.  | Attrib. |
| 41065~41080                  | DO pulse output L level time (1 ~13107 , Unit: 0.5ms), (16 channels, <u>16-bit/ch</u> )  | 3,6,16 | R/W     |
| 41081~41096                  | DO pulse output H level time (1 ~13107, Unit: 0.5ms), (16 channels, <u>16-bit/ch</u> )   | 3,6,16 | R/W     |
| 41097~41138                  | DO pulse output count value (00000000~4FFFFFFF), ( 16 Channels, <u>32-bits/ch.</u> )<br>Example:<br>➤ (41097) for DO0(bit 15~0) & (41098) for DO0(bit 31~16),<br>➤ (41099) for DO1(bit 15~0) & (41100) for DO1(bit 31~16), | 3,16   | R/W     |
| 41139~41154                  | Start/stop DO Pulse output (16 channels, <u>16-bit/channel</u> ).<br>= 0 - continue,<br>= 1 - stop,<br>= 2 - start   | 3,6,16 | R/W     |

| DIO Synchronization mode command sets |   |        |         |
|---------------------------------------|---|--------|---------|
| Address                               | Item  | Func.  | Attrib. |
| 41517~41532                           | Start(run) / Stop the_DIO Synchronization operation. (16 DO channels, 16 bits/ch.)<br>= 0 - Stop DIO Sync.<br>= 1 - Start DIO Sync.   | 3,6,16 | R/W     |
| 41547                                 | Read DO(0~15) status in DIO Synchronization operation.<br>The bit is set when output is activated. (bit/channel.)<br>= 0 - output is inactivated.<br>= 1 - output is activated. | 3      | R       |

|             |   |        |     |
|-------------|---|--------|-----|
| 41548~41563 | Monitored state of DI(0~15) in <u>DO(x) Sync operation</u> ,<br>(16 DO channels, 16 bits/channel.)<br>= 0 - when DI(n) is inactivated<br>= 1 - when DI(n) is activated<br>Example:<br>➤ (41548) for Monitored state of DI(0~15) in DO(0) Sync operation ,<br>➤ (41549) for Monitored state of DI(0~15) in DO(1) Sync operation ,  | 3,6,16 | R/W |
| 41564~41579 | DI mask pattern in DIO Sync operation , (16 DO channels, 32 bits/channel)<br>Example:<br>(41564) for DI(0~15) mask pattern in DO(0) Sync operation.<br>bit = '1' or '0' - indicate DI channel state to be monitor(16 bits/channel).<br>(41565) for DI(0~15) mask pattern in DO(1) Sync operation(16 bits/channel).<br>= 1 - Enable DI(n) to be monitored<br>= 0 - Don't care.   | 3,6,16 | R/W |
| 41580~41595 | DIO SYNC mode, DO(x) active output state and Enable/disable<br>auto run when power-on for DO channel N. (16 DO channels, 16 bits/channel.)<br>bit(1.0): DIO Sync. operation mode<br>=02 - DI match DO latch mode<br>=03 - DI mismatch DO latch mode.<br>bit(2): Enable/disable DIO Synchronization operation when power-on.<br>= 0 - Disable.<br>= 1 - Enable.<br>bit(3): digital output state when DI input value match(or not) DI mask pattern<br>=0 - Inactive state<br>=1 - Active state<br>=2 - Toggle<br>bit(4): write DO to local module or remote module when DIO sysnc active.<br>= 0 - Local Mode, (Local DI->Local DO)<br>= 1 - remote Mode,(Local DI->Remote DO)<br>bit(15~5): Don't care | 3,6,16 | R/W |
| 41628~41643 | DI Pre-debounce time of DIO SYNC . DI match /mismatch DO lath mode.<br>(16 hannels, 16 bits/channel.)<br>✓ DI pre-debounce time when DI value match/mismatch DI mask pattern.<br>=0x 0000 ~ 0xFFFF ms.  | 3,6,16 | R/W |

**Digital output channel delay output mode command sets**

| Address     | Item   | Func.  | Attrib. |
|-------------|--|--------|---------|
| 41644~41659 | Set DO channel Low to High delay output time (0x0001~0x3332, unit: <b>0.5ms</b> ).<br>(16 DO channels, <u>16 Bits/channel</u> ). | 3,6,16 | R/W     |
| 41660~41675 | Set DO channel High to Low delay output time (0x0001~0x3332, unit: <b>0.5ms</b> ).<br>(16 DO channels, <u>16 Bits/channel</u> ). | 3,6,16 | R/W     |

**Digital output Auto-Off Time Mode command sets**

| Address     | Item   | Func.  | Attrib. |
|-------------|--|--------|---------|
| 41676~41691 | DO " <u>Low to High to Low mode</u> " High output delay time (0x1~0x3332 , unit: 0.5ms).<br>(16 DO channels, <u>16 Bits/channel</u> ). | 3,6,16 | R/W     |
| 41692~41707 | DO " <u>High to Low to High Mode</u> " Low output delay time (0x1~0x3332 , unit: 0.5ms).<br>(16 DO channels, <u>16 Bits/channel</u> ). | 3,6,16 | R/W     |

| Digital Input command sets |   |        |         |
|----------------------------|---|--------|---------|
| Address                    | Item  | Func.  | Attrib. |
| 41485~41500                | DI mode setting: (16 Channels)<br>= 0000 - Direct DI input, (default)<br>= 0001 - Counter Mode,<br>= 0002 - Low to high latch<br>= 0003 - High to low latch<br>= 0004 - Input frequency mode(0.3 ~1000 Hz max)  | 3,6,16 | R/W     |
| 00001~00016                | Read digital Input status (16 Channels, 1-bit/channel)  | 1      | R       |
| 00101~00116                | Read / Clear DI latch statu.<br>Example:<br><ul style="list-style-type: none"> <li>➤ Clear ch0 Latch Status by func. 15<br/>request: 01 0F 00 23 00 01 FF FE<br/>response: 01 0F 00 23 00 01</li> <li>➤ Clear ch0 Latch Status by func. 5<br/>request: 01 05 00 23 00 00<br/>response: 01 05 00 23 00 00</li> <li>➤ Read ch0 Latch Status<br/>request: 01 02 27 33 00 01<br/>response: 01 02 01 00 ; ch0 not latched</li> </ul> | 1,5,15 | R/W     |

| Digital Input Counter command sets |  |        |         |
|------------------------------------|--|--------|---------|
| Address                            | Item   | Func.  | Attrib. |
| 00117~00132                        | Start/Stop DI Counter (0xFF00 = Start , 0x0000 = Stop)   | 1,5,15 | R/W     |
| 00133~00148                        | Clear DI Counter (0xFF00= Clear), (16 Channels, 1-bit/channel)   | 5,15   | W       |
| 00225~00240                        | Read counter overflow status (16 Channels, 1-bit/channel),<br>= 1 - Overflow has occurred,<br>= 0 - No overflow has occurred.  | 1      | R       |
| 41001~41032                        | Read DI counter value (16 Channels, 32-bit/channel).<br>Example:<br>(41001) for DI0 (bit 15~0), (41002) for DI0 (bit 31~16).<br>(41003) for DI1 (bit 15~0), (41004) for DI1 (bit 31~16). | 3      | R       |

| WatchDog command sets |  |        |         |
|-----------------------|--|--------|---------|
| Address               | Item   | Func.  | Attrib. |
| 45678                 | Informs all modules that the host is OK. (No reply to modbus response)   | 3      | R       |
| 45601                 | Host communication timeout value (unit: 0.1sec).<br>(ref. (45604) Host watchdog timeout status)  | 3,6,16 | R/W     |
| 45602                 | Host wdt timeout Safe DO(0~15) value.<br><b>Note:</b> After timeout the all of digital output commands are disabled.   | 3,6,16 | R/W     |
| 45604                 | Host watchdog timeout status:<br><ul style="list-style-type: none"> <li>➤ 0xFF00 = host wdt timeout bit is set,</li> <li>➤ Write (0xFF00) to clear host watchdog timeout.</li> </ul> | 3,6,16 | R/W     |
| 45605                 | host wdt Enable(=0xFF00) and Disable(=0x0000),<br>(Clear host wdt timeout status(45604) before disable host wdt)<br>(ref. Ascii command: "~AA3E VVV")                                | 3,6,16 | R/W     |

## 9.6 Example of Modbus/TCP commands

- ◆ (00272) Reload the module factory default.
  - request: 01 05 01 0F FF 00
  - response: 01 05 01 0F FF 00 ; response: successful
  
- ◆ (02210) Reset the module to initial power-on status and return successful
  - (00273) Read reset status:
    - request: 01 01 01 10 00 01
    - response: 01 01 01 01 ; the module is been reseted,
  - (00273) read reset status:
    - request: 01 01 01 10 00 01
    - response: 01 01 01 00 ; the module is not been reseted,
  - (02210) Reset(reboot) the module to initial power-on state
    - request : 01 05 08 A1 FF 00
    - response: no response
  - (00273) Read reset status:
    - request: 01 01 01 10 00 01
    - response: 01 01 01 01 ; the module is been reseted,
  
- ◆ (40481) Read Firmware version.
  - request: 01 03 01 E0 00 01
  - response: 01 03 02 06 08 ; response: 06 08 (version: 06.08)
  
- ◆ (40483~40484) Read module name(name-1, name-2).
  - request: 01 03 01 E2 00 02
  - response: 01 03 04 00 42 50 00 ; response: module name(9250)
  
- ◆ (41453~41468) DO mode setting:
  - (41453) set DO(0) to Automatic DIO Synchronization Mode:
    - request: 01 06 05 AC 00 04
    - response: 01 06 05 AC 00 04 ; response: successful,
  - (41454) set DO(1) to Direct DO output mode:
    - request: 01 06 05 AD 00 00
    - response: 01 06 05 AD 00 00 ; response: successful,
  - (41458) set DO(5) to DO Auto-Off Time Mode for DO "Low to High to Low":
    - request: 01 06 05 B1 00 06
    - response: 01 06 05 B1 00 06 ; response: successful,
  - (41453) read mode setting for channel 0~5:
    - request: 01 03 05 AC 00 06
    - response: 01 03 0C 00 04 00 00 00 04 00 03 00 02 00 06 ;DO0~5(04,00,04,03,03,06)

- ◆ (00017~00032) Digital output (16 Channels, 1-bit /channel):
  - (41453) set DO(0~7) to Direct DO output mode
  - (00017) write digital output DO(0,2,5) to ON and DO(1,3,4,6,7) to OFF:  
 request: 01 0F 00 10 00 08 01 25  
 response: 01 0F 00 10 00 08 ; response: successful,
  - (00017) Read digital output channels from DO0~DO7:  
 request: 01 01 00 10 00 08  
 response: 01 01 01 25 ; DO value 0x25.
  - (00017) write DO(1) to ON:  
 request: 01 05 00 11 FF 00  
 response: 01 05 00 11 FF 00 ; response: successful,
  - (00017) Readback Digital output for DO1:  
 request: 01 01 00 11 00 01  
 response: 01 01 01 01 ; DO1 ON,
  - (00017) write DO(0) to OFF and return successful.:  
 request: 01 05 00 10 00 00  
 response: 01 05 00 10 00 00 ; response: successful,
  - (00017) Readback Digital output for DO0:  
 request: 01 01 00 10 00 01  
 response: 01 01 01 00 ; DO0 OFF,
  
- ◆ (45609) set power-on digital output value (16 Channels, 1-bit /channel):
  - (45609) set power-on DO(0,2,1) value to ON  
 request: 01 06 15 E8 00 25  
 response: 01 06 15 E8 00 25 ; response: successful,
  - (45609) read power-on DO(0~15) value  
 request: 01 03 15 E8 00 01  
 response: 01 03 02 00 25 ; power-on value DO(0,2,1) ON,
  
- ◆ Pulse Output command sets:
  - (41453) set DO(0) to Pulse output mode  
 request: 01 06 05 AC 00 01  
 response: 01 06 05 AC 00 01 ; response: successful,
  - (41065) write DO(0) pulse output L level value to 500ms  
 request: 01 06 04 28 03 E8 ; unit=0.5ms  
 response: 01 06 04 28 03 E8
  - (41081) write DO(0) pulse output H level value to 500ms  
 request: 01 06 04 38 03 E8 ; unit=0.5ms  
 response: 01 06 04 38 03 E8 ; response: successful,

- (41097~41098) set DO(0) pulse output count value to 0x13121110 (32-bits/channel)
  - request: 01 10 04 48 00 02 04 11 10 13 12
  - response: 01 10 04 48 00 20 ; response: successful,
- (41097~41098) read DO(0) pulse output count value
  - request: 01 03 04 48 00 02
  - response: 01 03 04 11 10 13 12 ; response: successful,
- (41139) Start DO(0) Pulse output
  - request: 01 06 04 72 00 02
  - response: 01 06 04 72 00 02 ; response: successful,

Wait seconds.....
- (41097~41098) read DO(0) pulse output count value
  - request: 01 03 04 48 00 02
  - response: 01 03 04 11 10 13 12 ; response: successful,
- (41139) Stop DO(0) Pulse output
  - request: 01 06 04 72 00 01
  - response: 01 06 04 72 00 01 ; response: successful,

◆ For *DIO Synchronization mode*:

- Ref. Appendix 12.7 “*DIO Synchronization (Mirror Local DI to Local/Remote DO)*”

◆ For Digital output channel delay output mode:

- (41453) set DO(0) to *High to Low delay mode* and DO(1) to *Low to High delay mode*
  - request: 01 10 05 AC 00 02 04 00 03 00 02
  - response: 01 10 05 AC 00 02 ; response: successful,
- (41644) Set DO(0) *high to low* delay output time (=4000ms).
  - request: 01 06 06 6B 1F 40 (unit: 0.5ms)
  - response: 01 06 06 6B 1F 40
- (41644) read DO(0) channel *high to low* delay output time (unit: 0.5ms).
  - request: 01 03 06 6B 00 01
  - response: 01 03 04 1F 40
- (41645) Set DO(1) *Low to High* delay output time (=3000ms).
  - request: 01 06 06 6C 17 70 (unit: 0.5ms)
  - response: 01 06 06 6C 17 70
- (41645) read DO(1) channel *Low to High* delay output time (unit: 0.5ms)
  - request: 01 03 06 6C 00 01
  - response: 01 03 02 17 70
- (00017) write digital output DO(0) to active(ON) and DO(1) to inactive(OFF).
  - request: 01 0F 00 10 00 02 01 01
  - response: 01 0F 00 10 00 02

wait 4 sec....., the DO(0) will be activated(ON) and the DO(1) to inactivated(OFF)

- (00017) write digital output DO(0) to inactive(OFF) and DO(1) to active(ON).

request: 01 0F 00 10 00 02 01 02

response: 01 0F 00 10 00 02

◆ DO channel "Low to High to Low" output for "Auto-Off Time Mode":

- (41455~41456) Set DO(2,3)to DO "Low to High to Low" for "Auto-Off Time" Mode.

request: 01 10 05 AE 00 02 04 00 06 00 06

response: 01 10 05 AE 00 02 ; response: successful,

- (41678) Set DO(2) output high delay timefor L->H->L (unit=0.5ms)

request: 01 06 06 8D 0F A1 ; DO(2)=0x0FA1(2000.5)ms

response: 01 06 06 8D 0F A1

- (41679) Set DO(3) output high delay timefor L->H->L (unit=0.5ms).

request: 01 06 06 8E 07 D1

response: 01 06 06 8E 07 D1

- (41678~41679) read DO(2,3) output high delay time for L->H->L (unit=0.5ms)

request: 01 03 06 8D 00 02

response: 01 03 04 0F A1 07 D1

- (00017) Write digital output DO(2,3) to active(ON).

request: 01 0F 00 12 00 02 01 03

response: 01 0F 00 12 00 02

*wait 2 sec....., the DO(2,3) will be inactivated(OFF)*

◆ DO channel "High to Low to Hig" output for "Auto-Off Time Mode":

- (41453~41454) set DO(0,1)to DO "High to Low to High" for "Auto-Off Time" Mode.

request: 01 10 05 AC 00 02 04 00 07 00 07

response: 01 10 05 AC 00 02 ; response: successful,

- (41691~41692) set DO(0,1) output low delay timefor H->L->H (unit=0.5ms) ,

request: 01 10 06 9B 00 02 04 0F A0 07 D0 ; DO(0)=0x0FA0(2000)ms, DO(1)=0x07D0(1000)ms

response: 01 10 06 9B 00 02

- (41691~41692) read DO(0,1) output low delay timefor H->L->H (unit=0.5ms) ,

request: 01 03 06 9B 00 02

response: 01 03 04 0F A0 07 D0

- (00017) write digital output DO(0,1) to inactive(OFF)

request: 01 0F 00 10 00 02 01 00

response: 01 0F 00 10 00 02

*wait 2 sec....., the DO(0,1) will be activated(ON)*

◆ For DI Counter Mode:

- (41485) Set DI(0) to Counter Mode.

request: 01 06 05 CC 00 01

response: 01 06 05 CC 00 01 ; response: successful,

- (00133) Clear DI(0) Counter Register.

request: 01 05 00 84 FF 00

response: 01 05 00 84 FF 00

- (00117) Star DI(0) Counter.

request: 01 05 00 74 FF 00

response: 01 05 00 74 FF 00

*wait for DI(0) input pulse.....*

- (41001~41002) Read DI(0) counter value (32-bit/channel)..

request: 01 03 03 E8 00 02

response: 01 03 04 00 0A 00 00 ; response: DI(0) counter value = 0x0000000A,

- (00225~00240) Read DI(0) counter overflow status(1-bit/channel).

request: 01 01 00 E0 00 08

response: 01 01 01 00 ; response: No overflow has occurred.

◆ Host watchdog timer:

- (45601) Set host communication timeout value to 30sec.

request: 01 06 15 E0 01 2C ; set timeout value = 30sec (unit=0.1s)

response: 01 06 15 E0 01 2C ; response: successful,

- (45602) Set host wdt timeout Safe DO(0~15) value.

request: 01 06 15 E1 00 13 ; set Safe DO(0,1,4) to active(1)

response: 01 06 15 E1 00 13

- (45604) Clear host watchdog timeout status.

request: 01 06 15 E3 FF 00 ; Write (0xFF00) to clear host watchdog timeout.

response: 01 06 15 E3 FF 00

- (45605) Enable host wdt.

request: 01 06 15 E4 FF 00 ; set host wdt Enable(x0FF00)

response: 01 06 15 E4 FF 00

*wait 8 sec.....*

- (45678) Informs all modules that the host is OK.

request: 01 06 16 2D 00 64 ; Informs all modules that the host is OK

response: ; no response

*wait 10 sec for host wdt timeout.....*

- (45604) Read Host watchdog timeout status (0xFF00 = host wdt timeout bit is set).  
request: 01 03 15 E3 00 01  
response: 01 03 02 FF 00 ; response: 0xFF00(the host wdt timeout bit is set),
- (45604) Write (0xFF00) to clear host watchdog timeout..  
request: 01 06 15 E3 FF 00  
response: 01 06 15 E3 FF 00 ; response: No overflow has occurred.
- (45605) Disable host wdt (clear host wdt timeout status before disable host wdt) .  
request: 01 06 15 E4 00 00 ; set host wdt disable(x00000)  
response: 01 06 15 E4 00 00

## Chapter 10 TCPDAQ Data Structure

### 10.1 Typedef struct \_AlarmInfo

```

typedef struct _AlarmInfo          //Alarm Event data structure
{
    u_cha      szIP[4];           //The IP address which cause the alarm change
    u_short    szDateTime[6];     //E.x [ 2001]/[09]/[23][10]:[12]:[34]

    // (Year/Month/Day Hour:Minute:Second)
    u_short    byChannel;         //The Channel of which cause the alarm change
    u_short    byAlarmType;      //0x00:AIO Low Alarm
                                    //0x01:AIO High Alarm
                                    //0x20:DIO Alarm
                                    //0xF0:Connection Alarm
    u_short    byAlarmStatus;    //0:Alarm ON to OFF, 1:Alarm OFF to ON
    u_short    wValue;           //Alarm value.For DIO, this value could be "0" or "1" means that "ON" or
                                    //"OFF"
                                    //For high or low alarm, this is the AIO value.
                                    //For connection lost, this value is '0'.
} _AlarmInfo;
    
```

### 10.2 Typedef struct \_StreamData

```

Typedef struct _StreamData        //Stream Event data structure
{
    u_char     szIP[4];           //The IP address which send the stream datae
    u_short    szDateTime[6];     //E.x [ 2001]/[09]/[23] [10]:[12]:[34]
                                    // (Year/Month/Day Hour:Minute:Second)
    u_short    DIN;              //Digital input data (DI#0~DI#15)
    u_short    DOUT;             //Digital output data (DO#0~DO#15)
    u_short    wData[32];        //Digital input Counter (Each channel occupys 4 Byte)
} _StreamData;
    
```

### 10.3 Typedef struct ModuleInfo

```

typedef struct ModuleInfo         // Used For Scan_Online_Modules(..)
{
    u_char     szIP[4];          //IP address
    u_char     szGate[4];       //Gateway
    u_char     szMask[4];       //Submask
    u_char     szDHCP;          //DHCP status 01=enable, 00=disable
    u_char     szID;            //Module ID number
    u_char     szMacAddr[6];    //MAC address of module
    u_short    szModuleNo;      //Module name
    u_char     szBuffer[12];    //Buffer reserved for TCPDAQ.DLL
} ModuleInfo;
    
```

### 10.4 Typedef struct ModuleData

```

typedef struct ModuleData        //Used for function TCP_ReadAllDataFromModule (..)
{
    u_char     Din[16];         //Digital input data (DI#0~DI#15),available for EXPERTDAQ9050/51/52
    u_char     Dout[16];       //Digital output data (DO#0~DO#15),available for
                                    //EXPERTDAQ9050/51/52/17/19
    
```

```
    u_char      DiLatch[16];           //Digital input latch status (DI#0~DI#15),available for
EXPERTDAQ9050/51/52
    long        DiCounter[16];        //Digital input counter value (DI#0~DI#15),available for
EXPERTDAQ9050/51/52
    double      AiNormalValue[16];    //Analog Input value(AI#0~AI#15),available for EXPERTDAQ9015/17/19
    double      AiMaxValue[16];      //Analog maximum value(AI#0~AI#15),available for
EXPERTDAQ9015/17/19
    double      AiMinValue[16];      //Analog minimum value(AI#0~AI#15),available for
EXPERTDAQ9015/17/19
    u_char      AiHighAlarm[16];     //Analog high alarm status(AI#0~AI#15),available for
EXPERTDAQ9015/17/19
    u_char      AiLowAlarm[16];      //Analog low alarm status(AI#0~AI#15),available for
EXPERTDAQ9015/17/19
    u_char      AiChannelType[16];   //Analog channel Type, available for EXPERTDAQ9015/17/19
    u_char      AiBurnOut[16];       //Analog channel burn out status,available for EXPERTDAQ9019/15 only
    double      CJCTemperature;      //Cold junction temperature,available for EXPERTDAQ9019 only
} ModuleData;
```

## Chapter 11 EX-92xx-MTCP Series Web Server

### 11.1 What is TCPDAQ Web Server?

EX-92xx-MTCP Series I/O modules all features built-in web server. Remote computer or devices can monitor and control I/O status on EX-92xx-MTCP Series modules remotely through web browser. There is default built-in web page on EX-92xx-MTCP Series modules.

To use your computer to browse the web page on EX-92xx-MTCP Series module, you can simply type the IP address to connect to your EX-92xx-MTCP Series module in web browser. There will be one dialog window asking you to enter the password. After you have typed the correct password, you can start to monitor or control I/O on EX-92xx-MTCP Series modules.

**Notice:** Please use Windows Internet Explorer 5.5 (IE 5.5 or later version)

### 11.2 Home Page

- ◆ Type the **IP address** in the web browser (example: http:\\192.168.0.51)
- ◆ The home page will pop-up in the browser window to ask you to enter the password



- ◆ Enter the correct password and click send button to verify the password. If the password is not correct, a warning message box will show up to remain you to reenter the password



- ◆ If the password is correct, the module monitoring page will pop up in the web browser.

11.3 Module monitoring page

11.3.1 EX-9250A monitoring page

**EX9050-MTCP Acquisition Web (v1.1)**

Receiving:

| Digital Input |        |                      |              | Digital Output |        |  |
|---------------|--------|----------------------|--------------|----------------|--------|--|
| Channel       | Status | Counts/Latch         | Mode         | Channel        | Status | DO Setting   |
| DI 0          |        | <input type="text"/> | Direct input | DO 0           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 1          |        | <input type="text"/> | Direct input | DO 1           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 2          |        | <input type="text"/> | Direct input | DO 2           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 3          |        | <input type="text"/> | Direct input | DO 3           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 4          |        | <input type="text"/> | Direct input | DO 4           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 5          |        | <input type="text"/> | Direct input | DO 5           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 6          |        | <input type="text"/> | Direct input |                |        |  |
| DI 7          |        | <input type="text"/> | Direct input |                |        |  |
| DI 8          |        | <input type="text"/> | Direct input |                |        |  |
| DI 9          |        | <input type="text"/> | Direct input |                |        |  |
| DI 10         |        | <input type="text"/> | Direct input |                |        |  |
| DI 11         |        | <input type="text"/> | Direct input |                |        |  |

OFF
 ON

Update Time Interval:  msec

- Channel : Channel number of digital input or output
- Status : Current input or output status
- Count/Latch : Counter value or latch status of digital input which functions at "Counter" or "Latch" mode
- Mode : Channel operating mode
- DO Setting : Set digital output on or off
- Time interval : I/O status update time interval

11.3.2 EX-9251-MTCP monitoring page

**EX9051-MTCP Acquisition Web (v1.1)**

Running:

| Digital Input |        |                      |               | Digital Output |        |  |
|---------------|--------|----------------------|---------------|----------------|--------|--|
| Channel       | Status | Counts/Latch         | Mode          | Channel        | Status | DO Setting   |
| DI 0          |        | <input type="text"/> | Direct input  | DO 0           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 1          |        | <input type="text"/> | Direct input  | DO 1           |        | <input type="button" value="ON"/> <input type="button" value="OFF"/> |
| DI 2          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 3          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 4          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 5          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 6          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 7          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 8          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 9          |        | <input type="text"/> | Direct input  |                |        |  |
| DI 10         |        | <input type="text"/> | Direct input  |                |        |  |
| DI 11         |        | <input type="text"/> | Direct input  |                |        |  |
| COUNTER 0     |        | 0                    | Counter Input |                |        |  |
| COUNTER 1     |        | 0                    | Counter Input |                |        |  |

OFF ON
Update Time Interval:  msec

- Channel : Channel number of digital input or output
- Status : Current input or output status
- Count/Latch : Counter value or latch status of digital input which functions at "Counter" mode or "Latch" mode
- Mode : Channel operating mode
- DO Setting : Set digital output on or off
- Time interval : I/O status update time interval

11.3.3 EX-9252 monitoring page

EX9250-MTCP Web Page

● Running

| Digital Input |   |       | Digital Output   |        |  |
|---------------|---|-------|--|--------|--|
| DI Channel    | Status                                    | Count | DO Channel   | Status | DO Setting   |
| DI CH 00      | Low                                       | 0     | DO CH 00   | Low    | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 01      | Low                                       | 0     | DO CH 01   | Open   | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 02      | Low                                       | 0     | DO CH 02   | Low    | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 03      | Low                                       | 0     | DO CH 03   | Open   | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 04      | Low                                       | 0     | DO CH 04   | Open   | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 05      | Low                                       | 0     | DO CH 05   | Open   | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 06      | Low                                       | 0     |  |        | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 07      | Low                                       | 0     |  |        | <input type="checkbox"/> ON <input type="checkbox"/> OFF |
| DI CH 08      | Low                                       | 0     | Update Time Interval   |        |  |
| DI CH 09      | Low                                       | 0     | Update Time Interval: <input style="width: 50px;" type="text" value="500"/> msec <input type="button" value="Set"/>            |        |  |
|               | <input style="width: 50px;" type="text"/> | 0     |  |        |  |
|               | <input style="width: 50px;" type="text"/> | 0     |  |        |  |
|               | <input style="width: 50px;" type="text"/> | 0     |  |        |  |
|               | <input style="width: 50px;" type="text"/> | 0     | Reset Count  |        |  |
|               | <input style="width: 50px;" type="text"/> | 0     | <input style="background-color: red; color: white; padding: 2px 5px;" type="button" value="Reset Count"/> Clear all DI counter |        |  |
|               | <input style="width: 50px;" type="text"/> | 0     |  |        |  |
|               | <input style="width: 50px;" type="text"/> | 0     |  |        |  |

- Channel : Channel number of digital input or output
- Status : Current input or output status
- Count/Latch : Counter value or latch status of digital input which functions at "Counter" mode or "Latch" mode
- Mode : Channel operating mode
- DO Setting : Set digital output on or off
- Time interval : I/O status update time interval

**Chapter 12 Appendix**


**12.1 INIT\* switch operation**

The EX-92xx-MTCP Series “INIT\*mode” has two purposes, one for reading module current configuration, and another for configuring the module **IP Address, Subnet Mask, and Gateway**.

◆ Reading module current configuration

Each EXPERTDAQ module has a built-in EEPROM which is used to store the configuration information such as address ID, type, DIO mode etc.. If the user unfurtunately forget the configuration of the module. User may use a special mode called “INIT\* mode” to resolve the problem When the module is set to “INIT\* mode”, the default settings are IP Address, Subnet Mask, and Default Gateway (**10.0.0.1, 255.255.255.0 and 10.0.0.1**)

◆ Originally, the INIT mode is accessed by connecting the INIT\* terminal to the GND terminal. New EX-92xx-MTCP Series modules have the INIT switch located on the rear side of the module to allow easier access to the INIT mode. For these modules, INIT mode is accessed by sliding the INIT switch to the Init position as shown below.

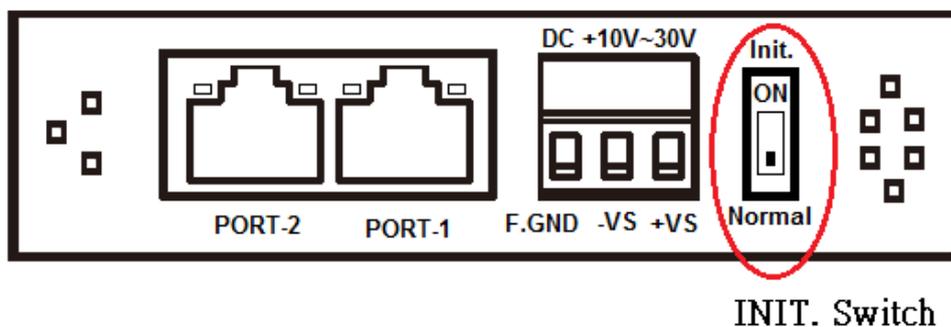

Top View

◆ The following steps show you how to enable INIT\* mode and read the current configuration:

1. Power off the module.
2. Sliding the INIT switch to the “Init” position.
3. Power on the module.
4. Start up the Windows Utility, it will search all EX-92xx-MTCP Series I/O modules on the host PC’ to read the current configuration stored in the EEPROM and set new **IP Address, Subnet Mask, and Default Gateway**,
5. Power off the module again
6. Sliding the INIT switch to the “Normal” position.

◆ Factory default settings:

1. IP Address : 10.0.0.1
2. Subnet Mask : 255.255.255.0
3. Gateway : 10.0.0.1
4. DHCP : Disabled
5. Web Server : Disabled
6. Module ID : 00
7. Password : 00000000

## 12.2 Module Status

Power-On Reset will let all output go to Power-On Value. The module may accept the host's command to change the output value. Host Watchdog Timeout will let all digital output go to Safe Value if the host watchdog timeout flag is set, and the output command will be ignored. The module's LED will go to flash and user must reset the module status via command to restore normal operation.

## 12.3 Dual Watchdog Operation

### Dual Watchdog = Module Watchdog + Host Watchdog

The Module Watchdog is a hardware reset circuit to monitor the module's operating status. While working in harsh or noisy environment, the module may be down by the external signal. The circuit may let the module to work continues and never halt. The Host Watchdog is a software function to monitor the host's operating status. Its purpose is to prevent the network/communication from problem or host halt. While the timeout occurred, the module will turn the all output into safe state to prevent from unexpected problem of controlled target. The E-4200 module with Dual Watchdog may let the control system more reliable and stable.

## 12.4 Reset Status

The reset status of a module is set when the module is powered-on or when the module is reset by the module watchdog. It is cleared after the responding of the first \$AA5 command. This can be used to check whether the module had been reset. When the \$AA5 command responds that the reset status is cleared, that means the module has not been reset since the last \$AA5 command was sent. When the \$AA5 command responds that the reset status is set and it is not the first time \$AA5 command is sent, it means the module has been reset and the digital output value had been changed to the power-on value.

## 12.5 Input counter and Input latch

### Input counter:

Each input channel has internal counter used to software count the state change (*falling edge*) of input signal ( max. 300Hz ). The counting value can be read and cleared by sending "Read digital input counter command" or "Clear digital input counter command".

### Input latch:

Each input channel has internal latch which is used to latch the pulse signal from the input. This latched state can be read by sending "Read latched digital input" command and cleared by sending "Clear latched digital input" command. For example, if the digital input is connected to a key switch. The key switch is a pulse signal. The user may lose the strike information by sending command \$AA6. The digital input latch can latch the pulse and ready be read by sending "Read latched digital input" command. If the latched state=1 means that there is a key strike occurred.

## 12.6 Power-on & Safe value

### Power-on value:

Power-on value is used to set the module default output value when the module is turned-on or watch dog timeout reset. This function is especially importance in some application where the specific initial output states are required User can set power on value by sending *Set power-on/safe value* command

### Safe value:

Safe value are used to set the module outputs into the specific values when Host watchdog timeout If The host watchdog timer is enabled by sending *Set host watchdog timeout value*, the host should send *Host OK* command periodically within Timeout value to refresh the timer, otherwise the module will be forced to safety state.

**12.7 DIO Synchronization (Mirror Local DI to Local/Remote DO)**


EX-92xx-MTCP Series Series modules also provide a DIO Synchronization function. A single digital output channel(or remote device) can be activated (1 or 0) dependent on the digital input channels value. When the specific DI channels value changed from "match" to "mismatch" (or "mismatch" to "match")DI mask pattern, the corresponding DO(or remote device) will be set to active state(1 or 0) dependent on the DO setting.

**12.7.1 The DIO Synchronization is divided into two modes:**

1. DI match DO latch Mode.
2. DI mismatch DO latch Mode.


**12.7.2 DIO Synchronization –DI match DO latch mode**

When DI input value “match” DI mask pattern, the specific single digital output channel will be activated (1 or 0) and latched.

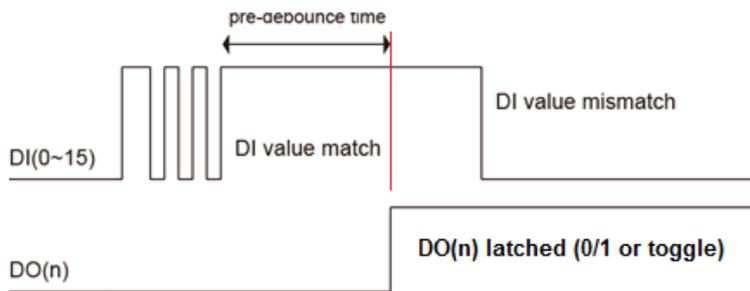

◆ **Example : (DI match DO latch mode & DO remote Mode)**

Assume DI channel 0,3 are monitored(the DI mask pattern is XXXXXXXXXXXX1XX0, DO remote mode (IP=192.168.0.92) and Auto Run Enable/DO Remote Mode, When DI input ch(0)=0 and ch(3)=1 (The DI pre-debounce time is 100 msec), the corresponding DO(0) will be set to activate(1).

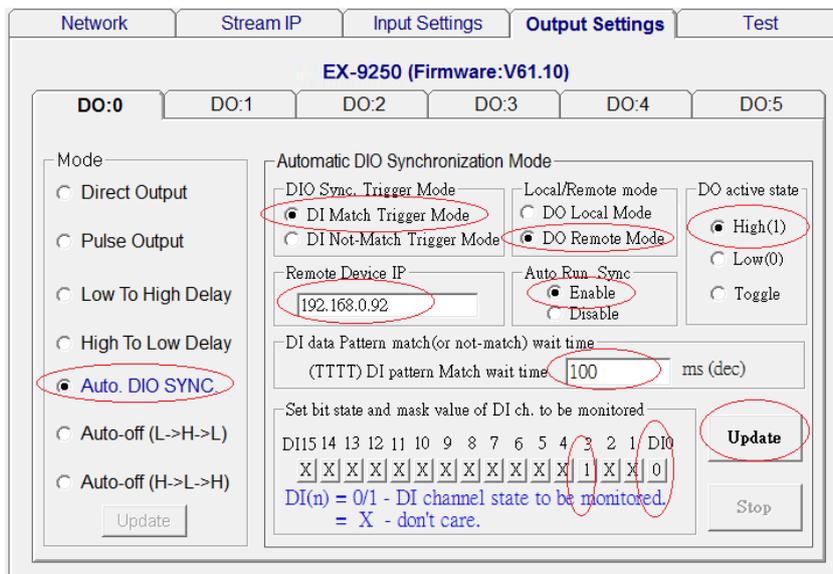

◆ **Example (using ASCII command):** DI match DO latch mode(for remote module )

When the specific DI channels (DI(0)=0, DI(3)=1) , the corresponding DO(0) of **remote module** will be set to ON(1). Assume DI pre-debounce time=0x0064(100)ms.

1. Set DO(0) to " DIO SYNC. Mode " (Ref. \$AACONNDD)  
 command: \$01CO0004(cr)  
 response: !01(cr) ; valid
  
2. Assume DI(0)=0 and DI(3)=1 are monitored and DI(1,2,4,5,6..)=X (don't care).  
 R = 1 - remote Mode,(Local DI->Remote DO) .  
 P = 1 - enable Auto Run(Start) DIO Synchronization operation when power-on.  
 S = 1 - set digital output to active state (=1) when DI input data match DI mask pattern  
 (Ref. \$AAYM5CRPSTTTT (data) )  
 command: \$01YM501110064XXXXXXXXXXXX1XX0(cr)  
 response: !01(cr) ; valid
  
3. Set the remote module DO(0) to inactive state (OFF). (Ref. @AA6ONSS)
  
4. Start and wait for DI(0,3) DI pattern match.

◆ **Example (using ASCII command):** DI match DO latch mode(for local module )

When the specific DI channels (DI(0)=0, DI(3)=1) , the corresponding DO(0) of **local module** will be set to ON(1).  
 Assume DI pre-debounce time=0x0064(100)ms.

1. Set DO(0) to " DIO SYNC. Mode " (Ref. \$AACONNDD)  
 command: \$01CO0004(cr)  
 response: !01(cr) ; valid
  
2. Assume DI(0)=0 and DI(3)=1 are monitored and DI(1,2,4,5,6..)=X (don't care).  
 R = 0 - Local Mode,(Local DI->Local DO) .  
 P = 1 - enable Auto Run(Start) DIO Synchronization operation when power-on.  
 S = 1 - set digital output to active state (=1) when DI input data match DI mask pattern  
 (Ref. \$AAYM5CRPSTTTT (data) )  
 command: \$01YM500110064XXXXXXXXXXXX1XX0(cr)  
 response: !01(cr) ; valid
  
3. Stop (S=0) DIO Sync. Operation on (Ref. \$AAYMRCS)  
 command: \$01YMR0(cr)  
 response: !01(cr) ; valid
  
4. Set the Local module DO(0) to inactive state (OFF). (Ref. @AA6ONSS)  
 command: @016O000(cr)  
 response: !01(cr) ; valid
  
5. Start/Run (S=1) DIO Sync. Operation on (Ref. \$AAYMRCS)  
 command: \$01YMR01(cr)  
 response: !01(cr) ; valid
  
6. Start and wait for DI(0,3) DI pattern match.

**Ref.** \$AACONNDD, @AA6ONSS, \$AAY6MRCS, \$AAY6MC, \$AAY6MS,\$AAYM3CPSTTTT(data)

◆ **Example (using Modbus command) :** DI match DO latch mode (for remote module)

When the specific DI channels (DI(0)=0, DI(3)=1), the corresponding DO(0) of remote module will be set to ON(1). Assume DI pre-debounce time=0x0064(100)ms.

- (41453) Set DO(0) mode to "DIO SYNC. Mode"

Request: 01 06 A1 EC 00 04

Response: 01 06 A1 EC 00 04 ; valid
- (41580) Set DO(0) to "DI Match DO latch mode", enable auto run when power-on, DO active output =1, and remote mode.

Request: 01 06 A2 6B 00 1E

Response: 01 06 A2 6B 00 0E ; valid
- (41564) Set DI channels DI(3,0) to be monitored and DI mask pattern

high order word : = 0x0008 = (0000 0000 0000 1000) ; DI mask pattern

low order word : = 0x0009 = (0000 0000 0000 1001) ; DI channels to be monitored ;(1=monitored DI chn,0=not monitored DI chn.)

Request: 01 10 A2 5B 00 02 04 00 08 00 09


Response: 01 10 A2 5B 00 02 ; valid
- (41628) Set DI debounce time to=100(0x64)ms

Request: 01 10 A2 9B 00 01 02 00 64

Response: 01 10 A2 AE 00 02 ; valid


### 12.7.3 DIO Synchronization –DI mismatch DO latch mode

A single digital output channel is activated(1 or 0) dependent on the specific DI value, When the specific DI channels status mismatch DI mask pattern, the corresponding DO will be set to active state(1 or 0)

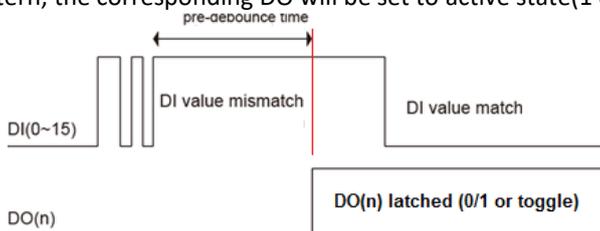

**Example :** (DI mismatch DO latch mode & DO remote Mode)

Assume DI channel 5,6 are monitored(the DI mask pattern is XXXXXXXX10XXXX), DO remote mode (IP=192.168.0.92) and Auto Run Enable/DO Remote Mode, When mismatch DI input ch(0)=1 and ch(2)=0 (The DI pre-debounce time is 150 msec), the corresponding DO(0) will be set to inactivate(0).

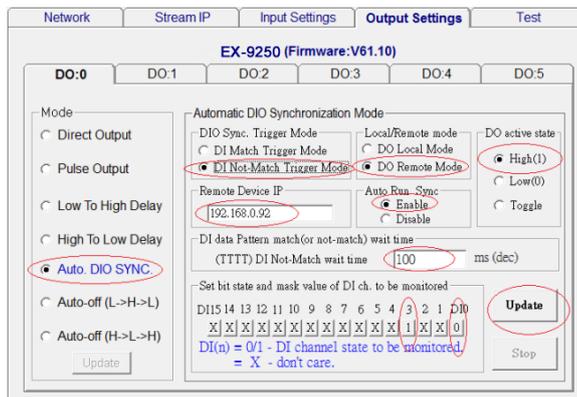


## 12.8 High/Low delay output mode

EX-92xx-MTCP Series Series modules supports **high-to-low and low-to-high delay** output function


### 12.8.1 Low to High Delay output

When you choose *Low to High* delay mode, it is almost the same as choosing the DO direct output mode. The only difference is that there will be certain time delay when the output value changes from logic low to logic high. You can define the delay time by entering its value into the delay time text box in the setting area. After you complete the setting, click the "Apply" button. Then you can control the digital output value by the DO button and see its current value by the DO status LED display at the top of the module Display area.

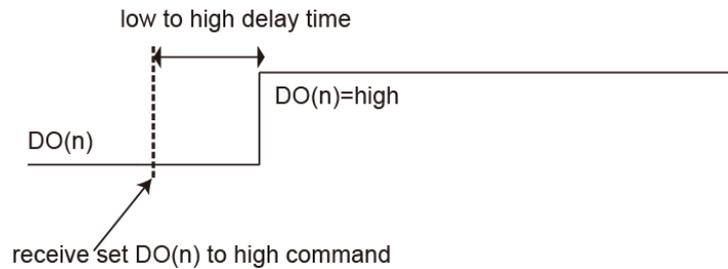

### 12.8.2 High to Low Delay output


When you choose *High to Low* delay mode, it is almost the same as choosing the DO direct output mode. The only difference is that there will be certain time delay when the output value changes from logic high to logic low. You can define the delay time by entering its value into the Delay time text box in the Setting area. After you complete the setting, click the Apply button. Then you can control the digital output value by the DO button and see its current value by the DO status LED display at the top of the module Display area.

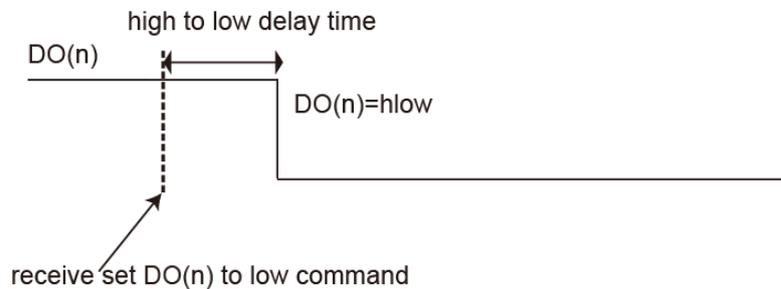


### 12.9 DO Auto-Off Time Mode

This function is used to force the specific DO channel to work as a monostable operation. After a certain period of time, the DO returns to the stable state until another triggering command is applied.

◆ **Low to High DO(n) pulse output**

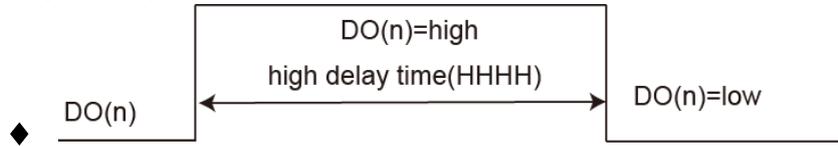

◆ **High to Low DO(n) pulse output**

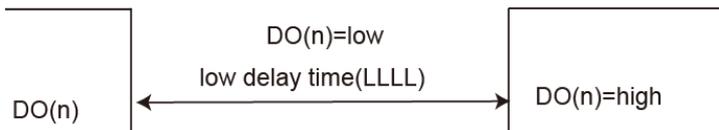

◆ **ASCII command:**

1. \$AACONNDD ;Set DO(n) to DO Auto-Off Time Mode
2. \$AA9DNNHHHLLLL ;Set high /low delay width of DO(n)
3. #AA1NDD ; Write DO channel to active

**Example:** Set the channel-0 of DO to active and the channel-0 of D/O will be auto-off(inactive) after 3 sec.

1. \$01CO0006 - Se to DO(0) Auto-Off Time Mode for DO "Low->High->Low.  
(output low is active (ON), output high/open is inactive)
2. \$019D0017700001 - Set DO High delay time(HHHH=3000ms) and Low delay time(LLLL= 0.5ms).  
(For " Low->High->Low Auto-Off Time mode" LLLL always "0001")
3. #011001 - Write DO channel(0) to active  
wait DO auto-off time (3sec).....,  
...
4. the DO channel(0) auto-off from active to inactive.

**Example:** Set the channel-1 of DO to inactive and the channel-1 of D/O will be auto-off(active) after 3 sec.

1. \$01CO0107 - Se to DO(1) Auto-Off Time Mode for DO "High->Low->High.  
(output low is active (ON), output high/open is inactive)
2. \$019D0100011770 - Set DO High delay time(HHHH=0.5ms) and Low delay time(LLLL= 3000ms).  
(For " High->Low->High Auto-Off Time mode" HHHH always "0001")
3. #011100 - Write DO channel(1) to inactive  
wait DO auto-off time (3sec).....,  
...
4. the DO channel(1) auto-off from inactive to active.

◆ **Modbus rtu command:**

1. X+1453 ~ X+1484 ;Set DO(0~31) to low to high delay mode(=2) or high to low delay mode(=3)
2. X+1711 ~ X+1774 ;Set high/low delay time of the specific DO(n)
3. X+1775 ~ X+1806 ;Start auto-off time Mode operation